


**RIVAL**

**4x4 ACCESSORIES**

# INSTALLATION

## FORD RANGER 2022+ (NEXT-GEN)

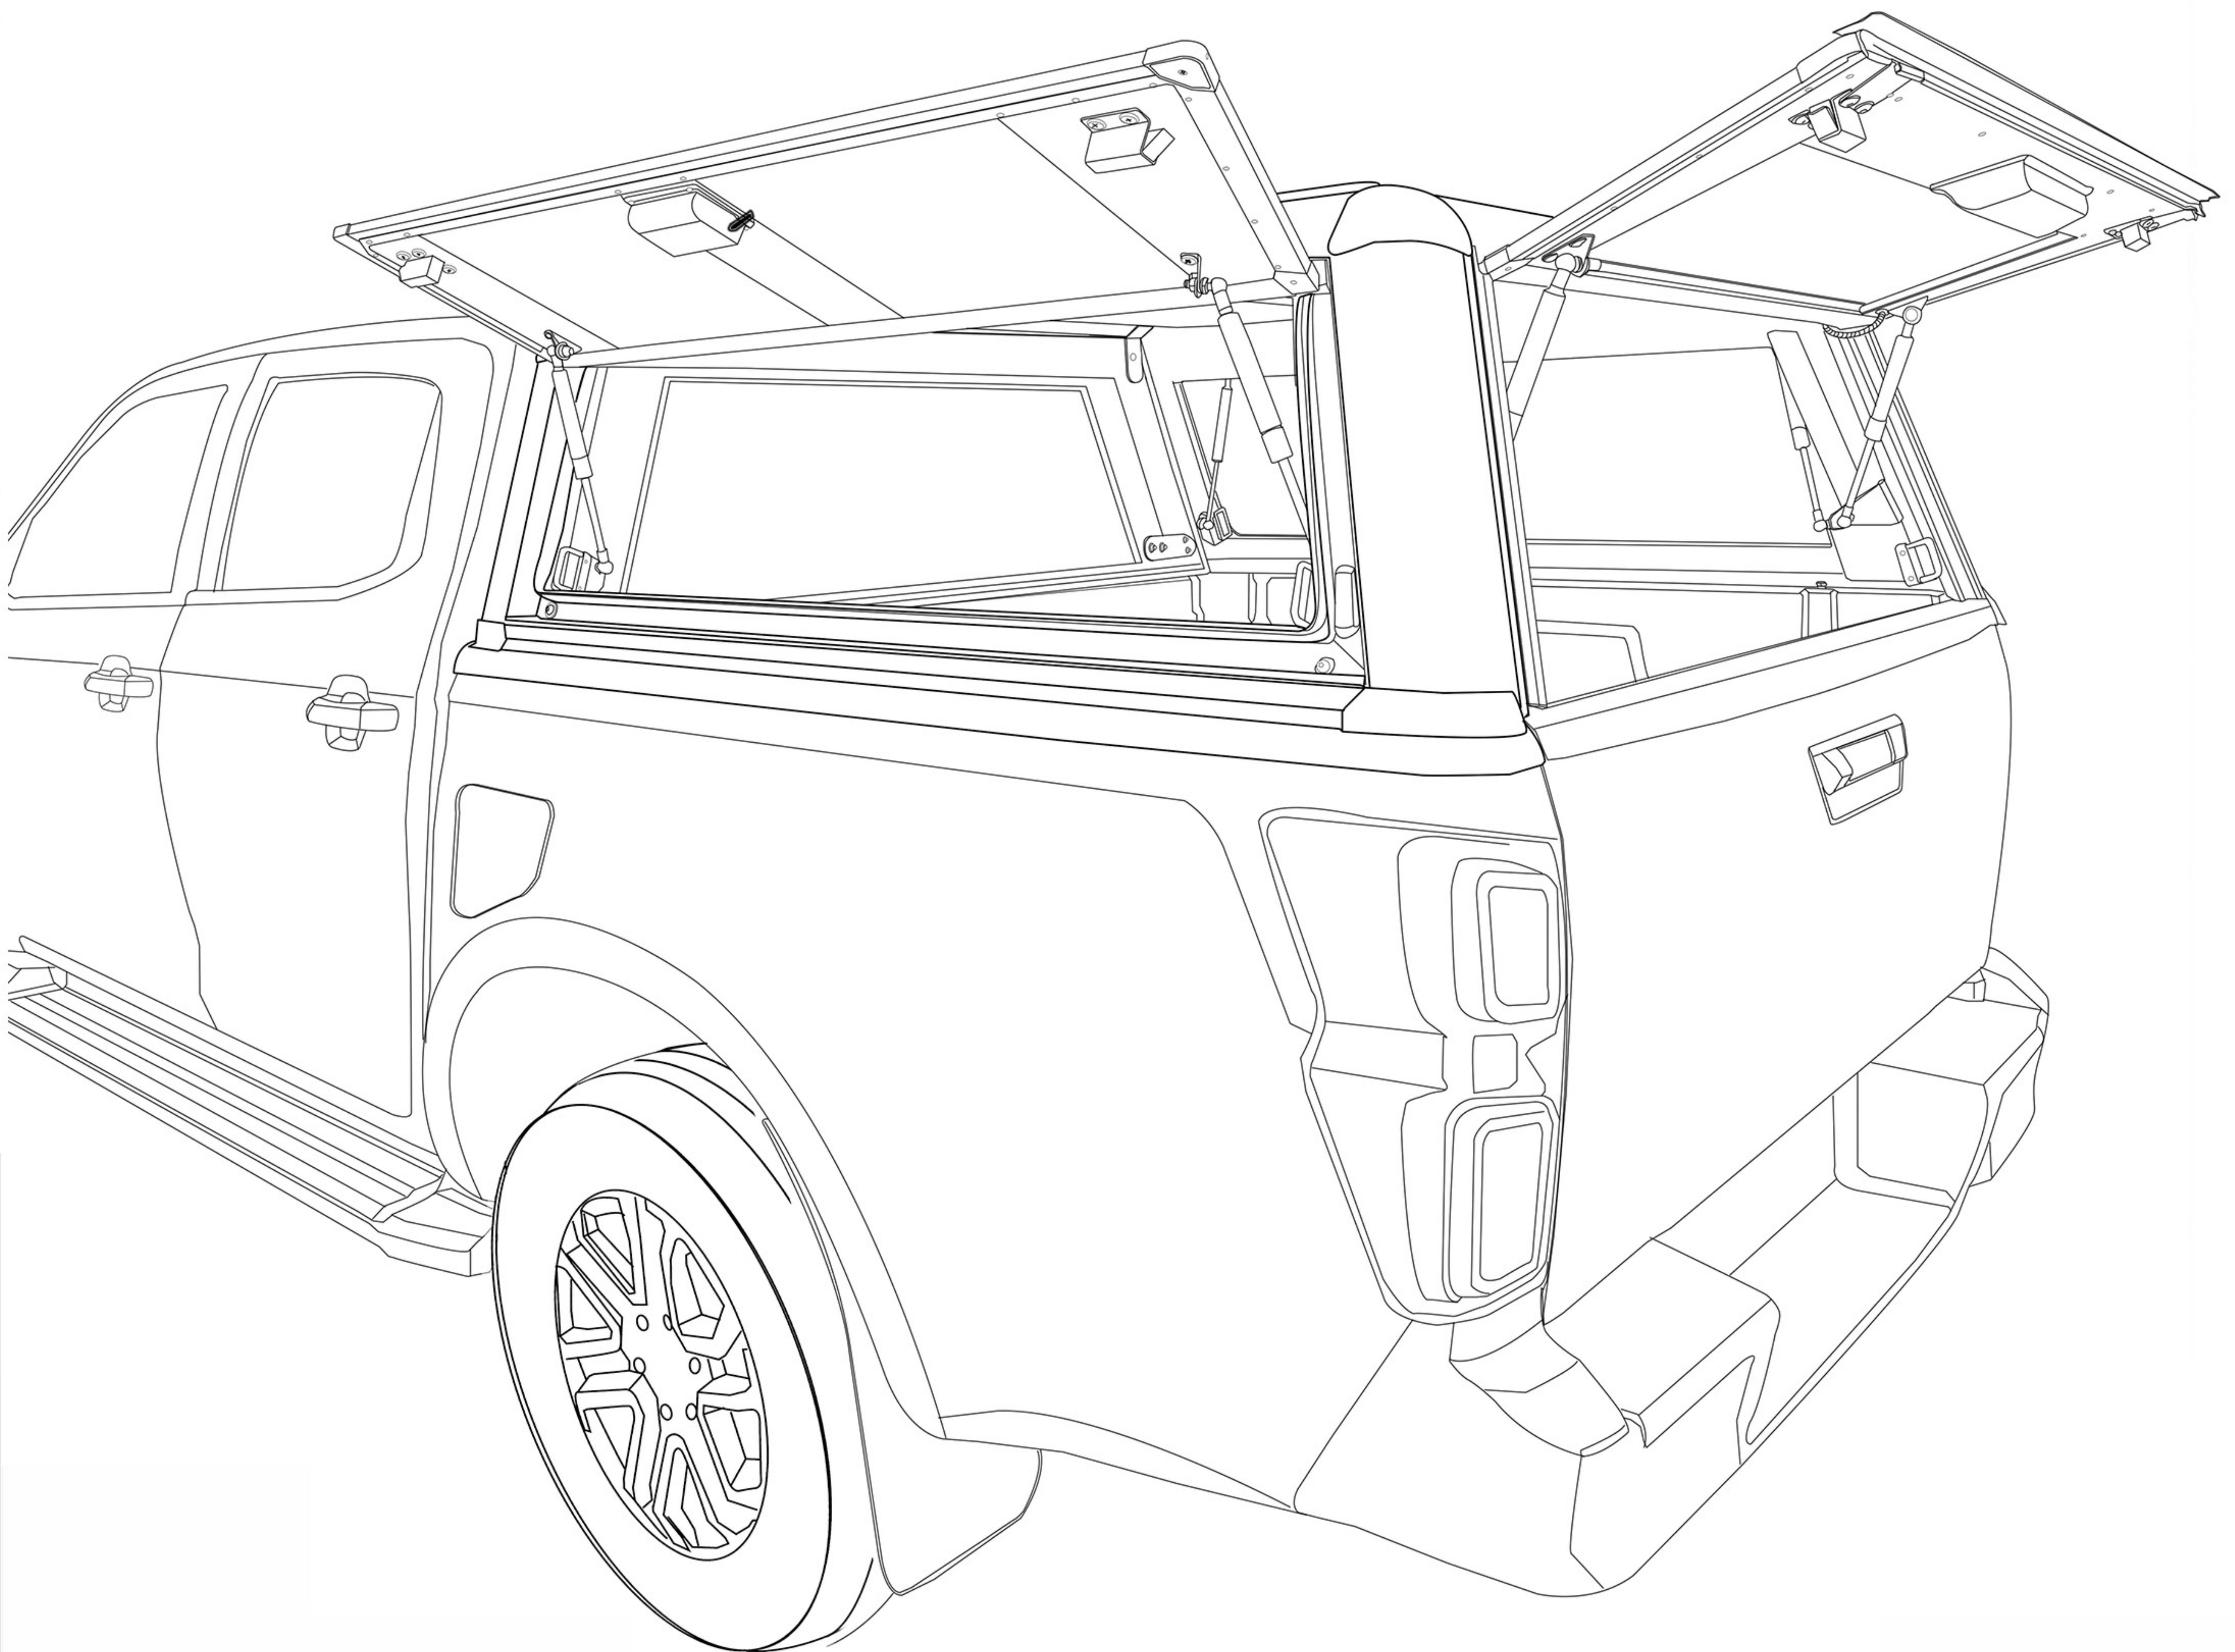


**Patent Pending Worldwide**




## Part list

### 1st carton

roof panel

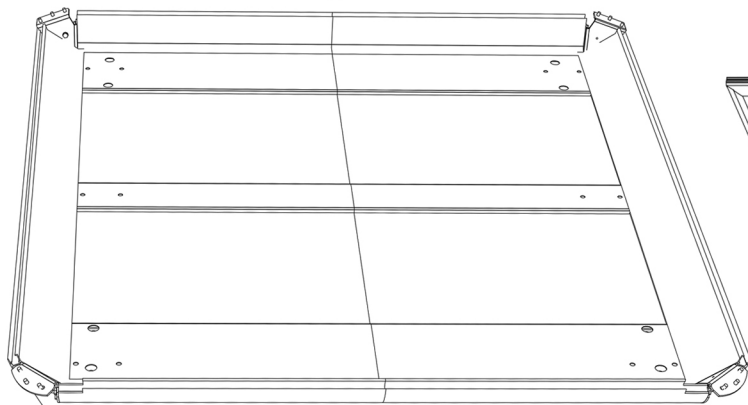


front panel

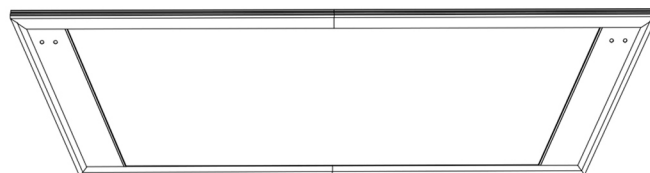


### 2nd carton

side panel L,R

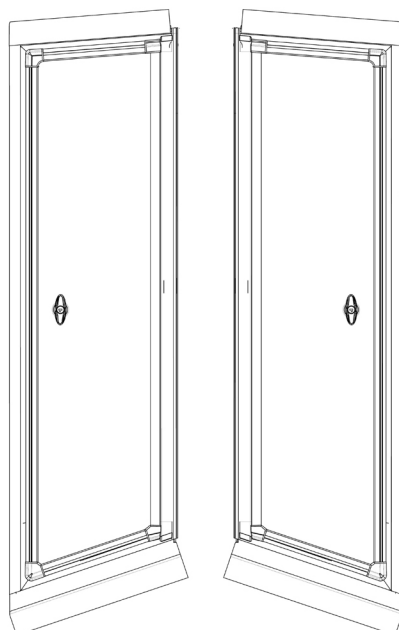


kit box

no.3

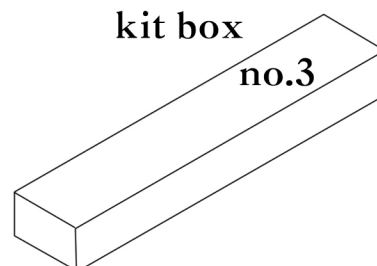



rear door

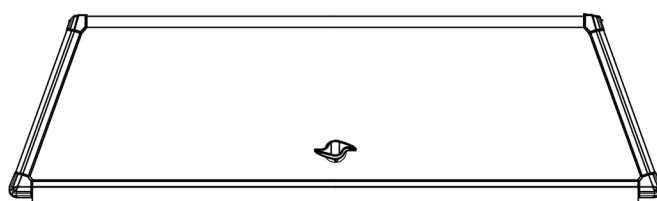

kit box

no.1


no.2

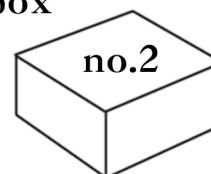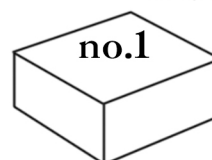



## KIT BOX NO.1

### 1. Rear door kit page 3

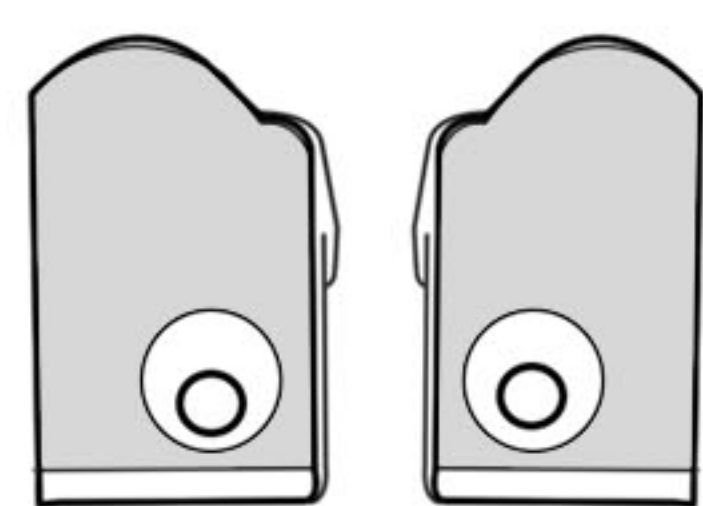


Flat Head Tapping Screw 7x1/2 = 2 pcs.



Pan Head Tapping Screw 6x3/8 = 3 pcs.

### 2. Front panel bracket page 5

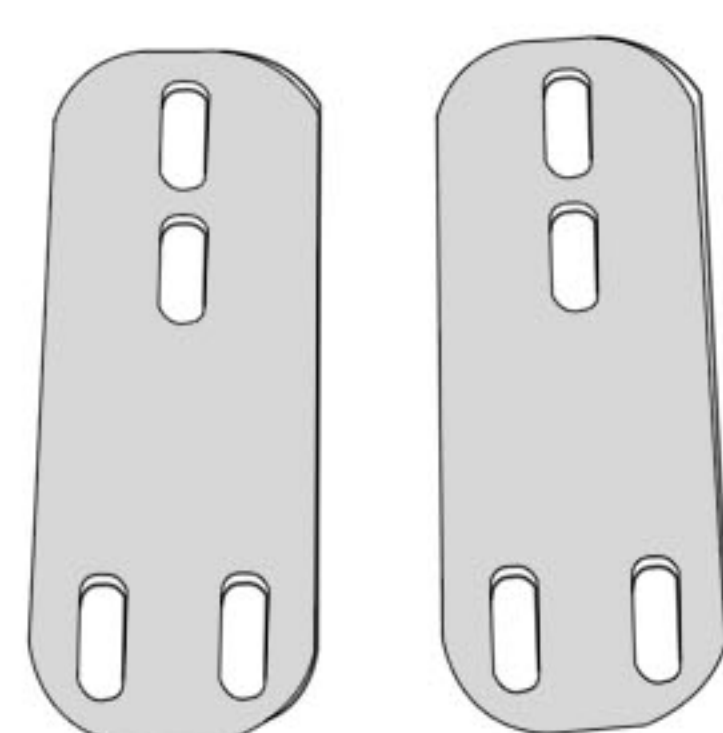


Socket pan head bolt M8x12 = 4 set



Hex bolt M6x15 = 4 set

### 3. Silicone corner cover page 6,8

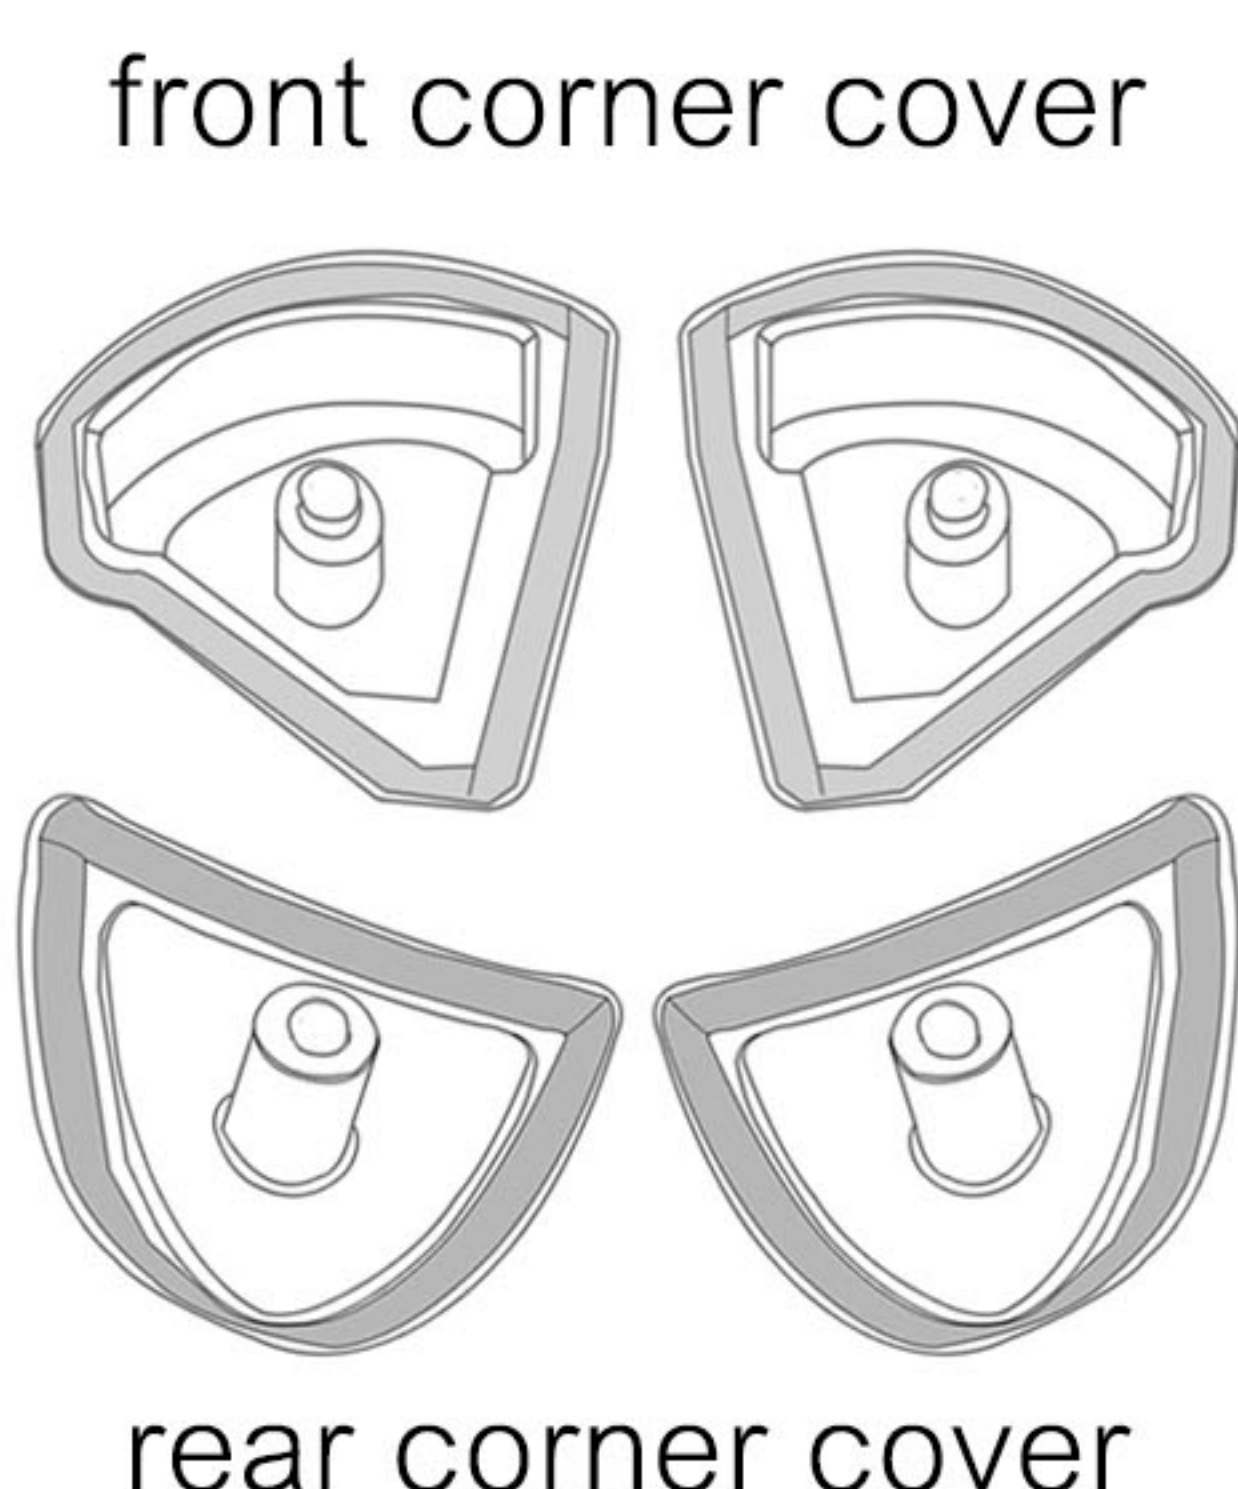

Hex bolt M8x20 grade 8.8 = 8 set



Pan Head Bolt M6x10 = 4 set

### 4. Key





## KIT BOX NO.2

### 1. Clamp

page 9  
page 10


(bed with C channel)

(for bed w/out C channel)

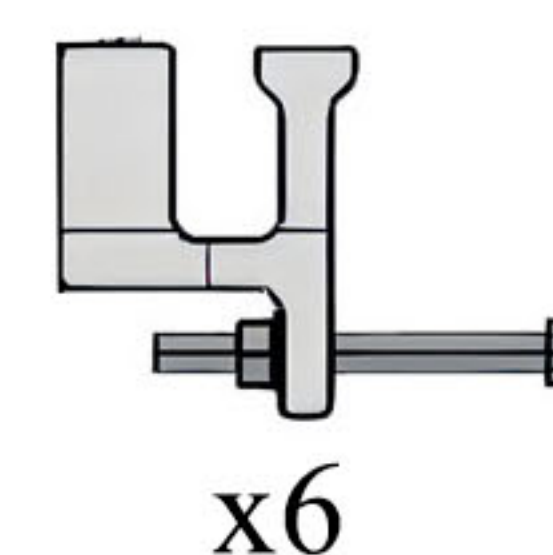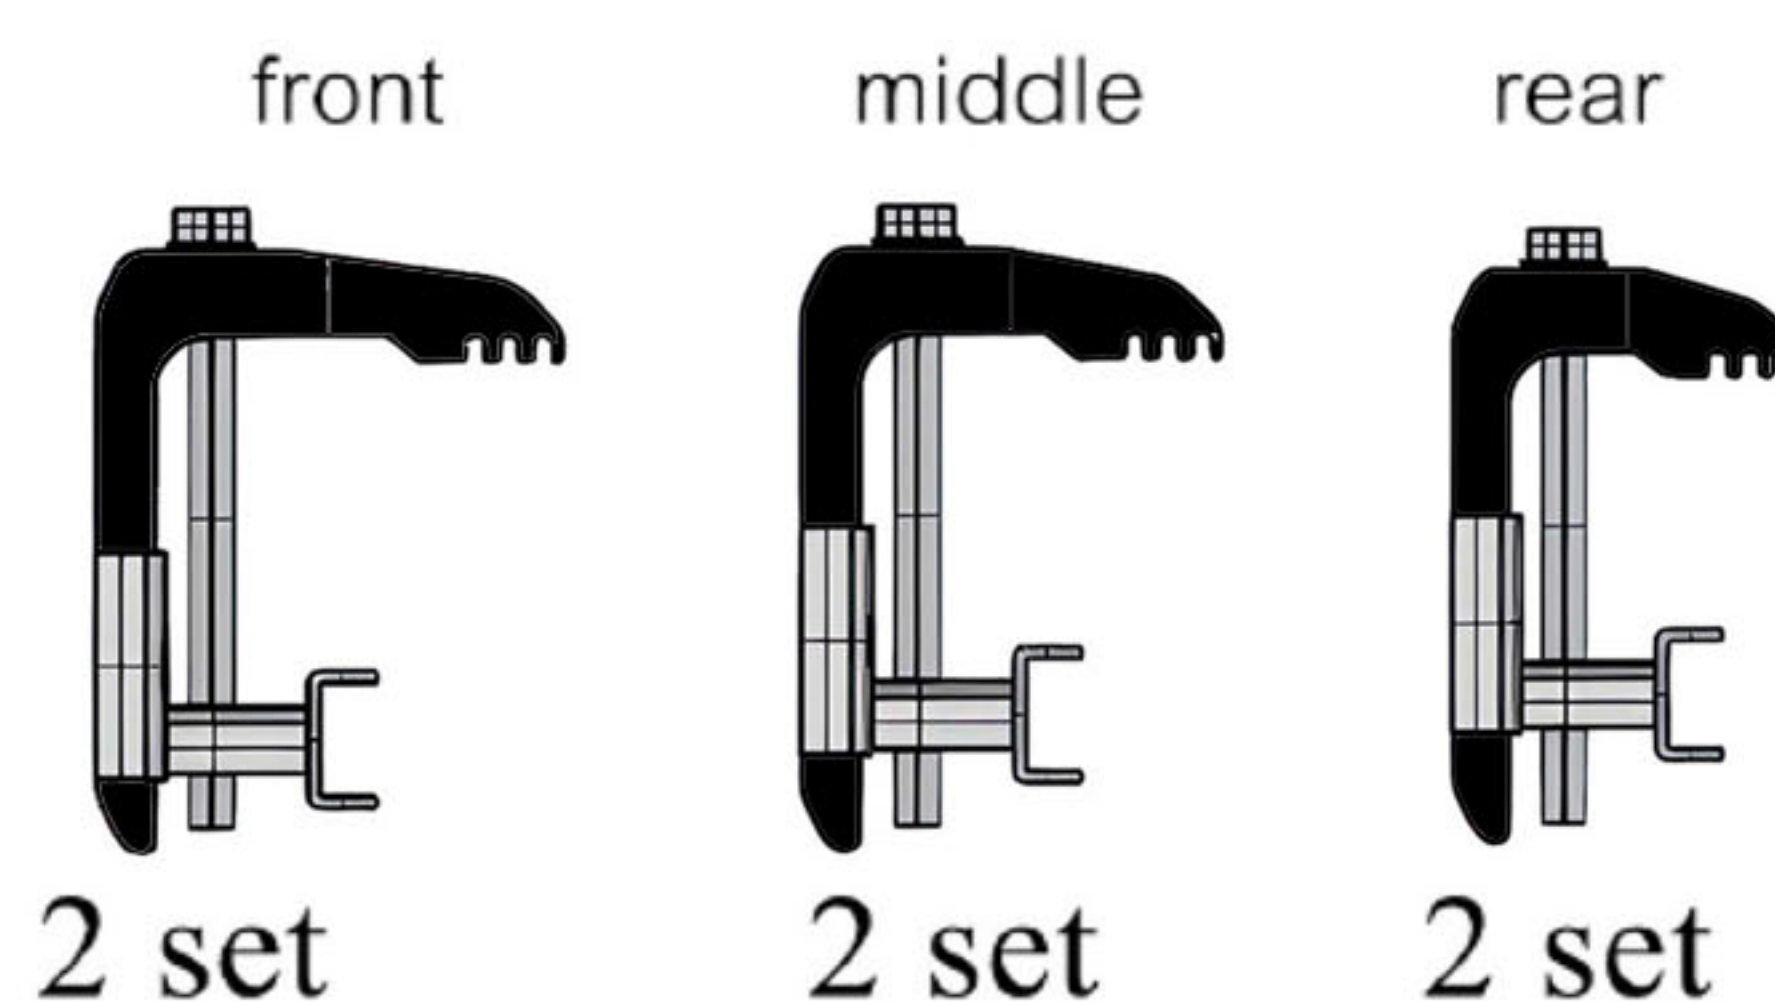

## KIT BOX NO.3

### 1. Water channel page 7

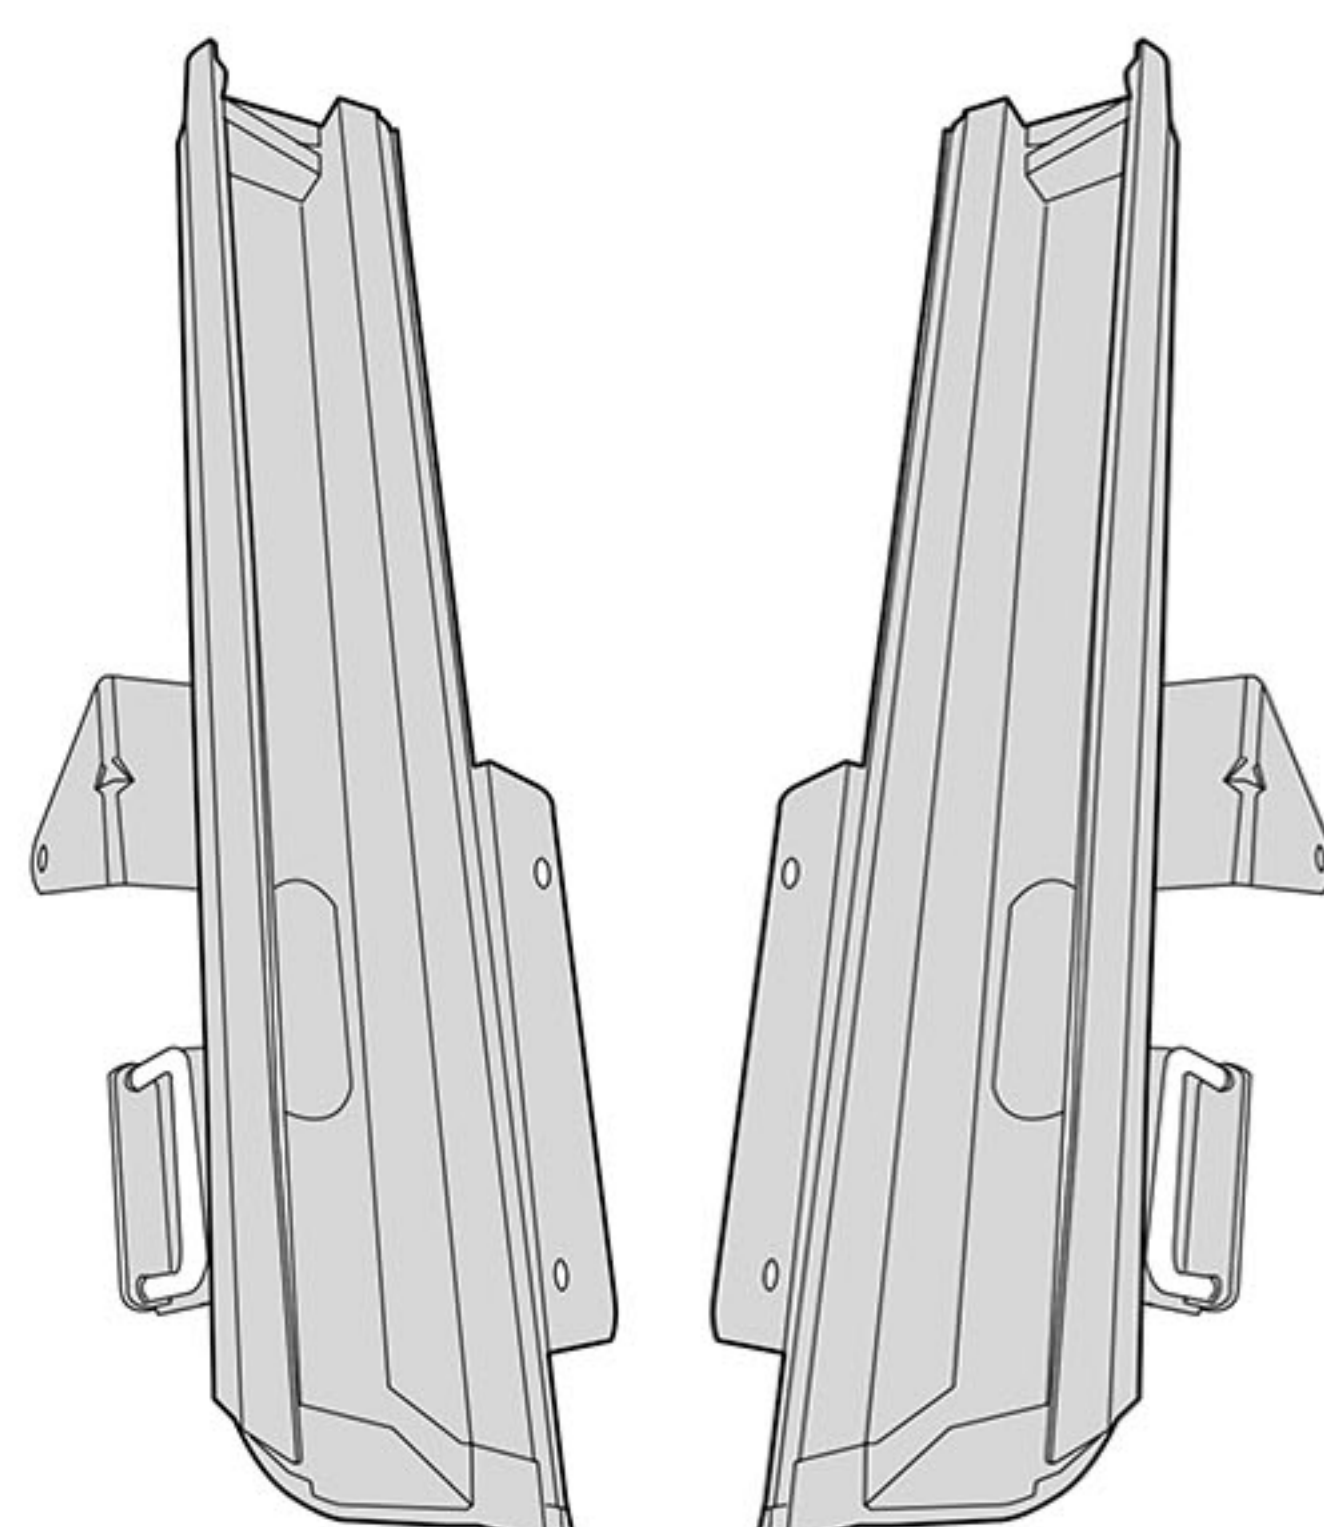


Hex bolt M8x20 = 4 set




Pan Head Tapping Screw 6x3/8 = 4 pcs.

### Front rubber page 9 (in topic 9)

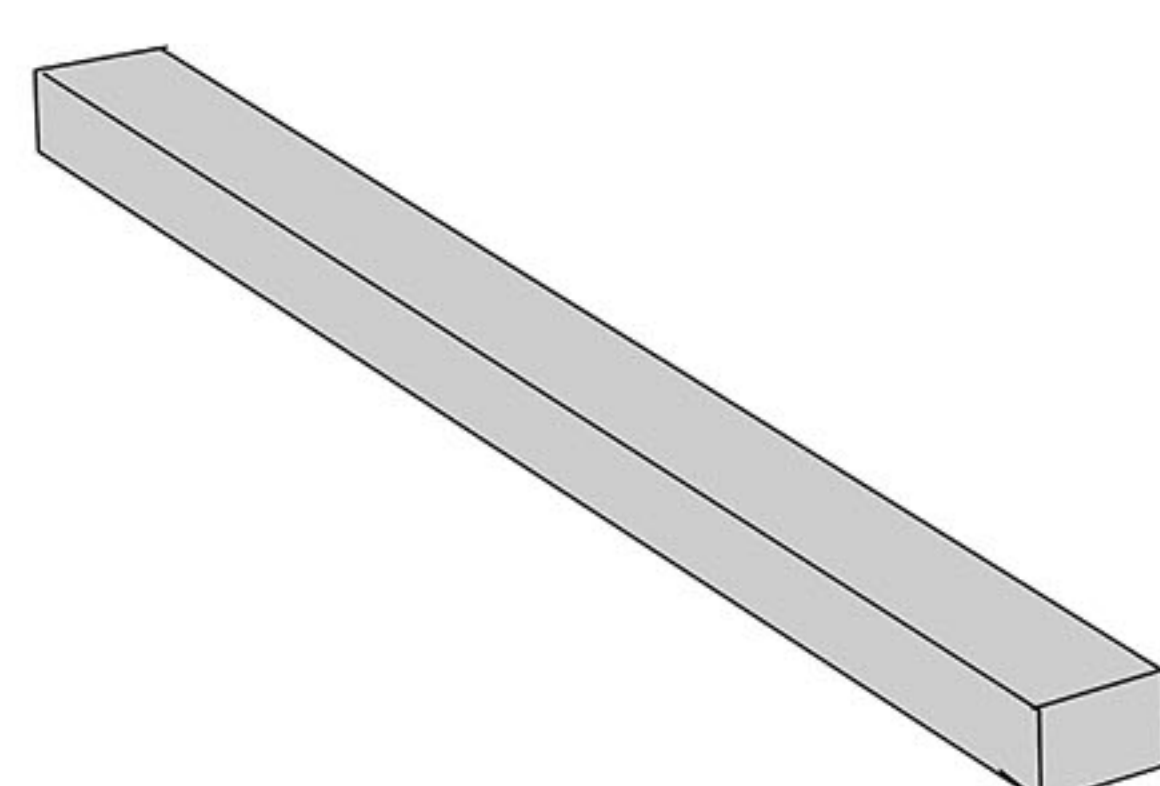

### Plug&Play page 11

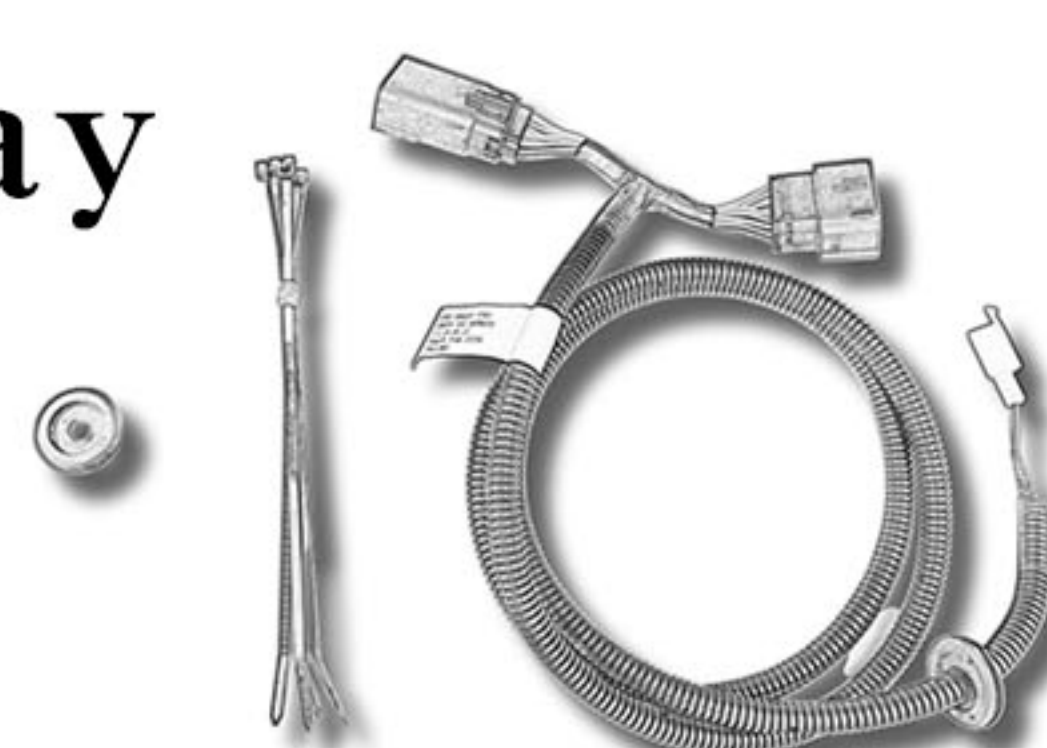


interior lights wire





## TOOL FOR INSTALLATION

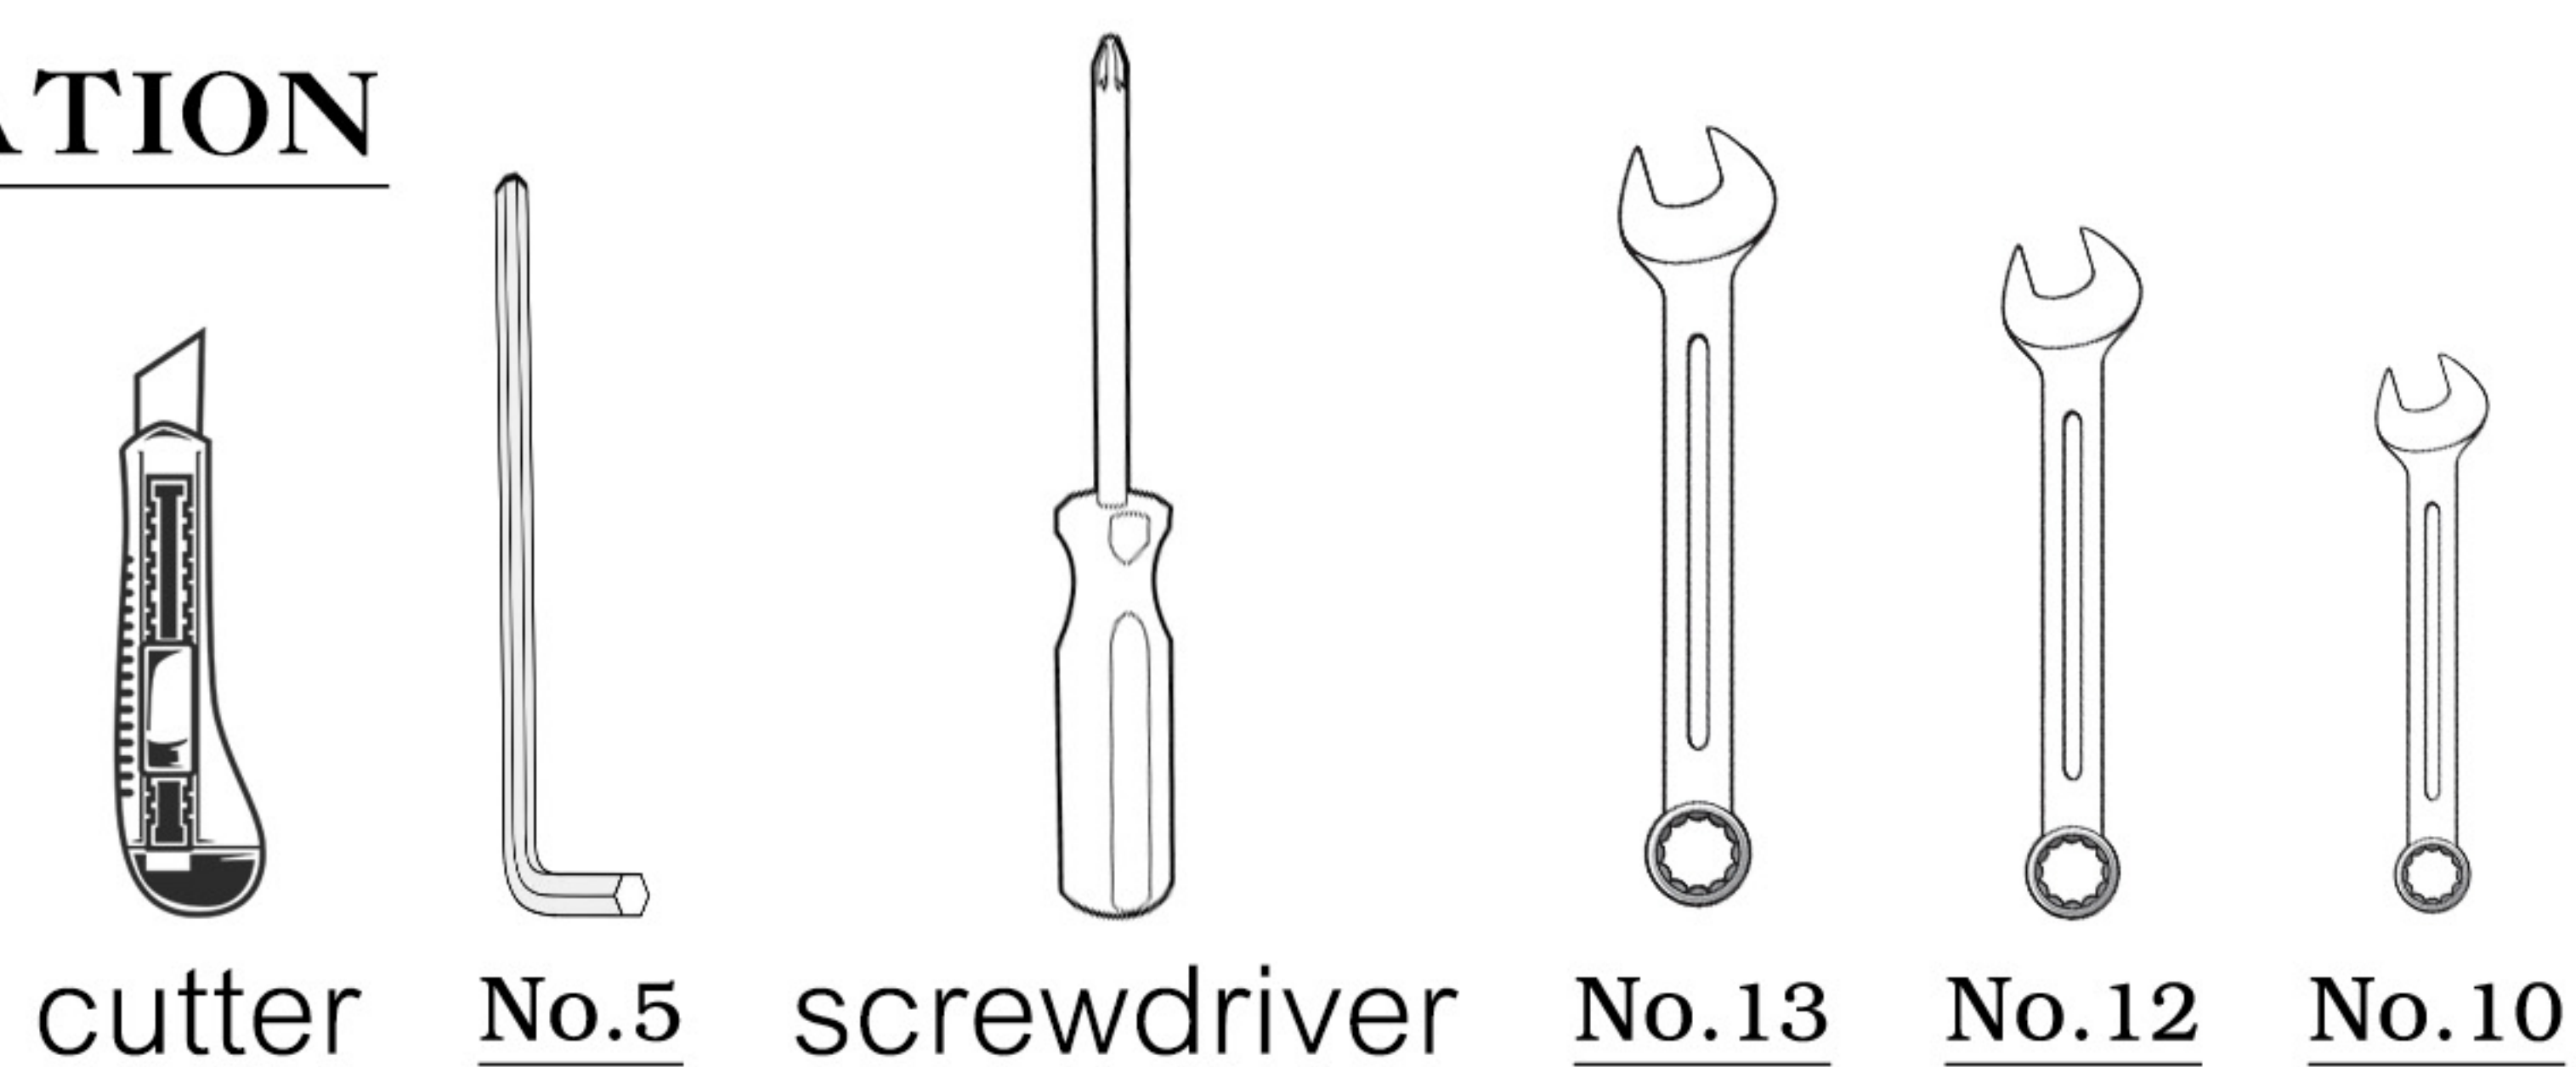



## Assembly the canopy

### 1. Assembly rear door to roof panel


#### WARNING




- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS

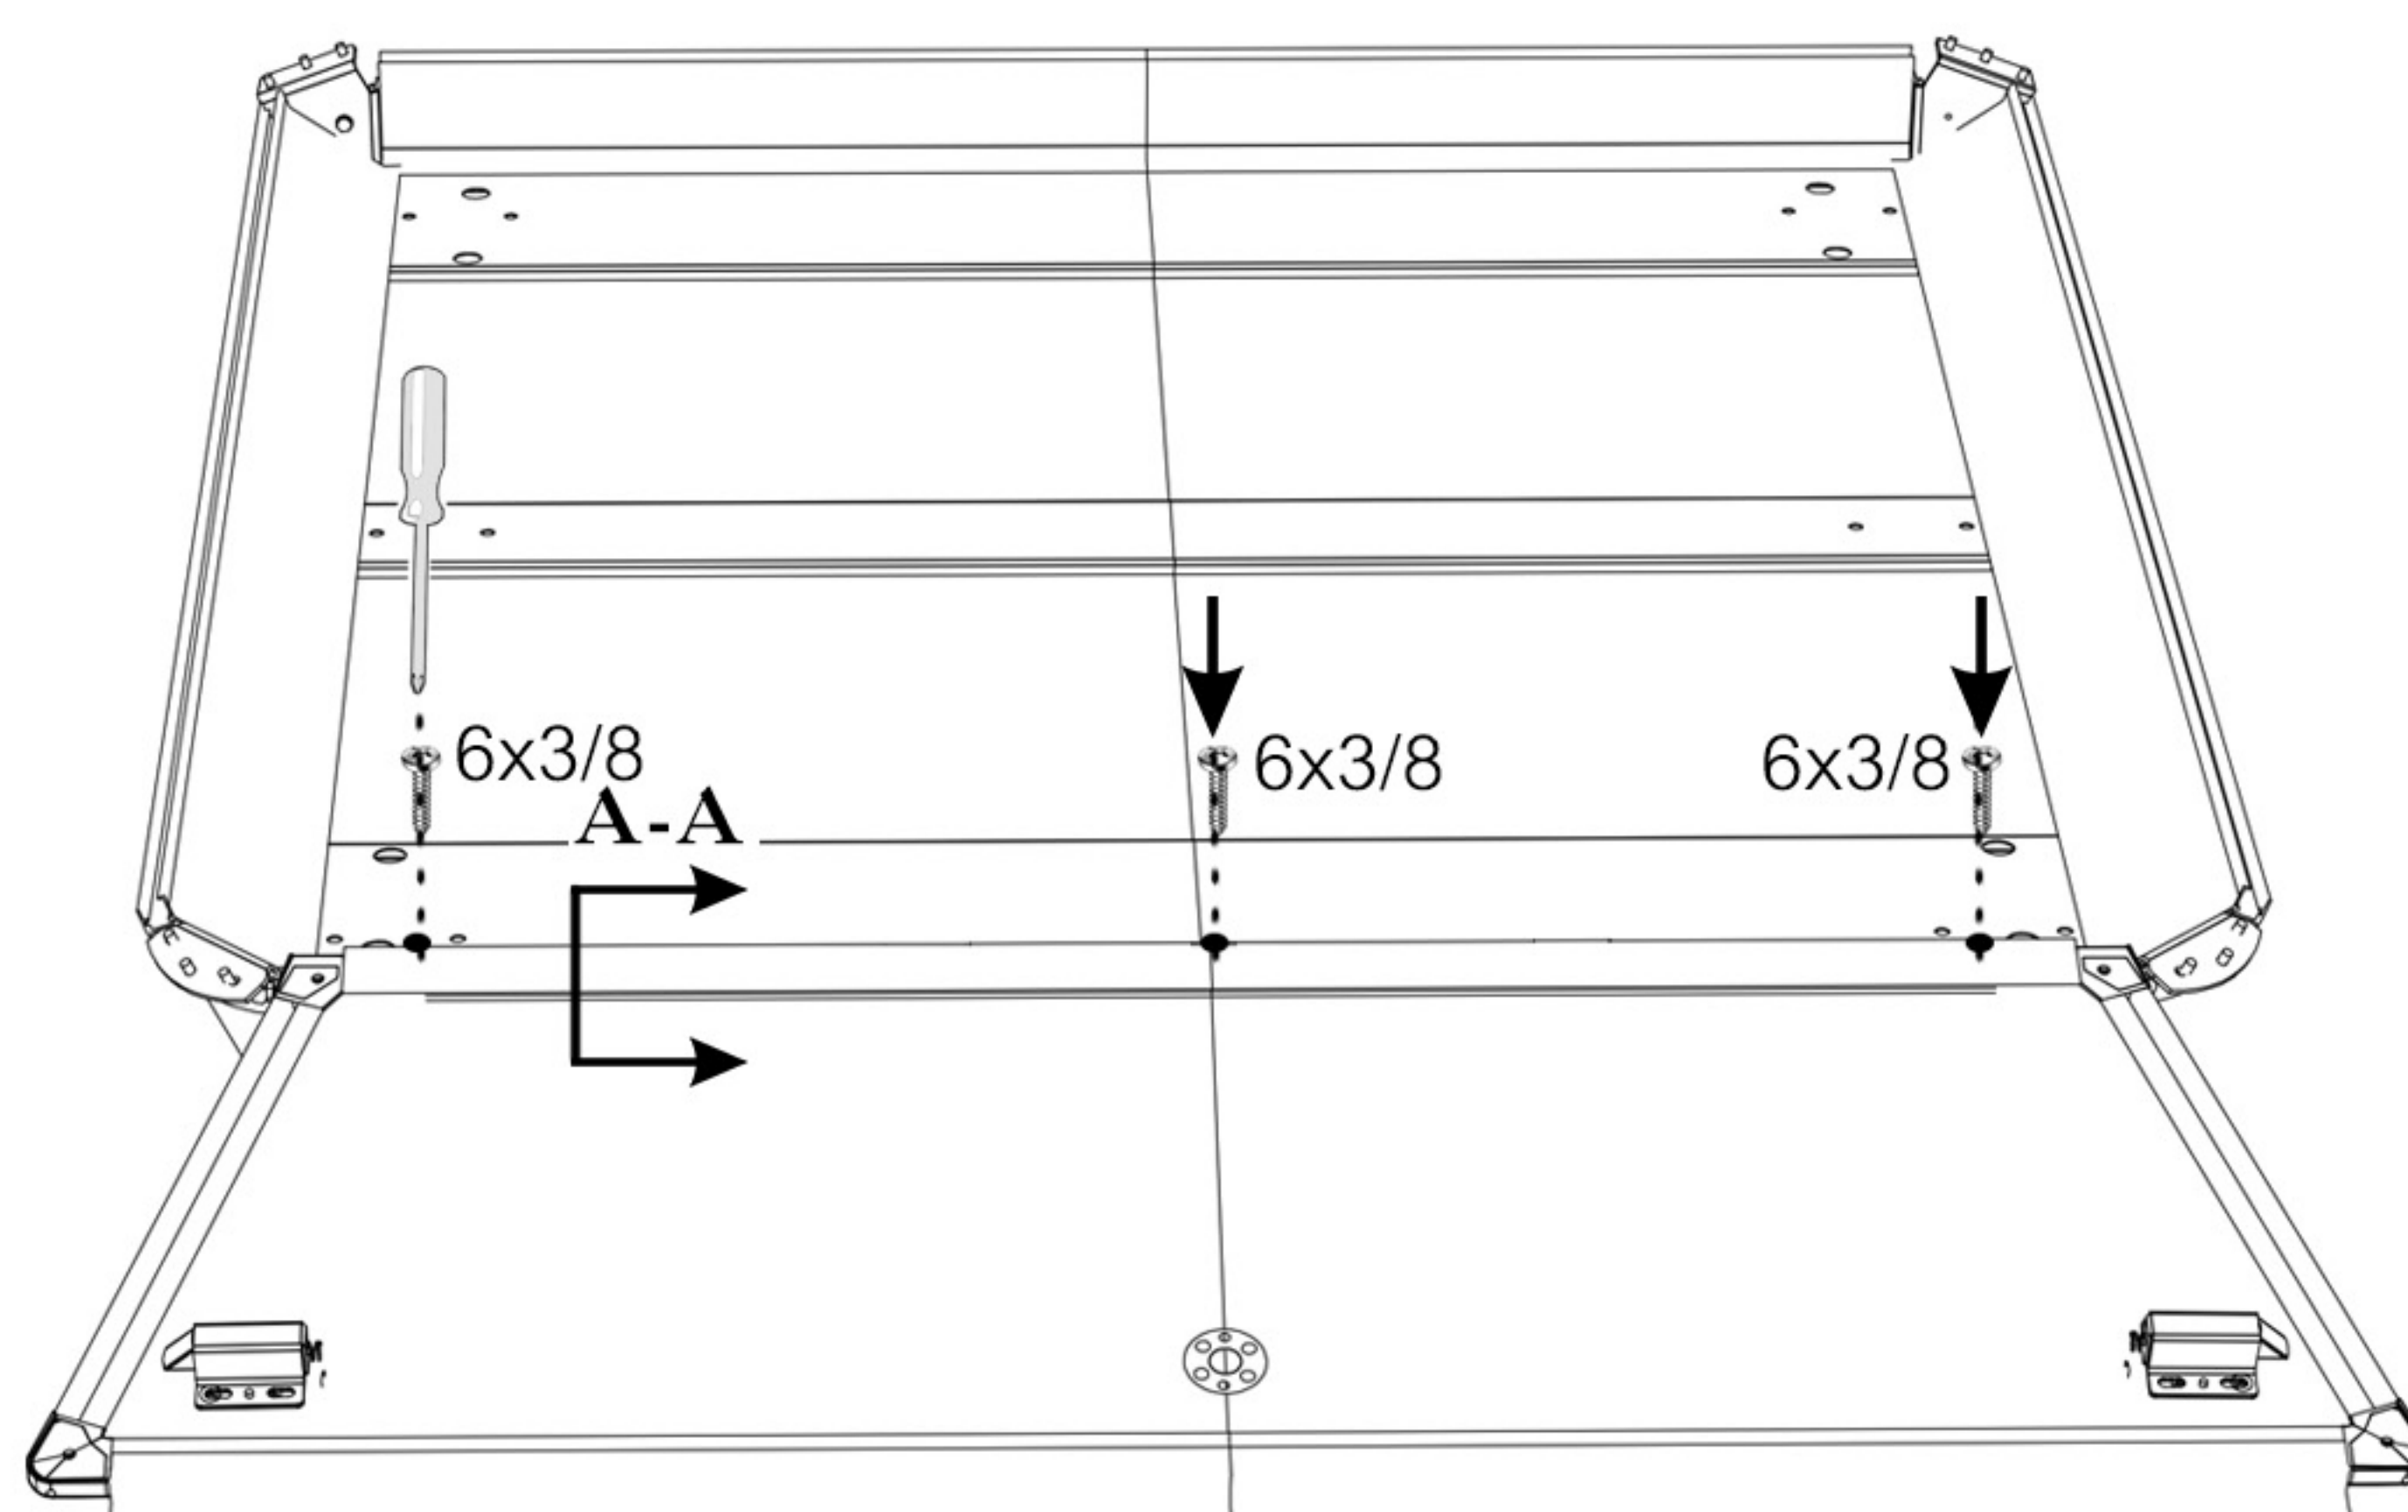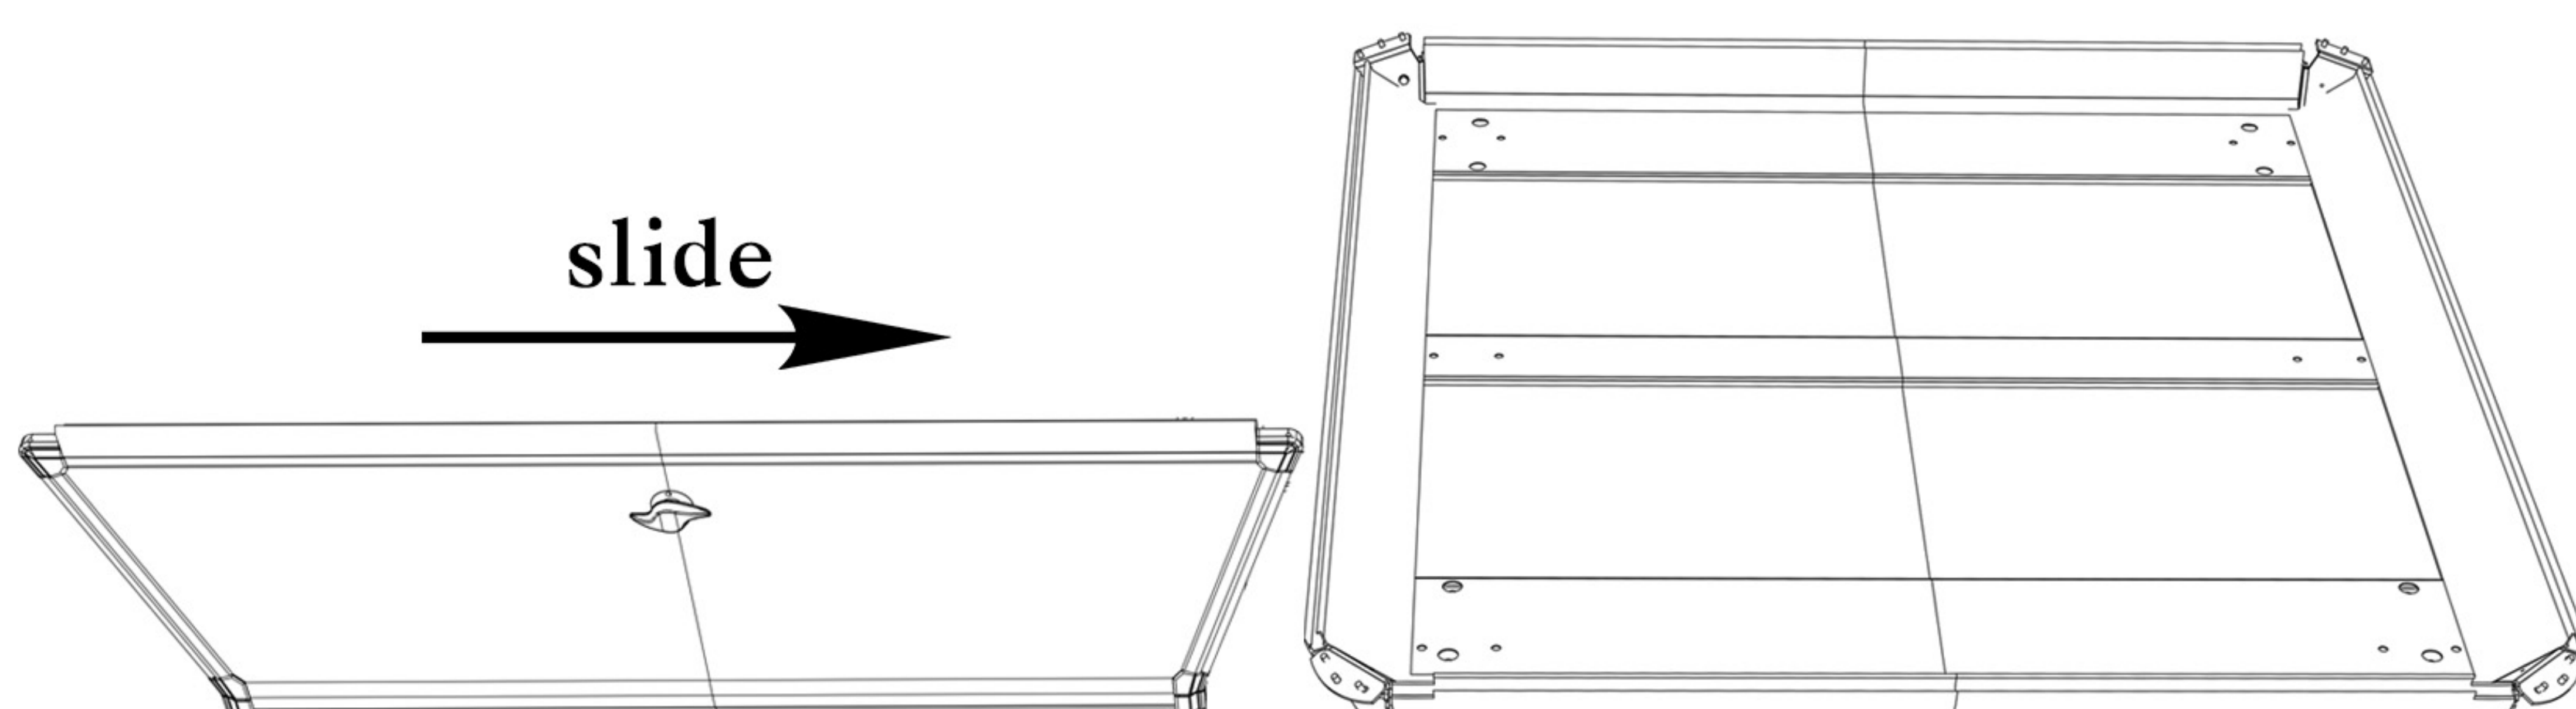

A-A

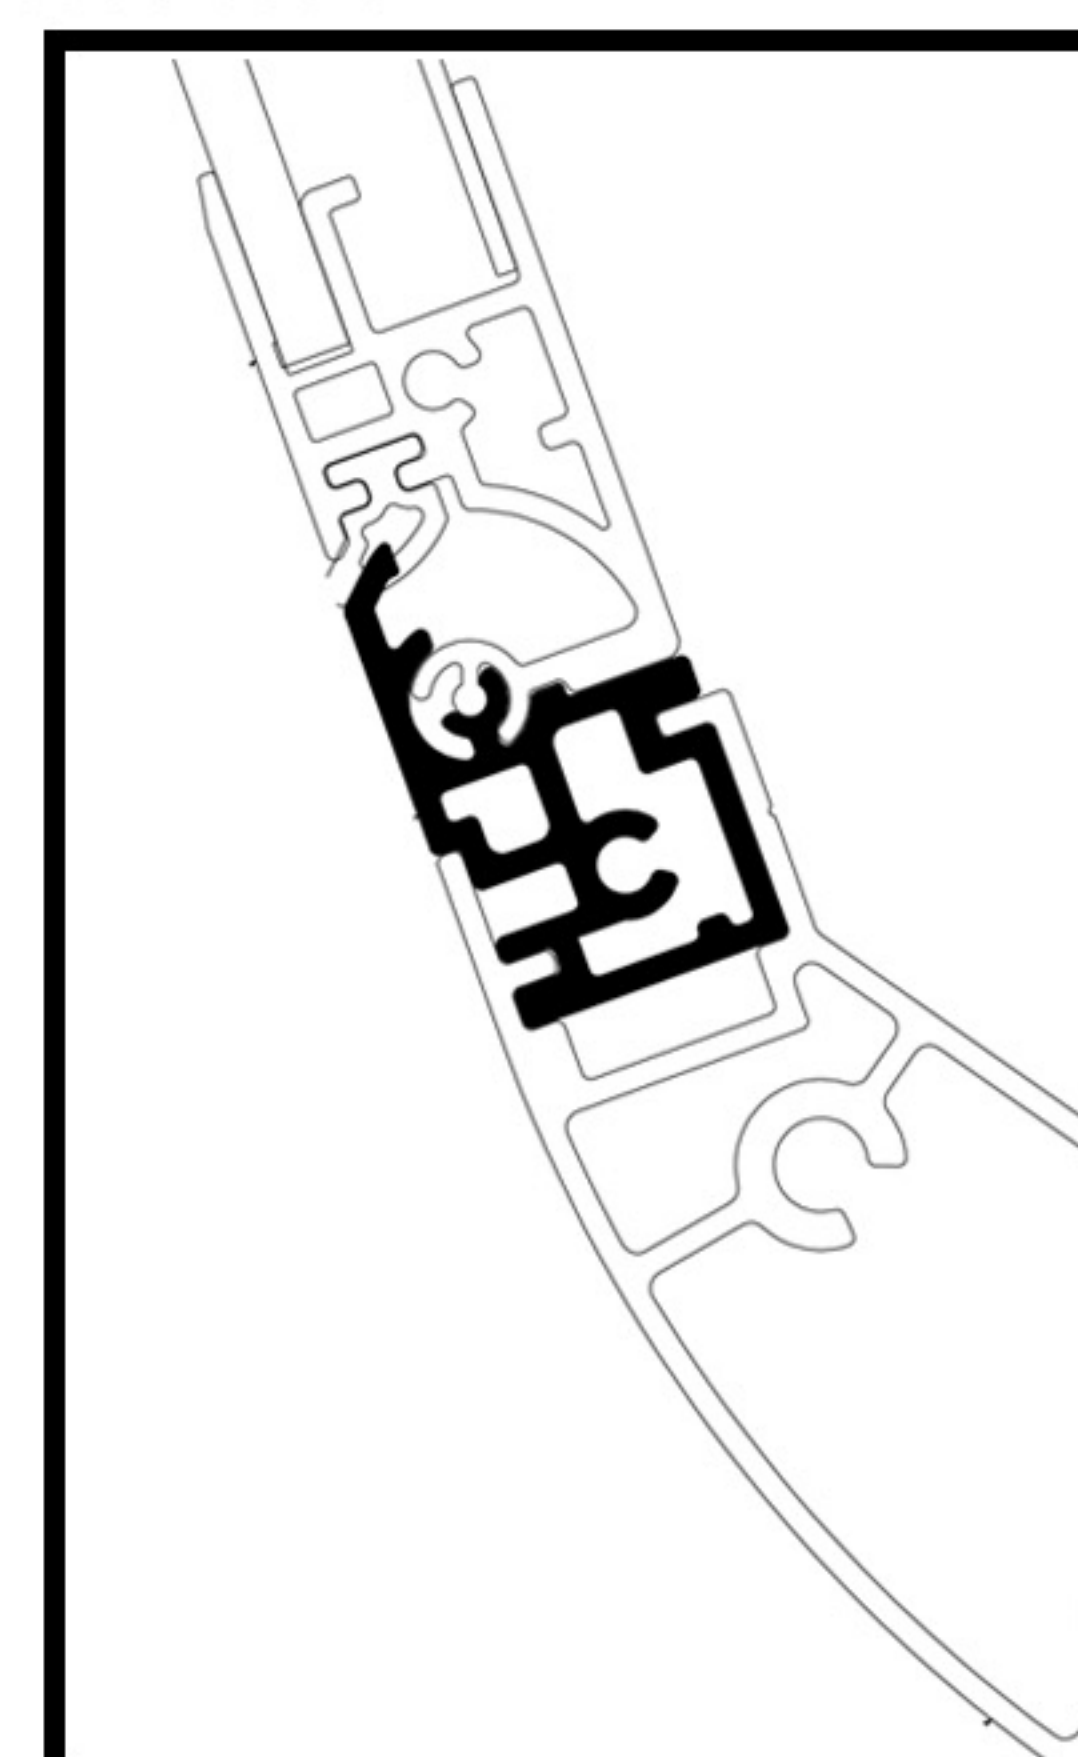




### Rear door kit

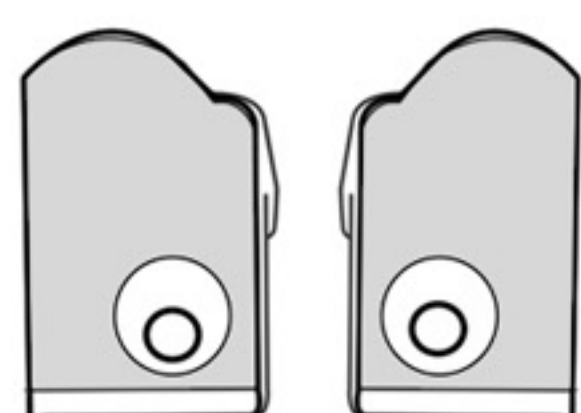


Flat Head Tapping Screw 7x1/2 = 2 pcs.

Pan Head Tapping Screw 6x3/8 = 3 pcs.

B

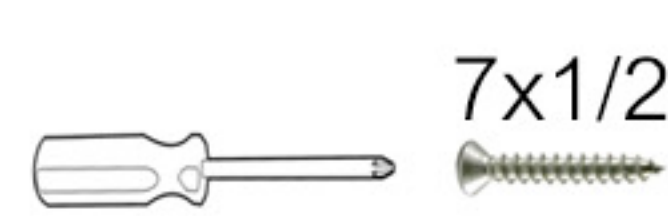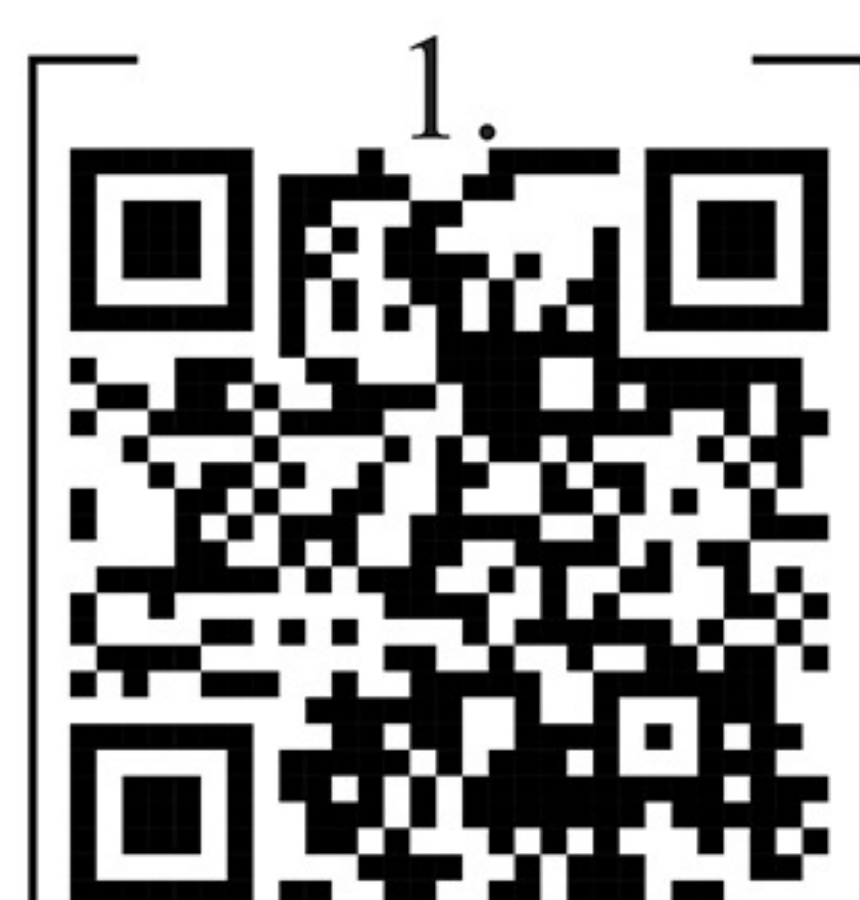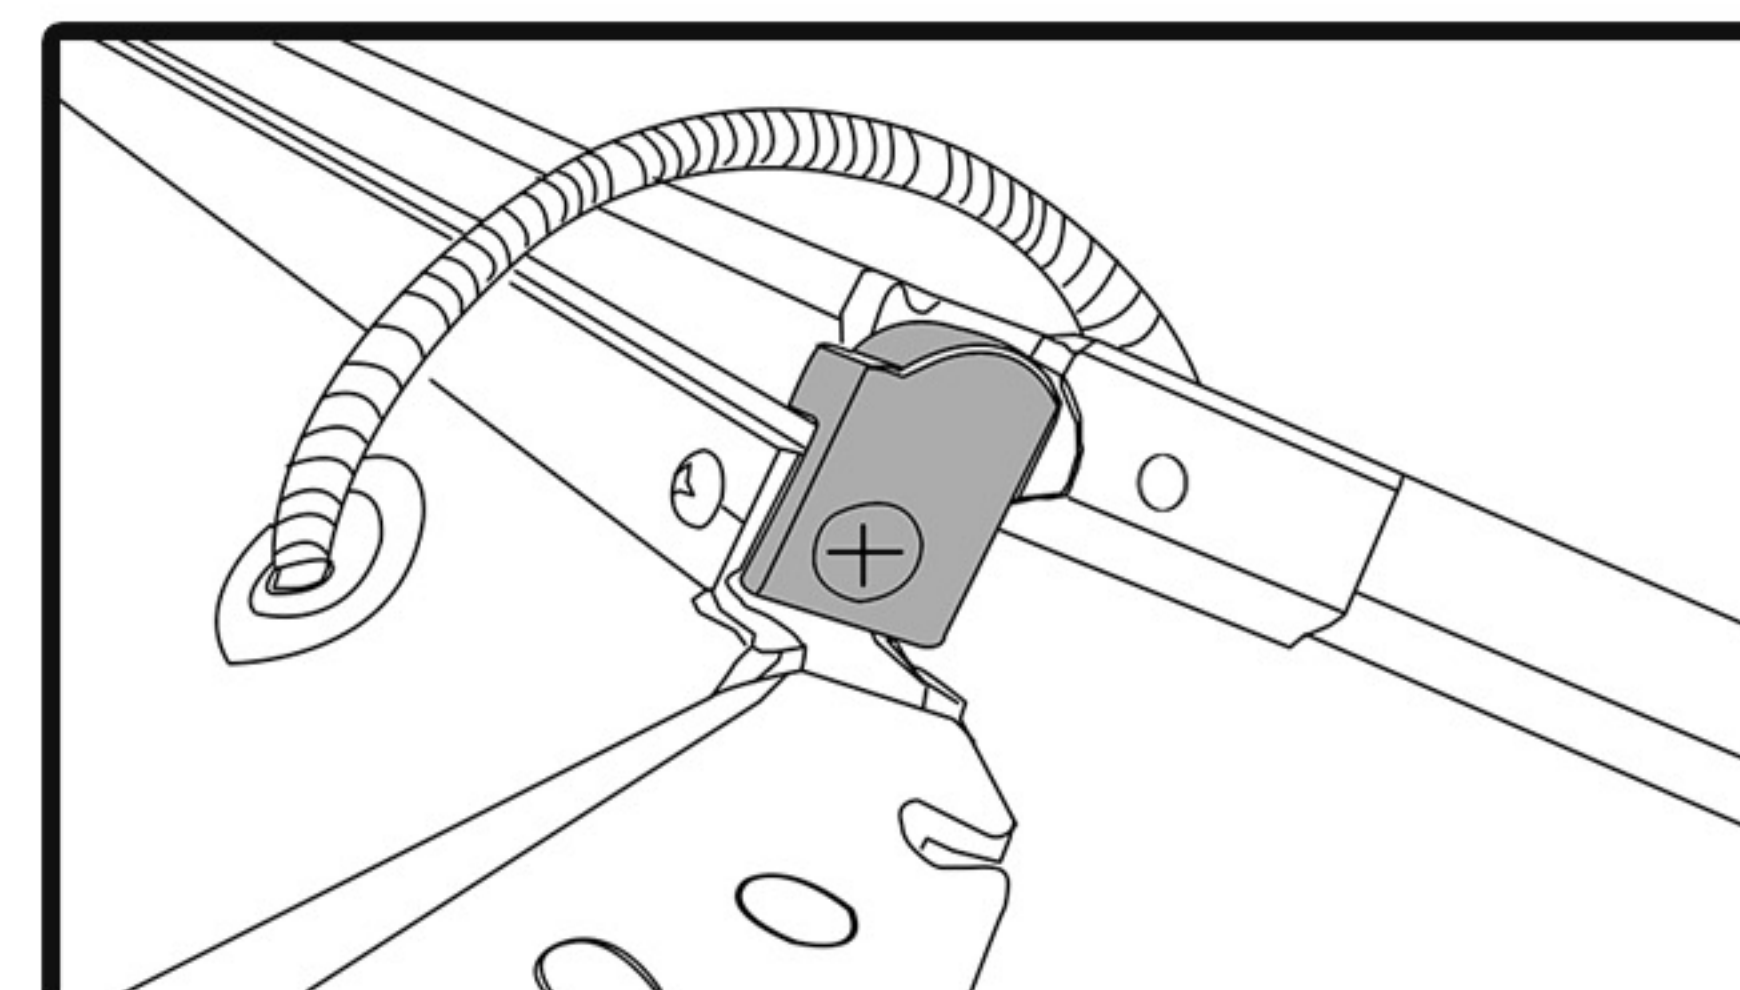

7x1/2

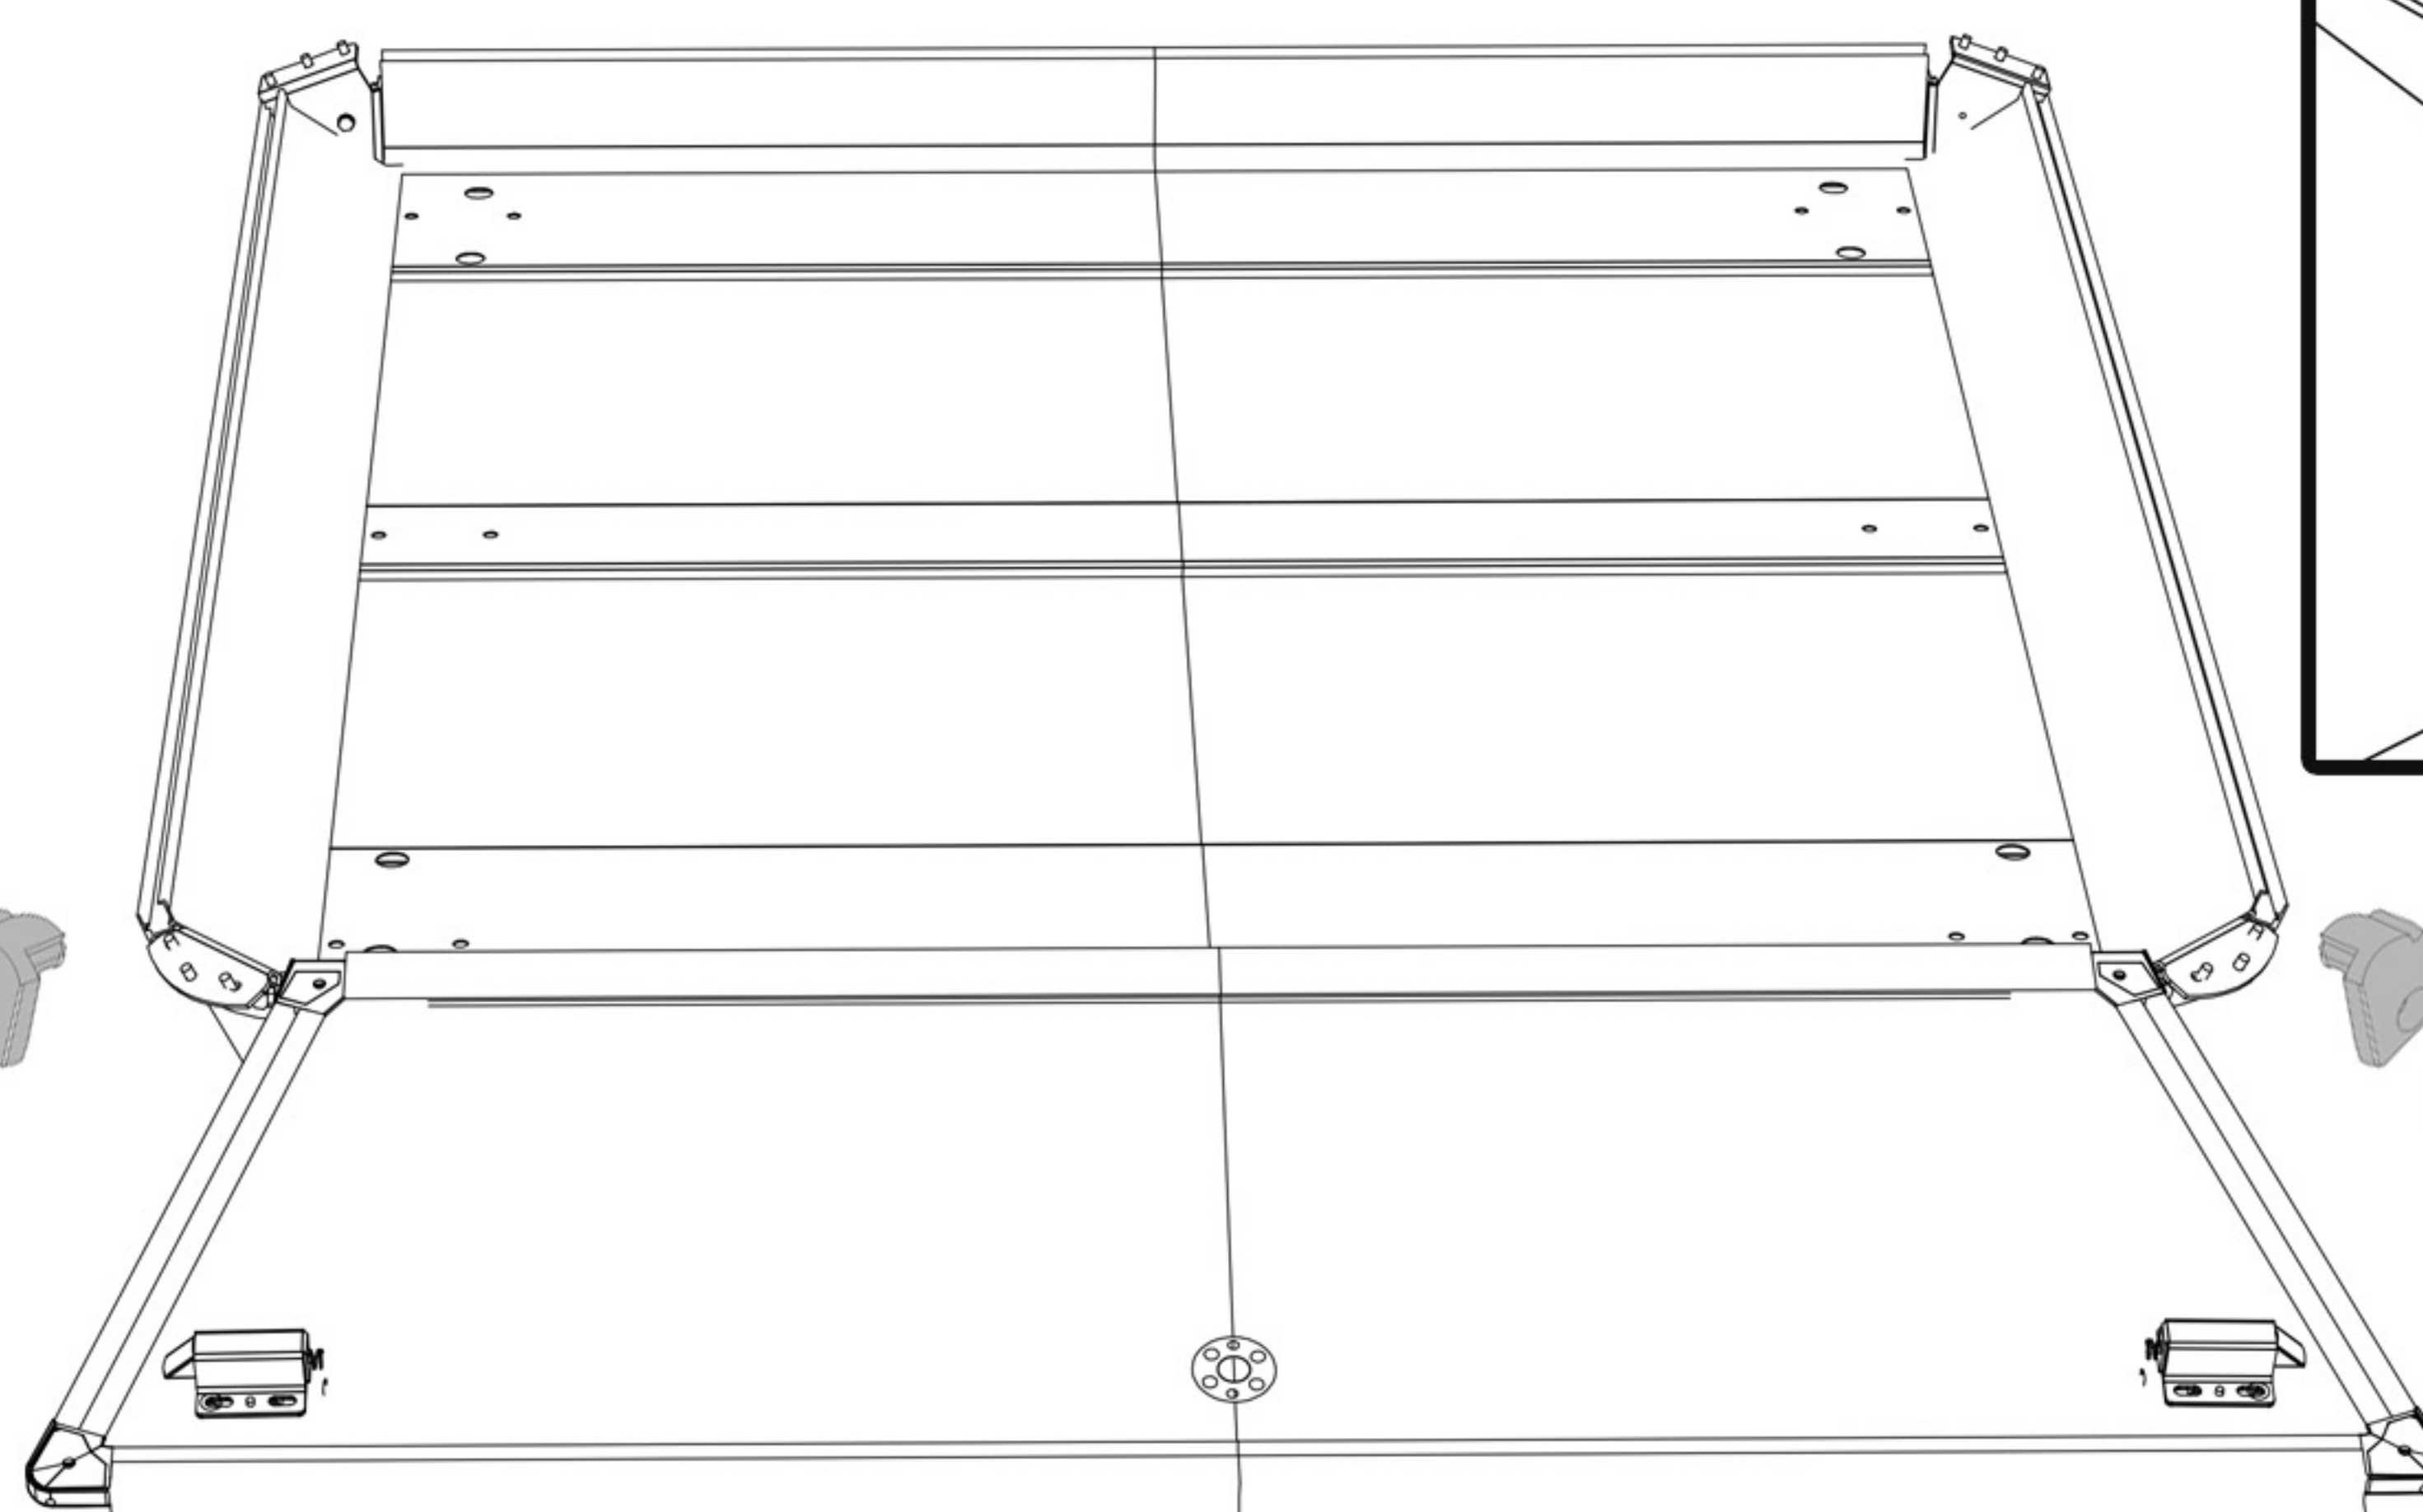


7x1/2

B







## 2. Assembly side panel

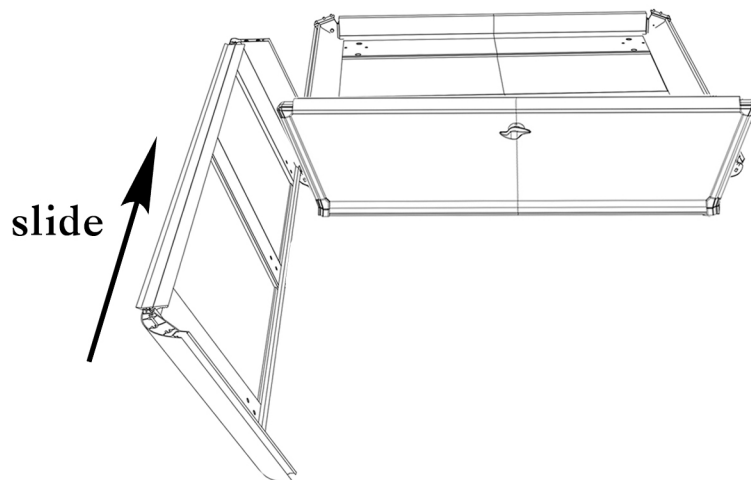

Note : Lift up the rear door before  
sliding the side panels into the side roof frame

A-A

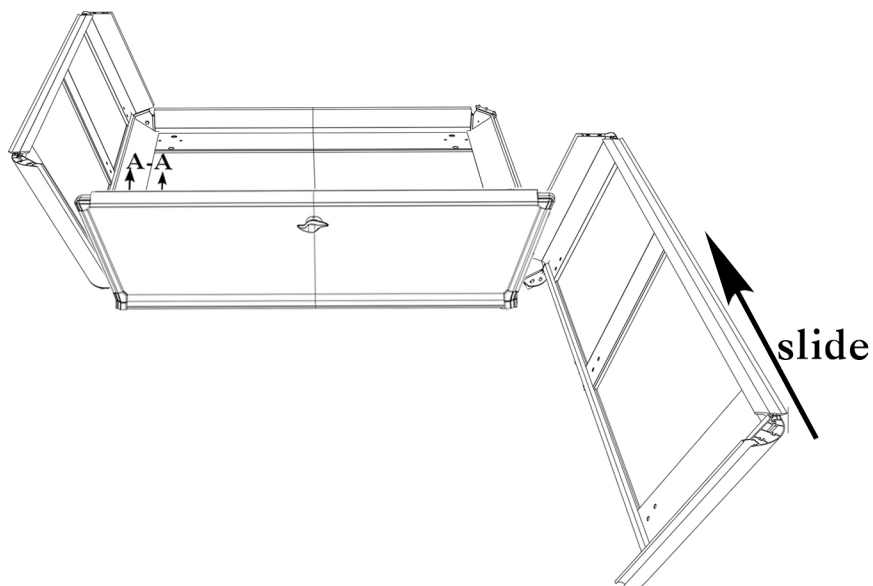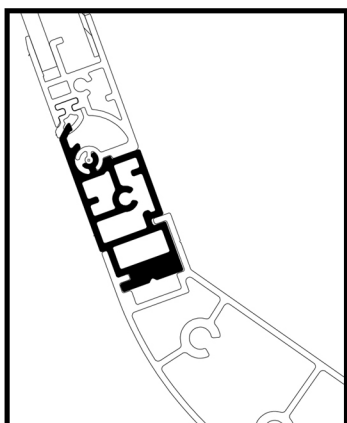

### WARNING




- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS






### 3. Assembly front panel

#### Front panel bracket

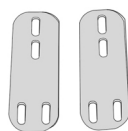


Socket pan head bolt M8x12 =4set

Hex bolt M6x15 =4set

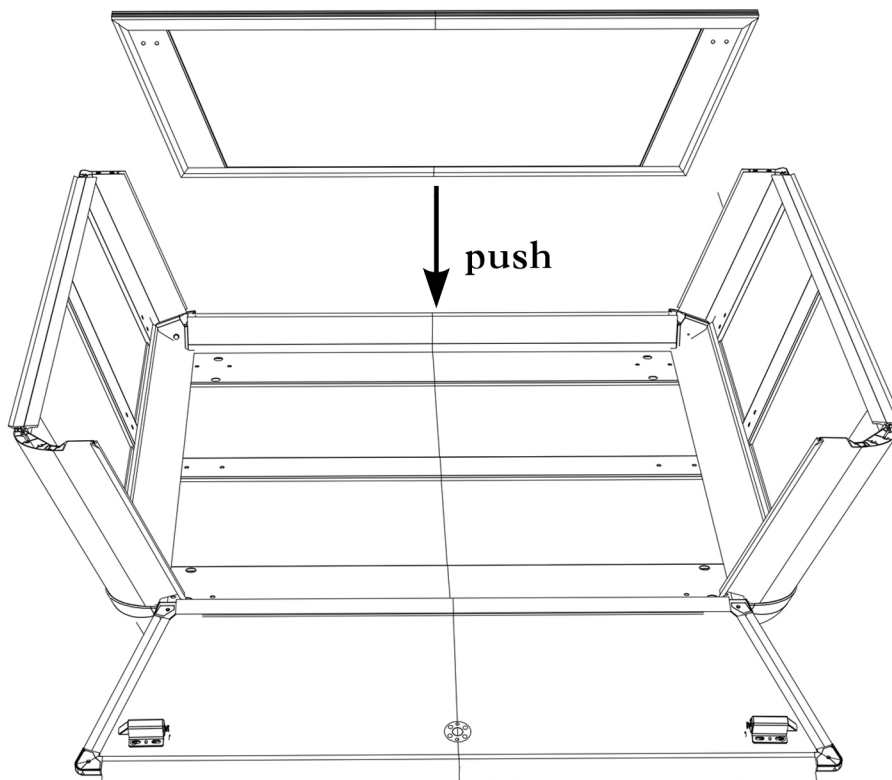

**Note: Pre-assamby fastener by hand then tigthen by tool**

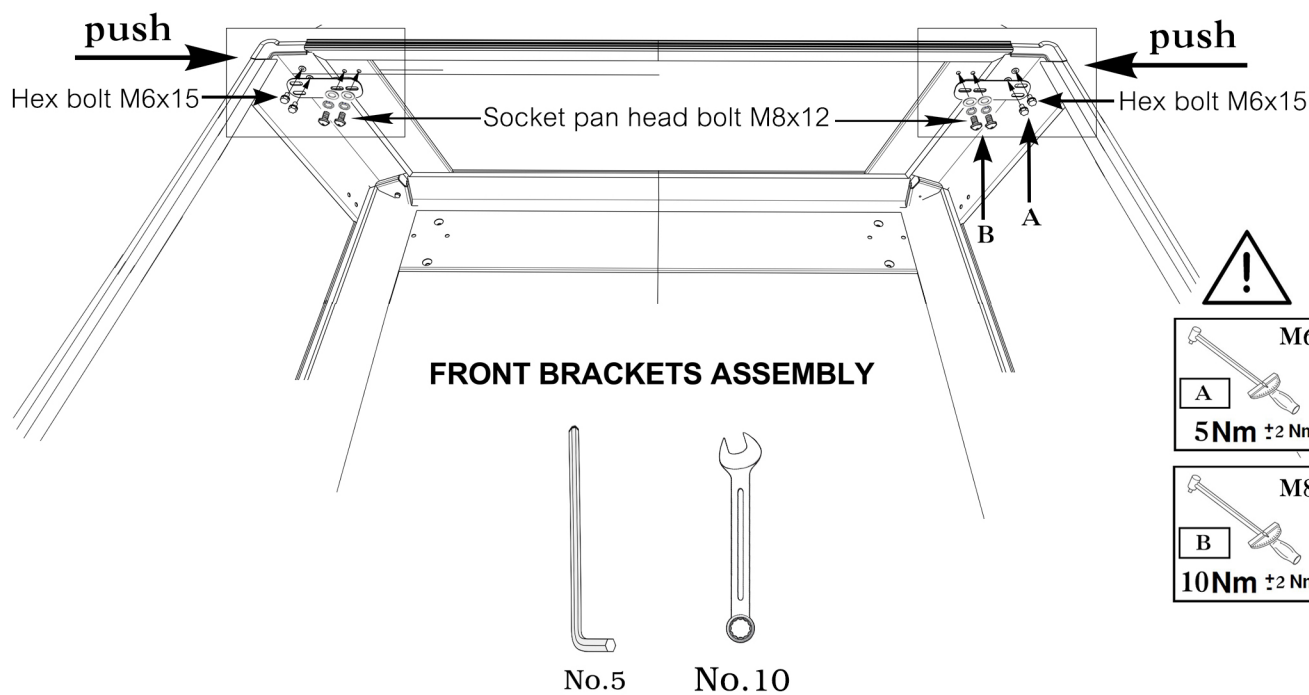

#### WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS









## 4. Locking the side panels to the roof



### front corner cover LH-RH

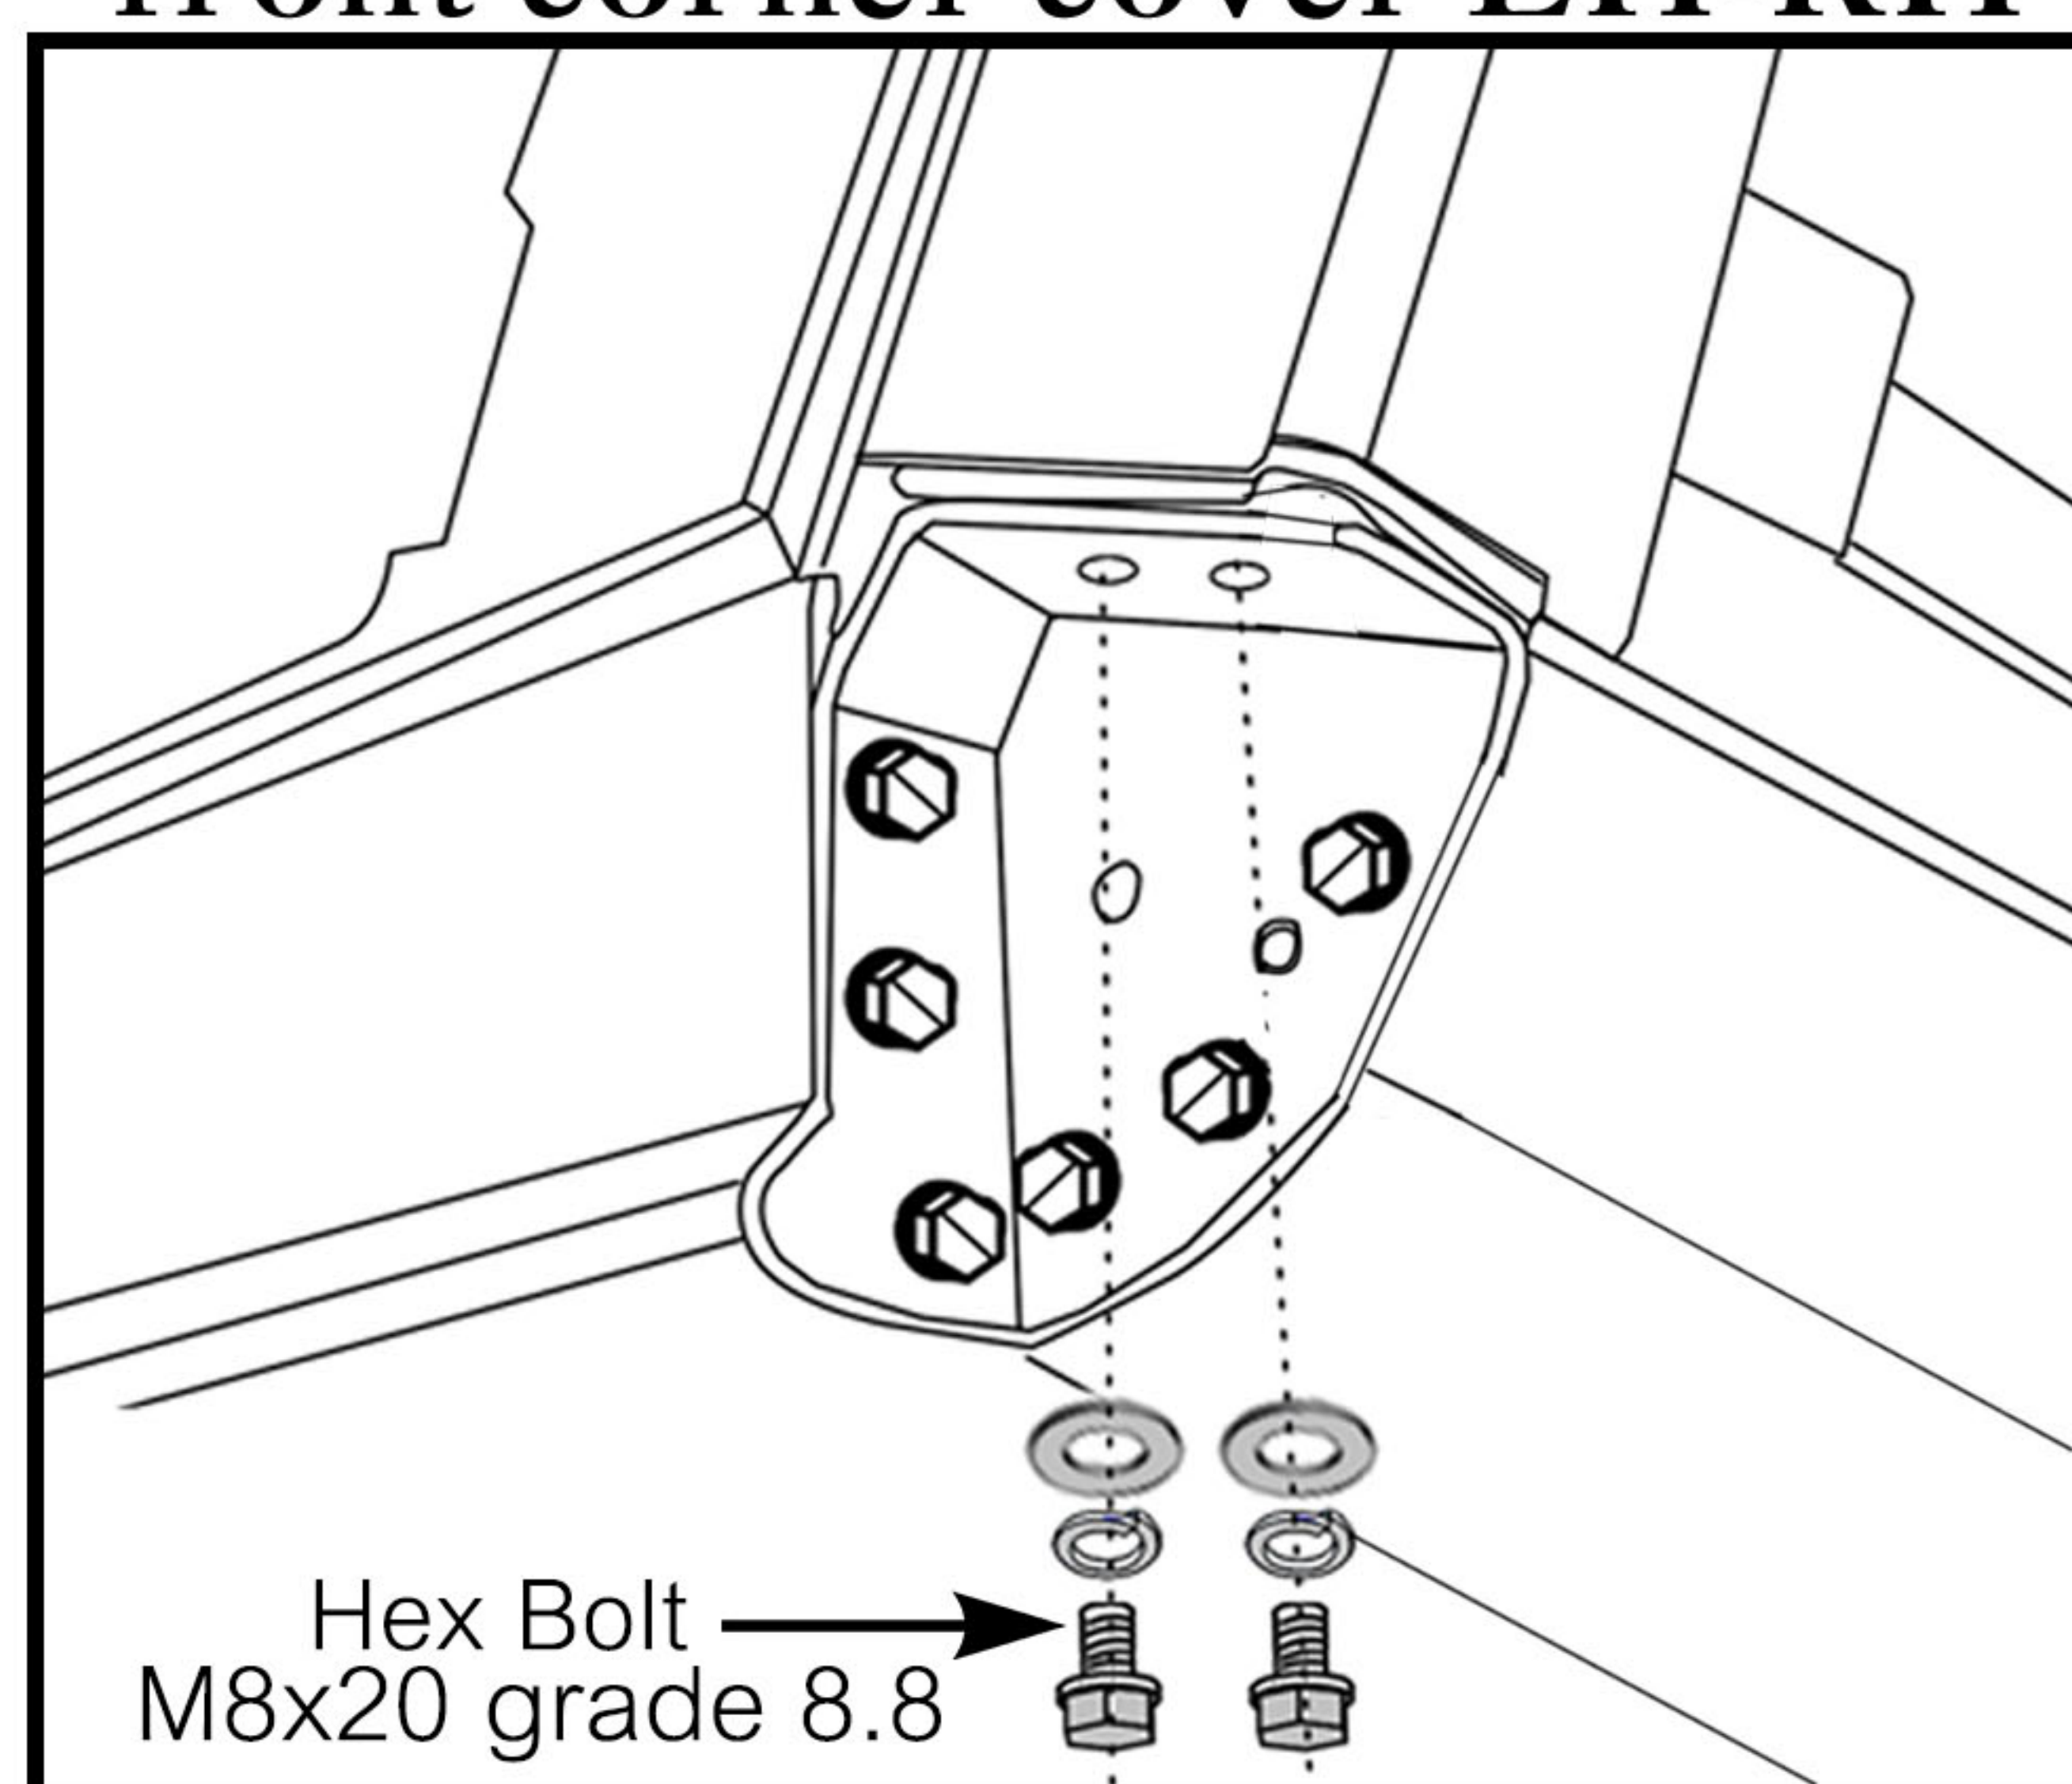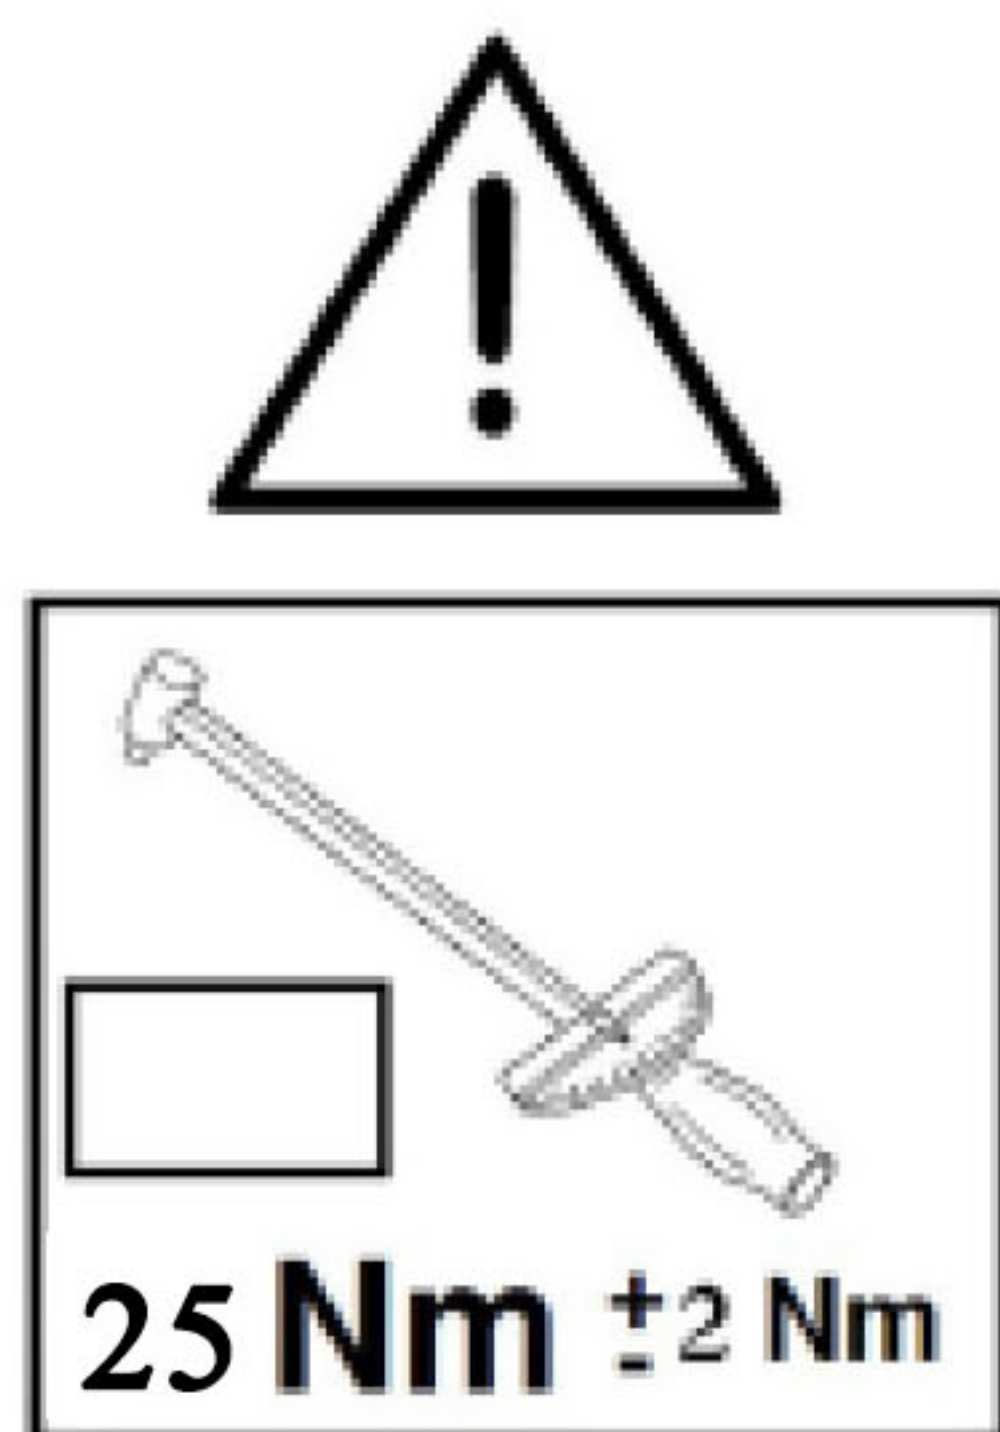


**Note:** Pre-assembly  
fastener by hand then  
tighten by tool

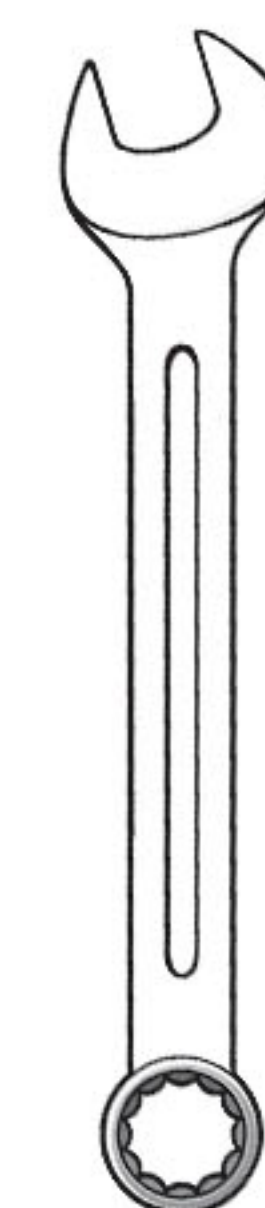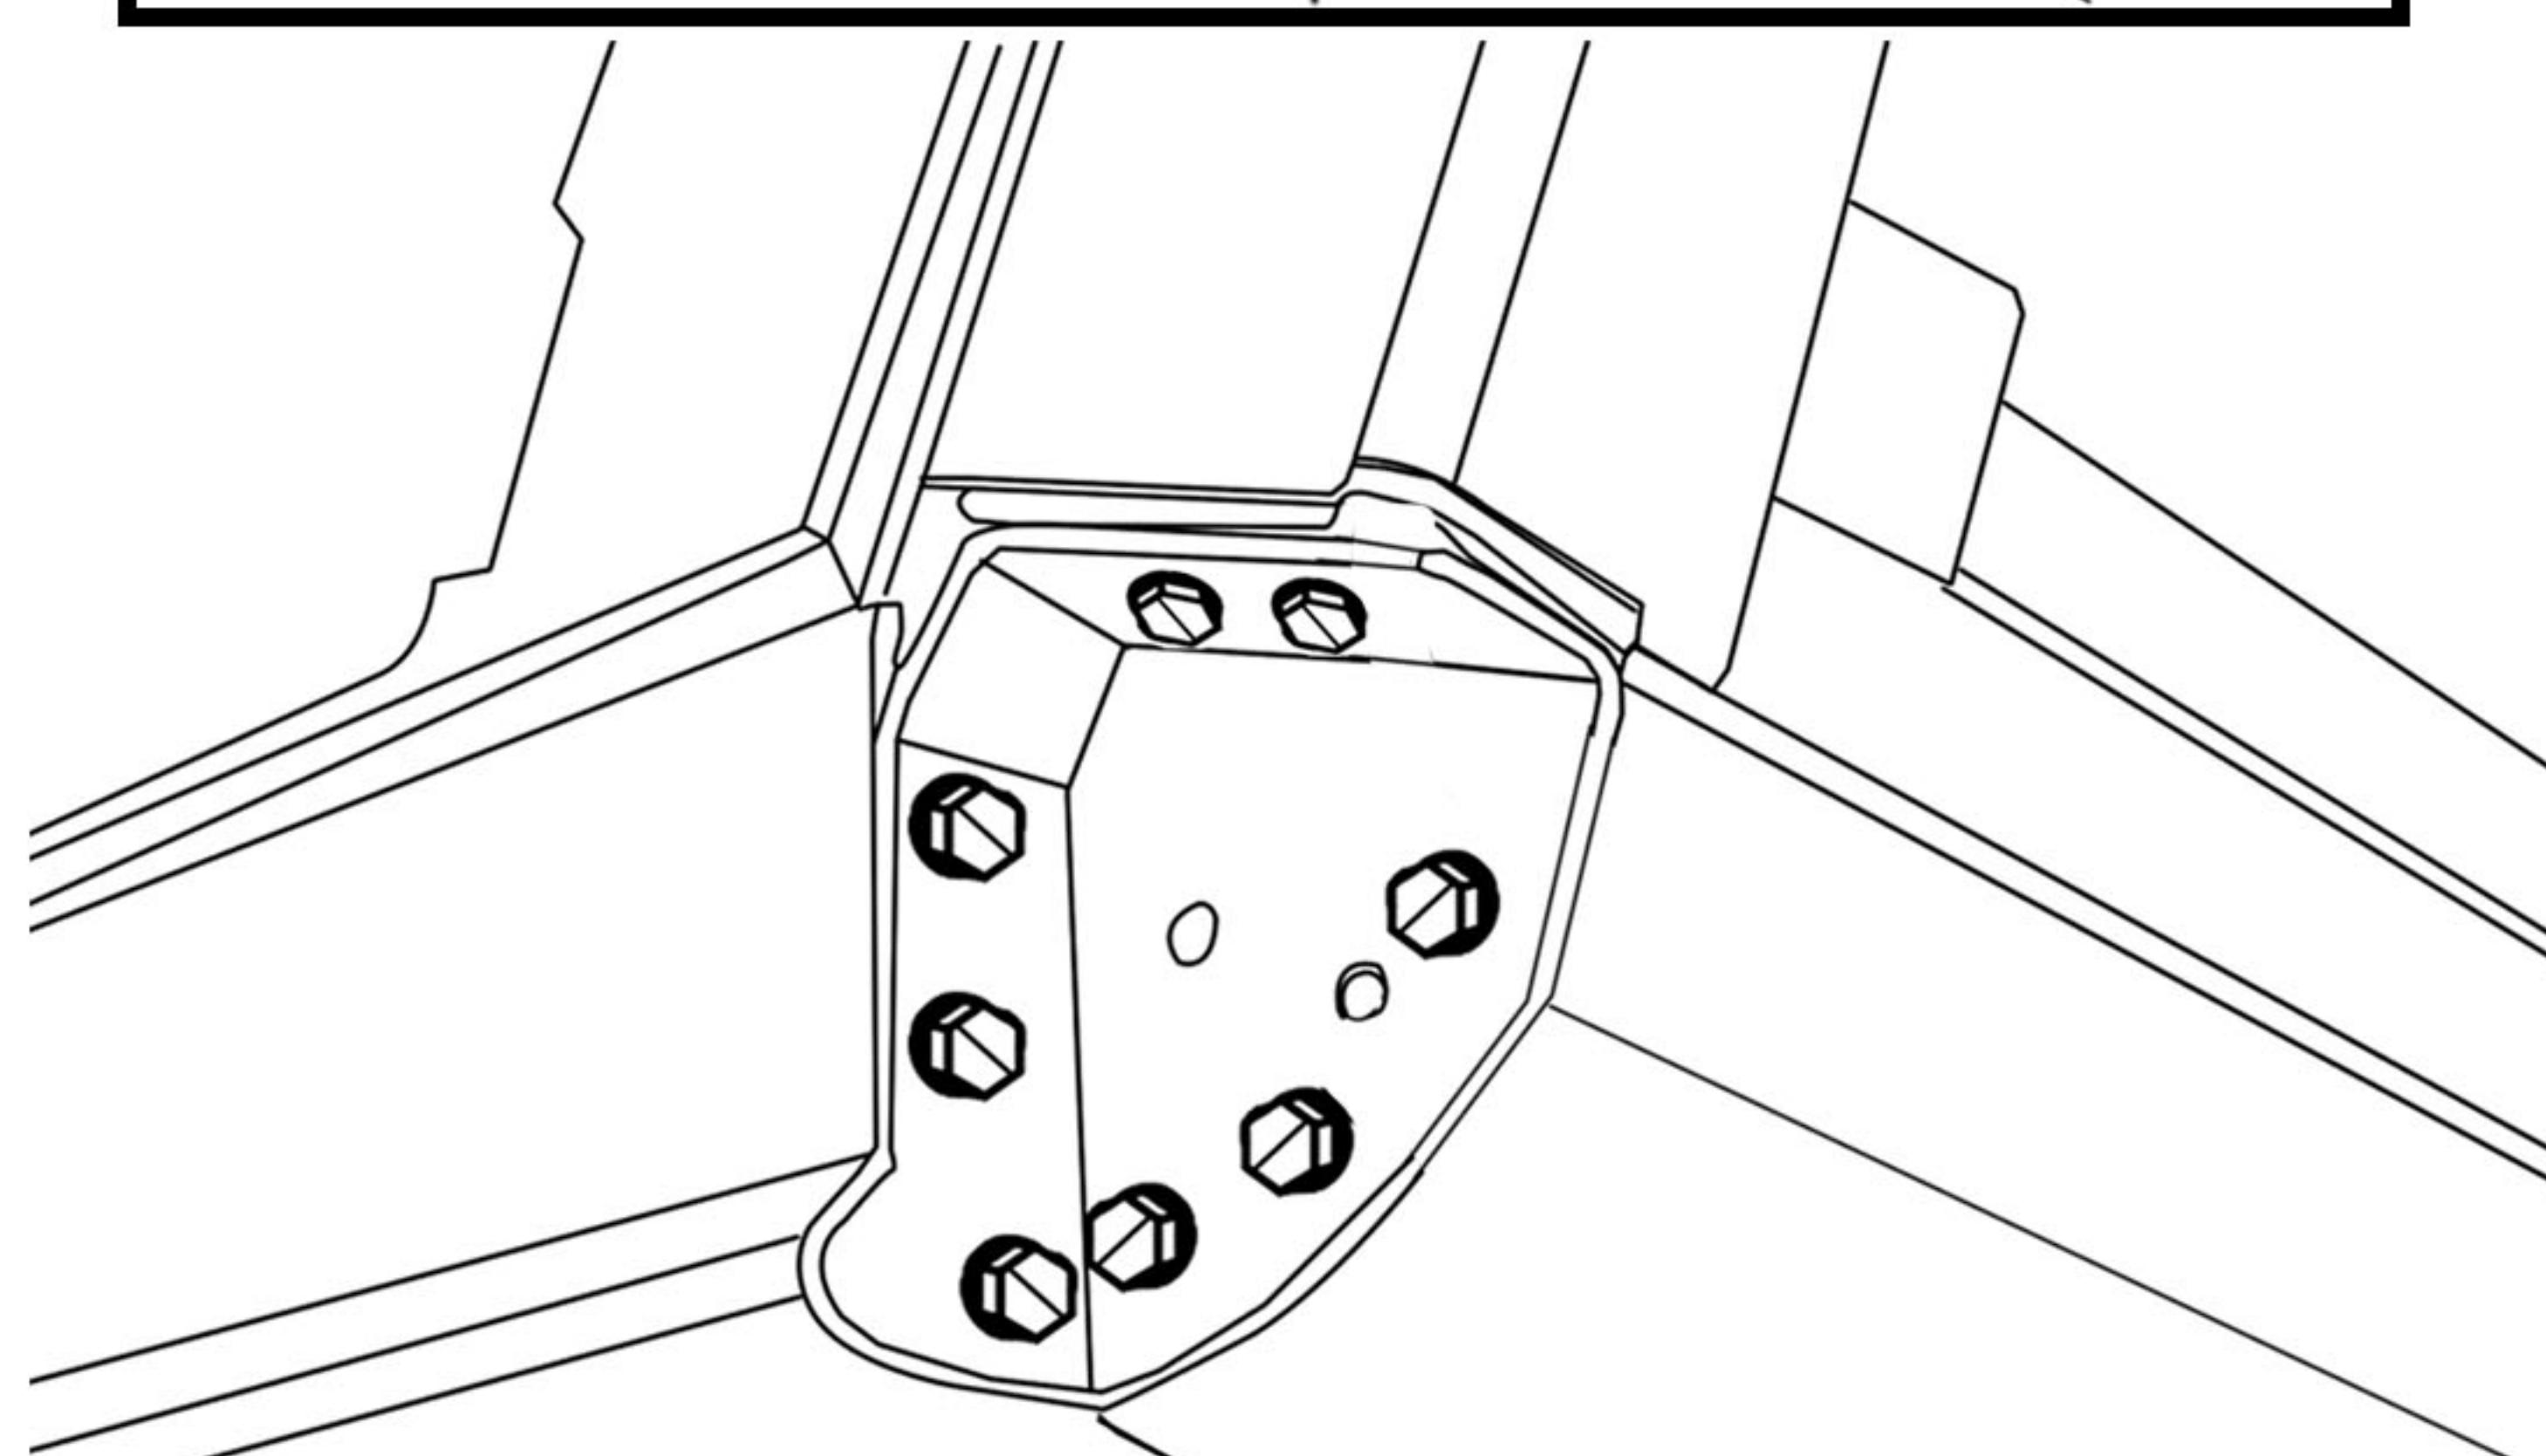


No.13

### rear corner cover LH-RH

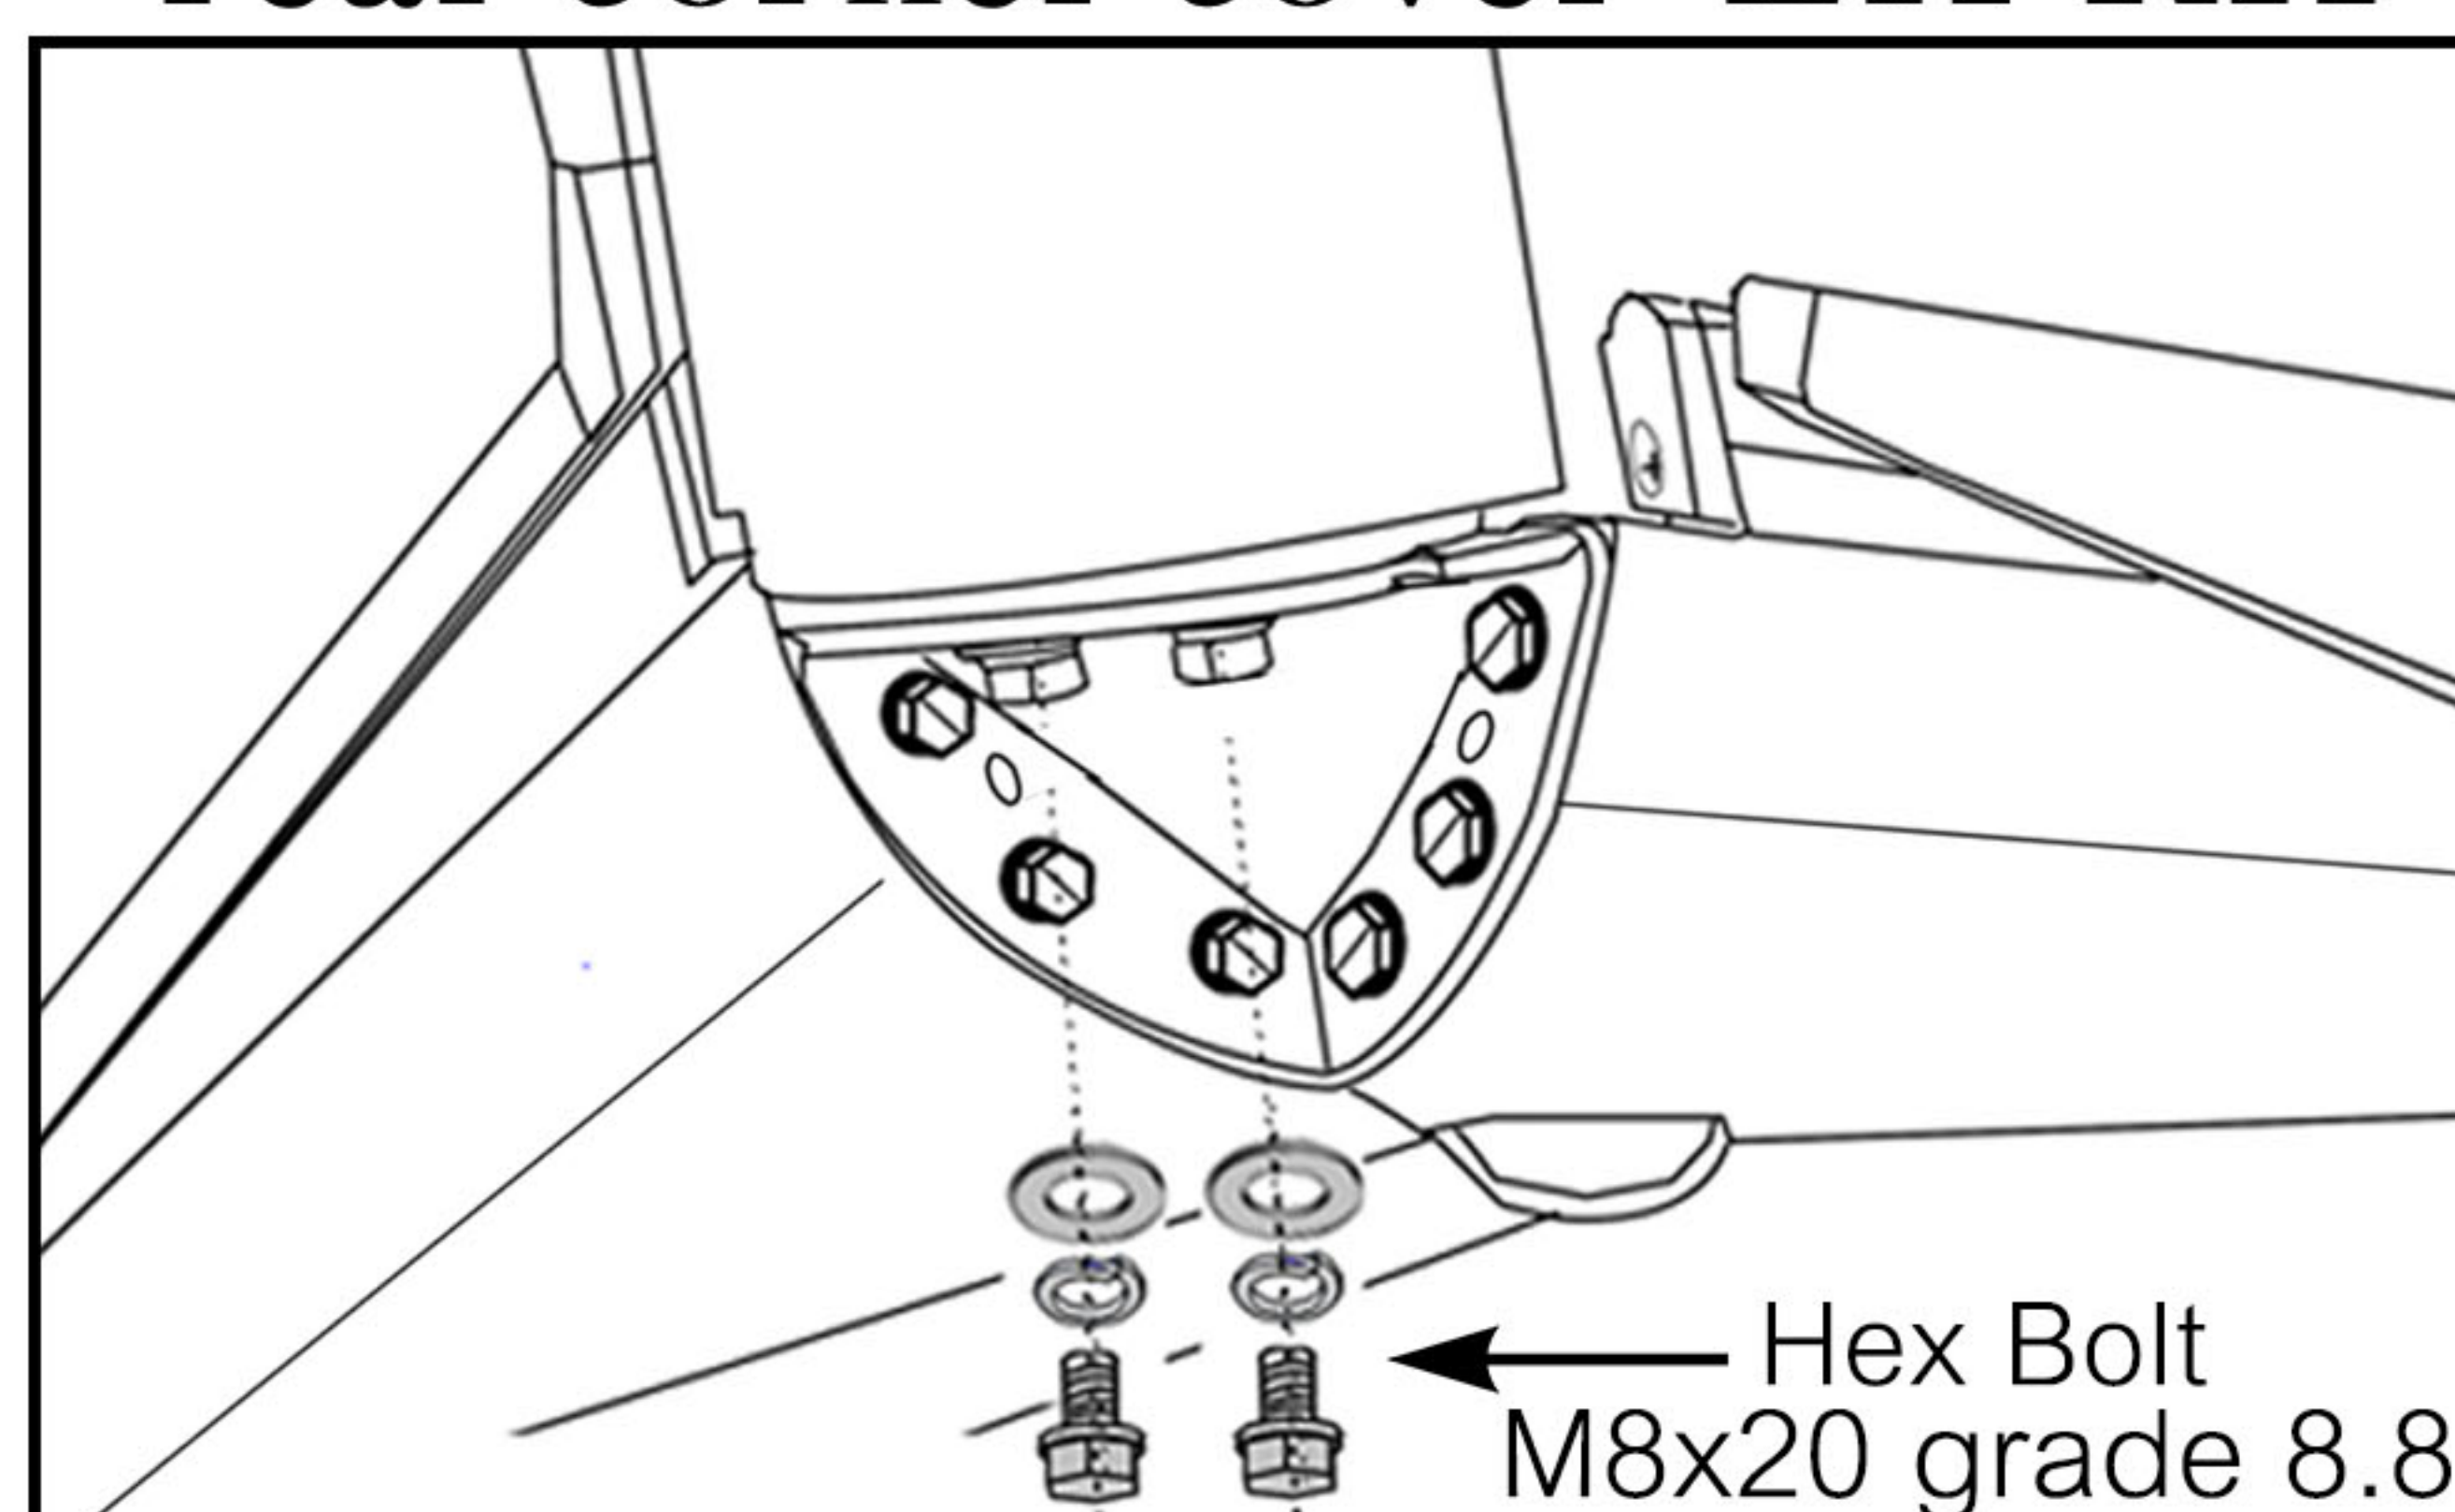

### connect brake light

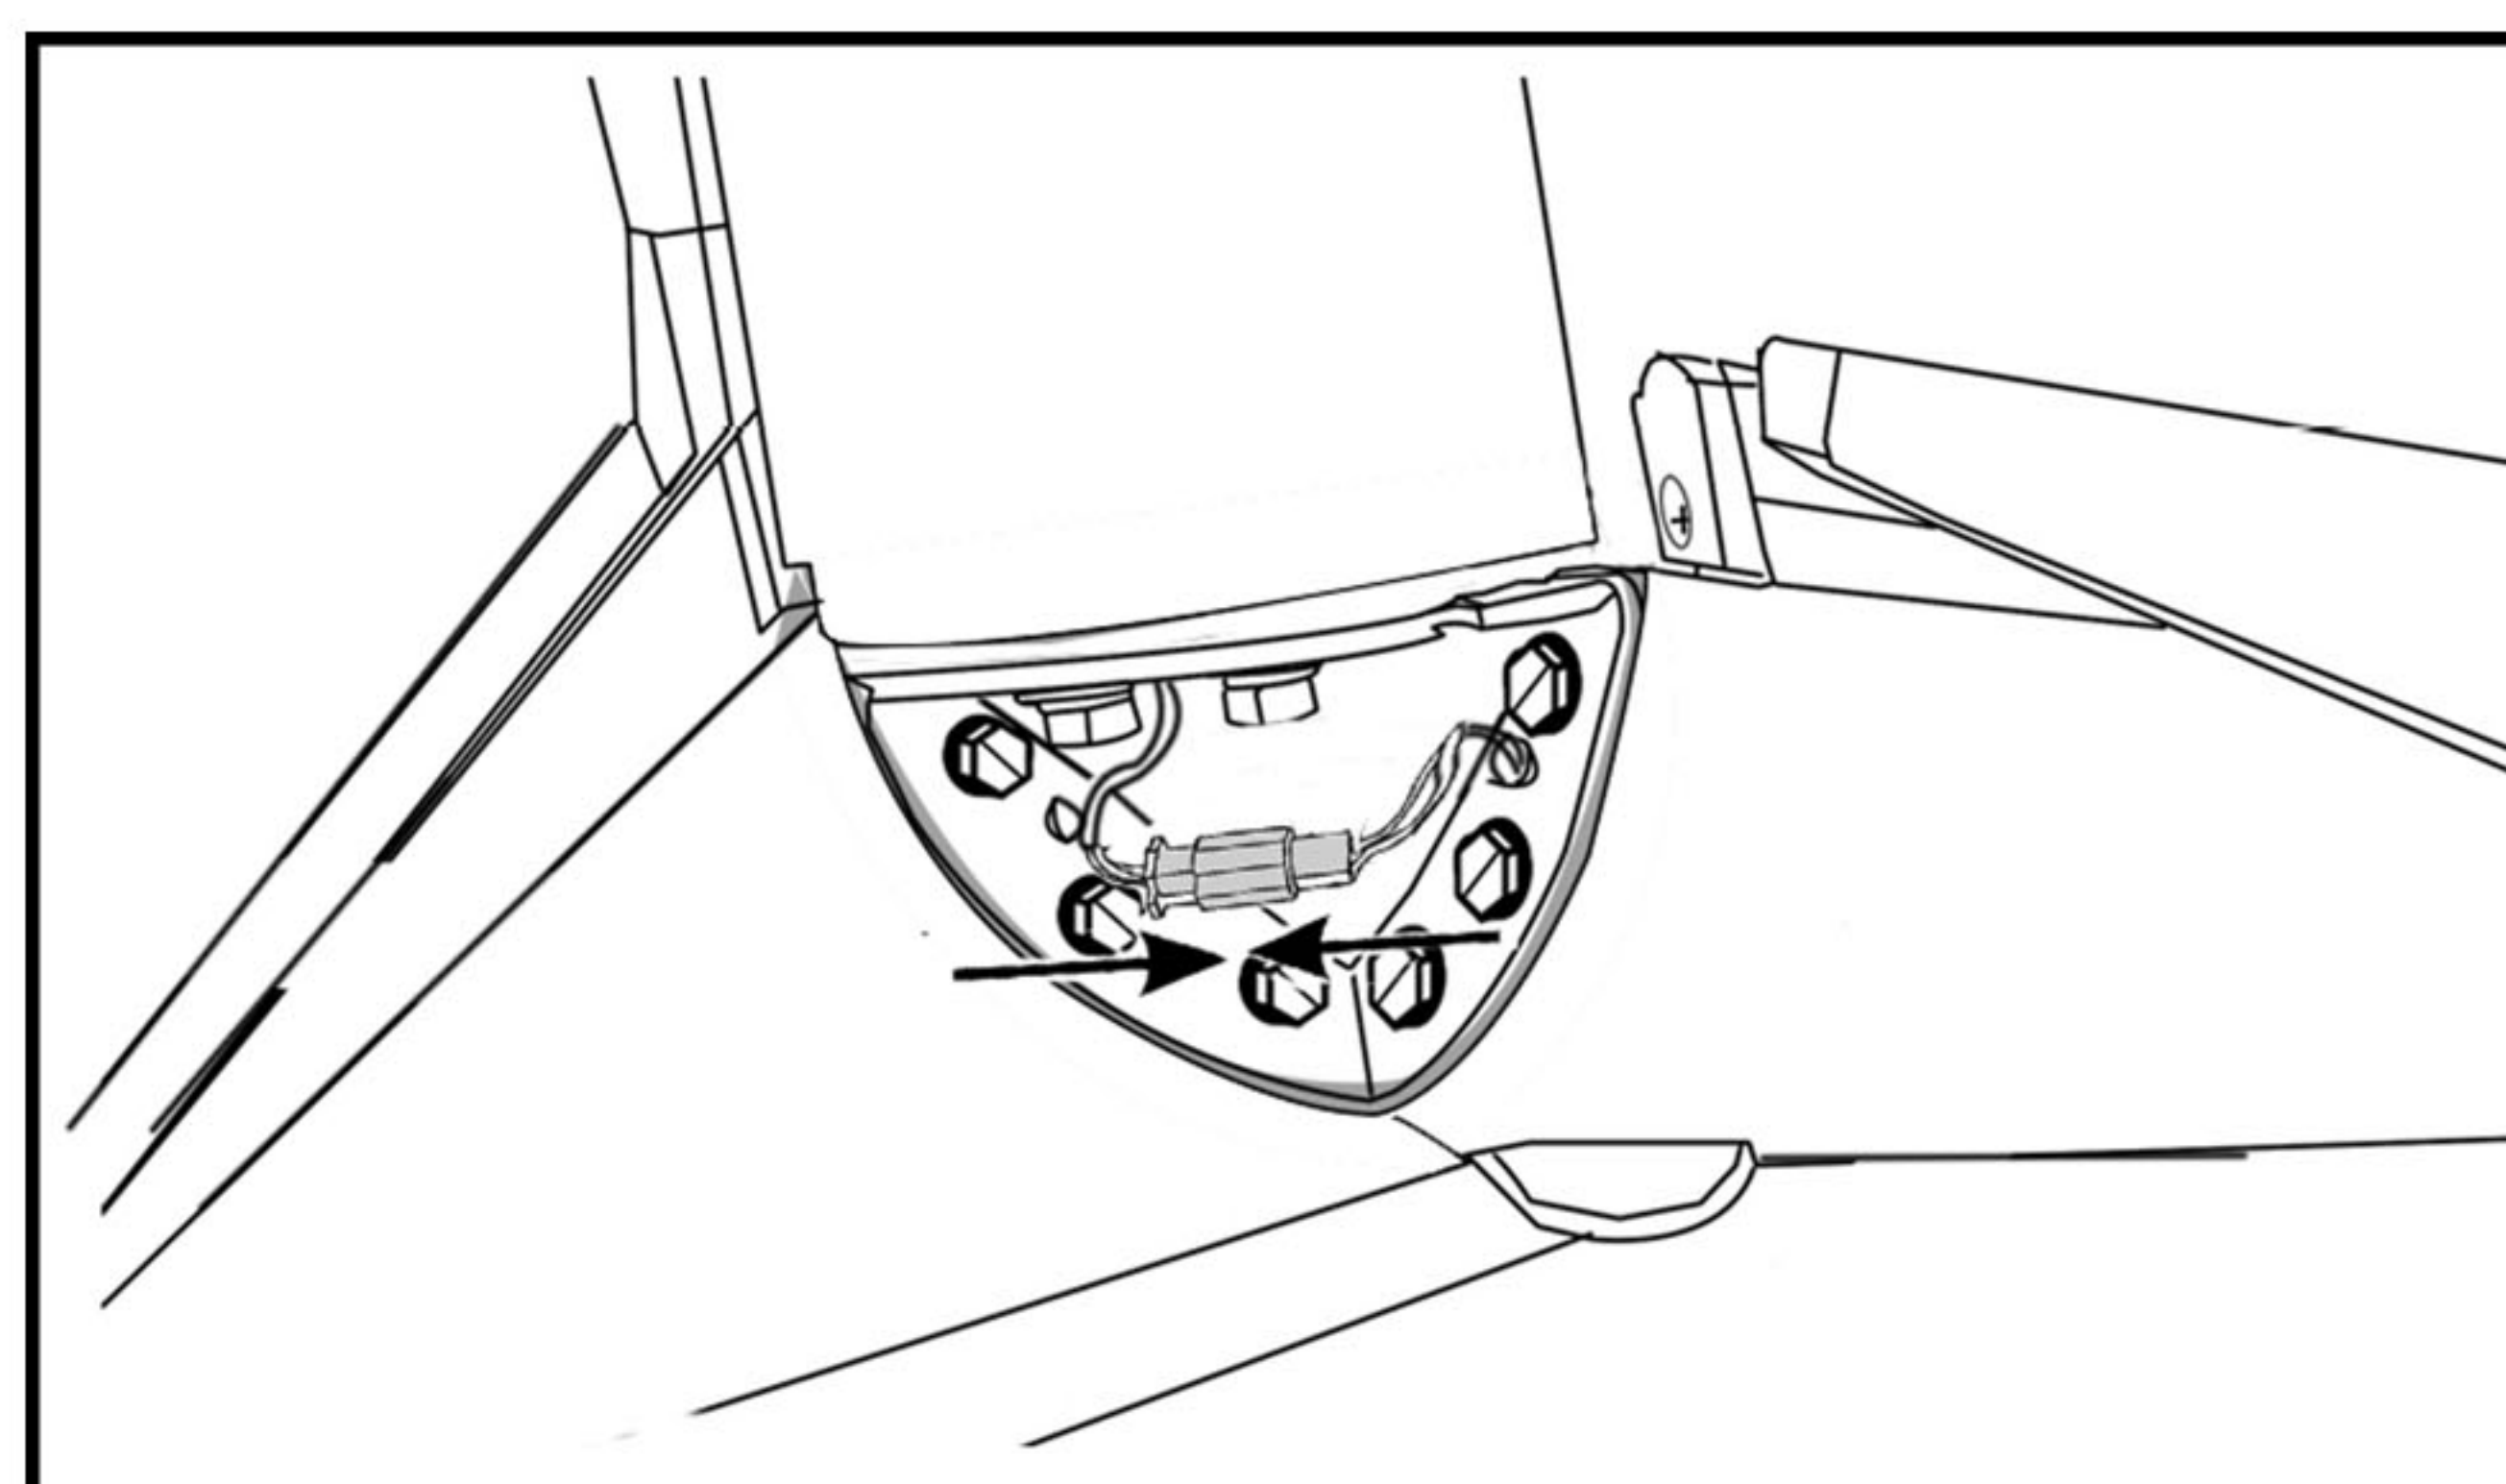




## 5. Assembly rear water channel





### Water channel



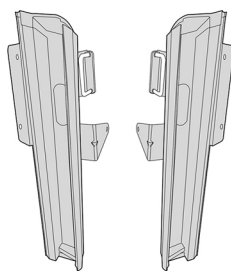


Hex bolt M8x20 = 4 set

Pan Head Tapping Screw 6x3/8 = 4 pcs.

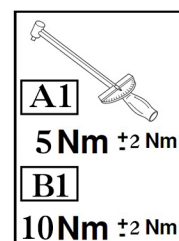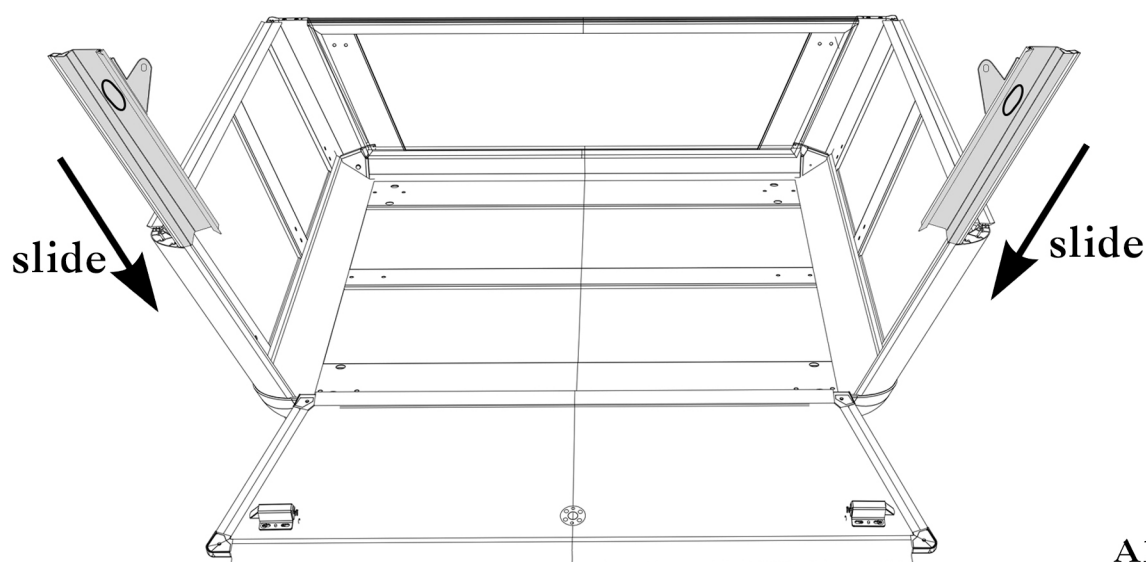

**Note: Pre-assembly fastener  
by hand then tighten by tool**

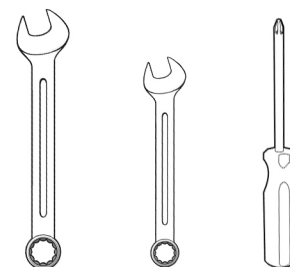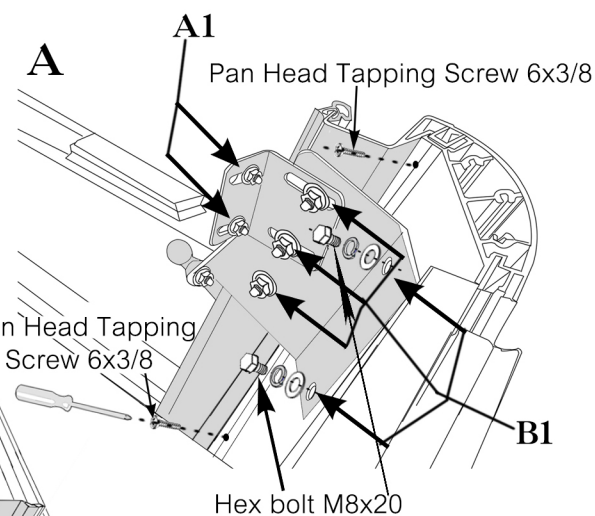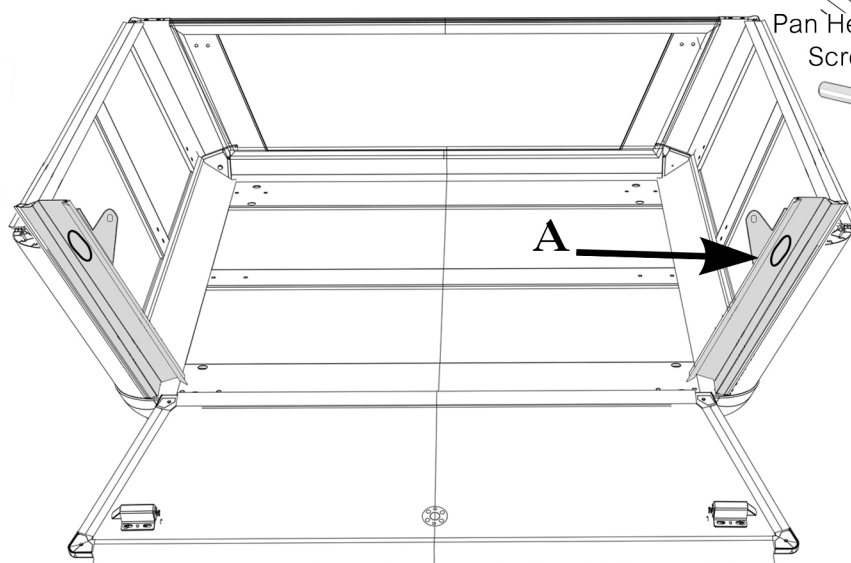

No. 12   No. 10



### WARNING


- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS




## 6. Attache front corner cover LH-RH



Cleaning  
surface  
before  
applying  
tape glue

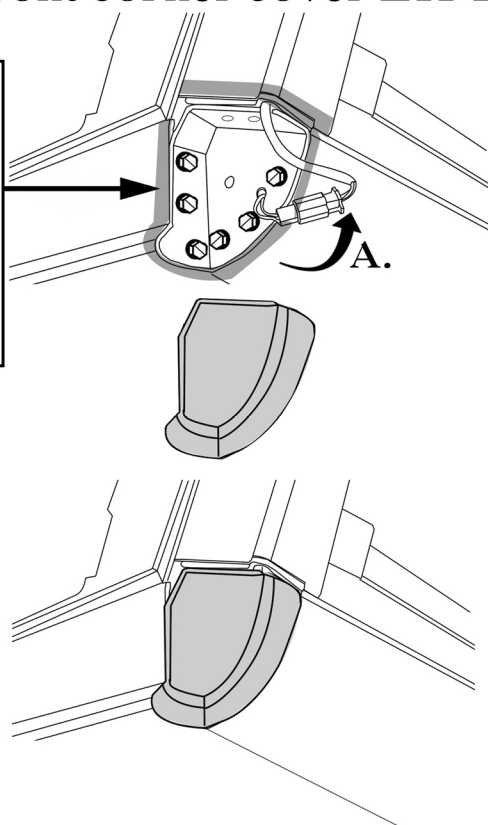


A. tighten the bolt from inside

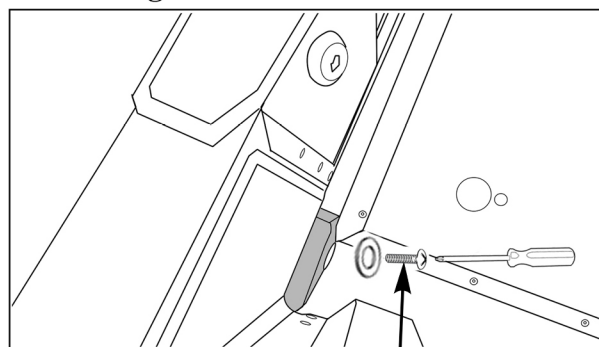


Pan Head Bolt M6x10

## 7. Attache rear corner cover LH-RH

Cleaning  
surface  
before  
applying  
tape glue

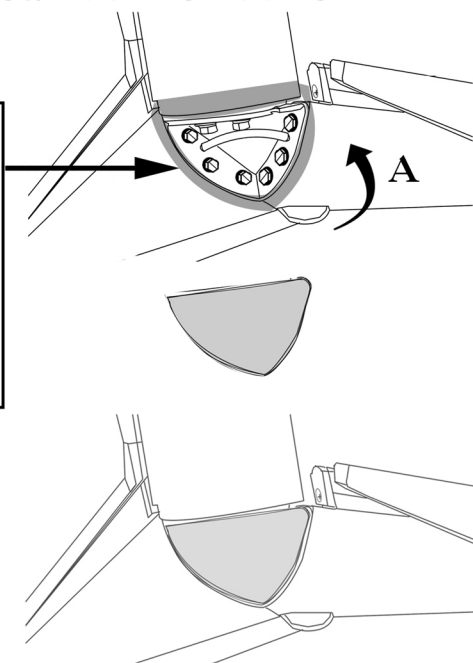


A. tighten the bolt from inside

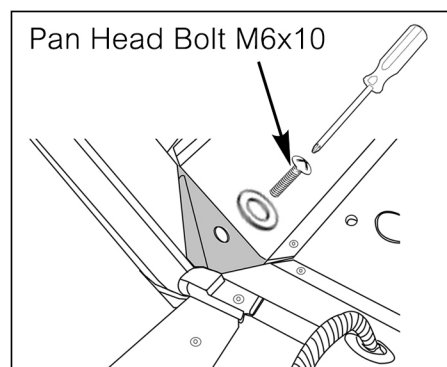


Pan Head Bolt M6x10



## 8 Attache front rubber pad on the front panel bed

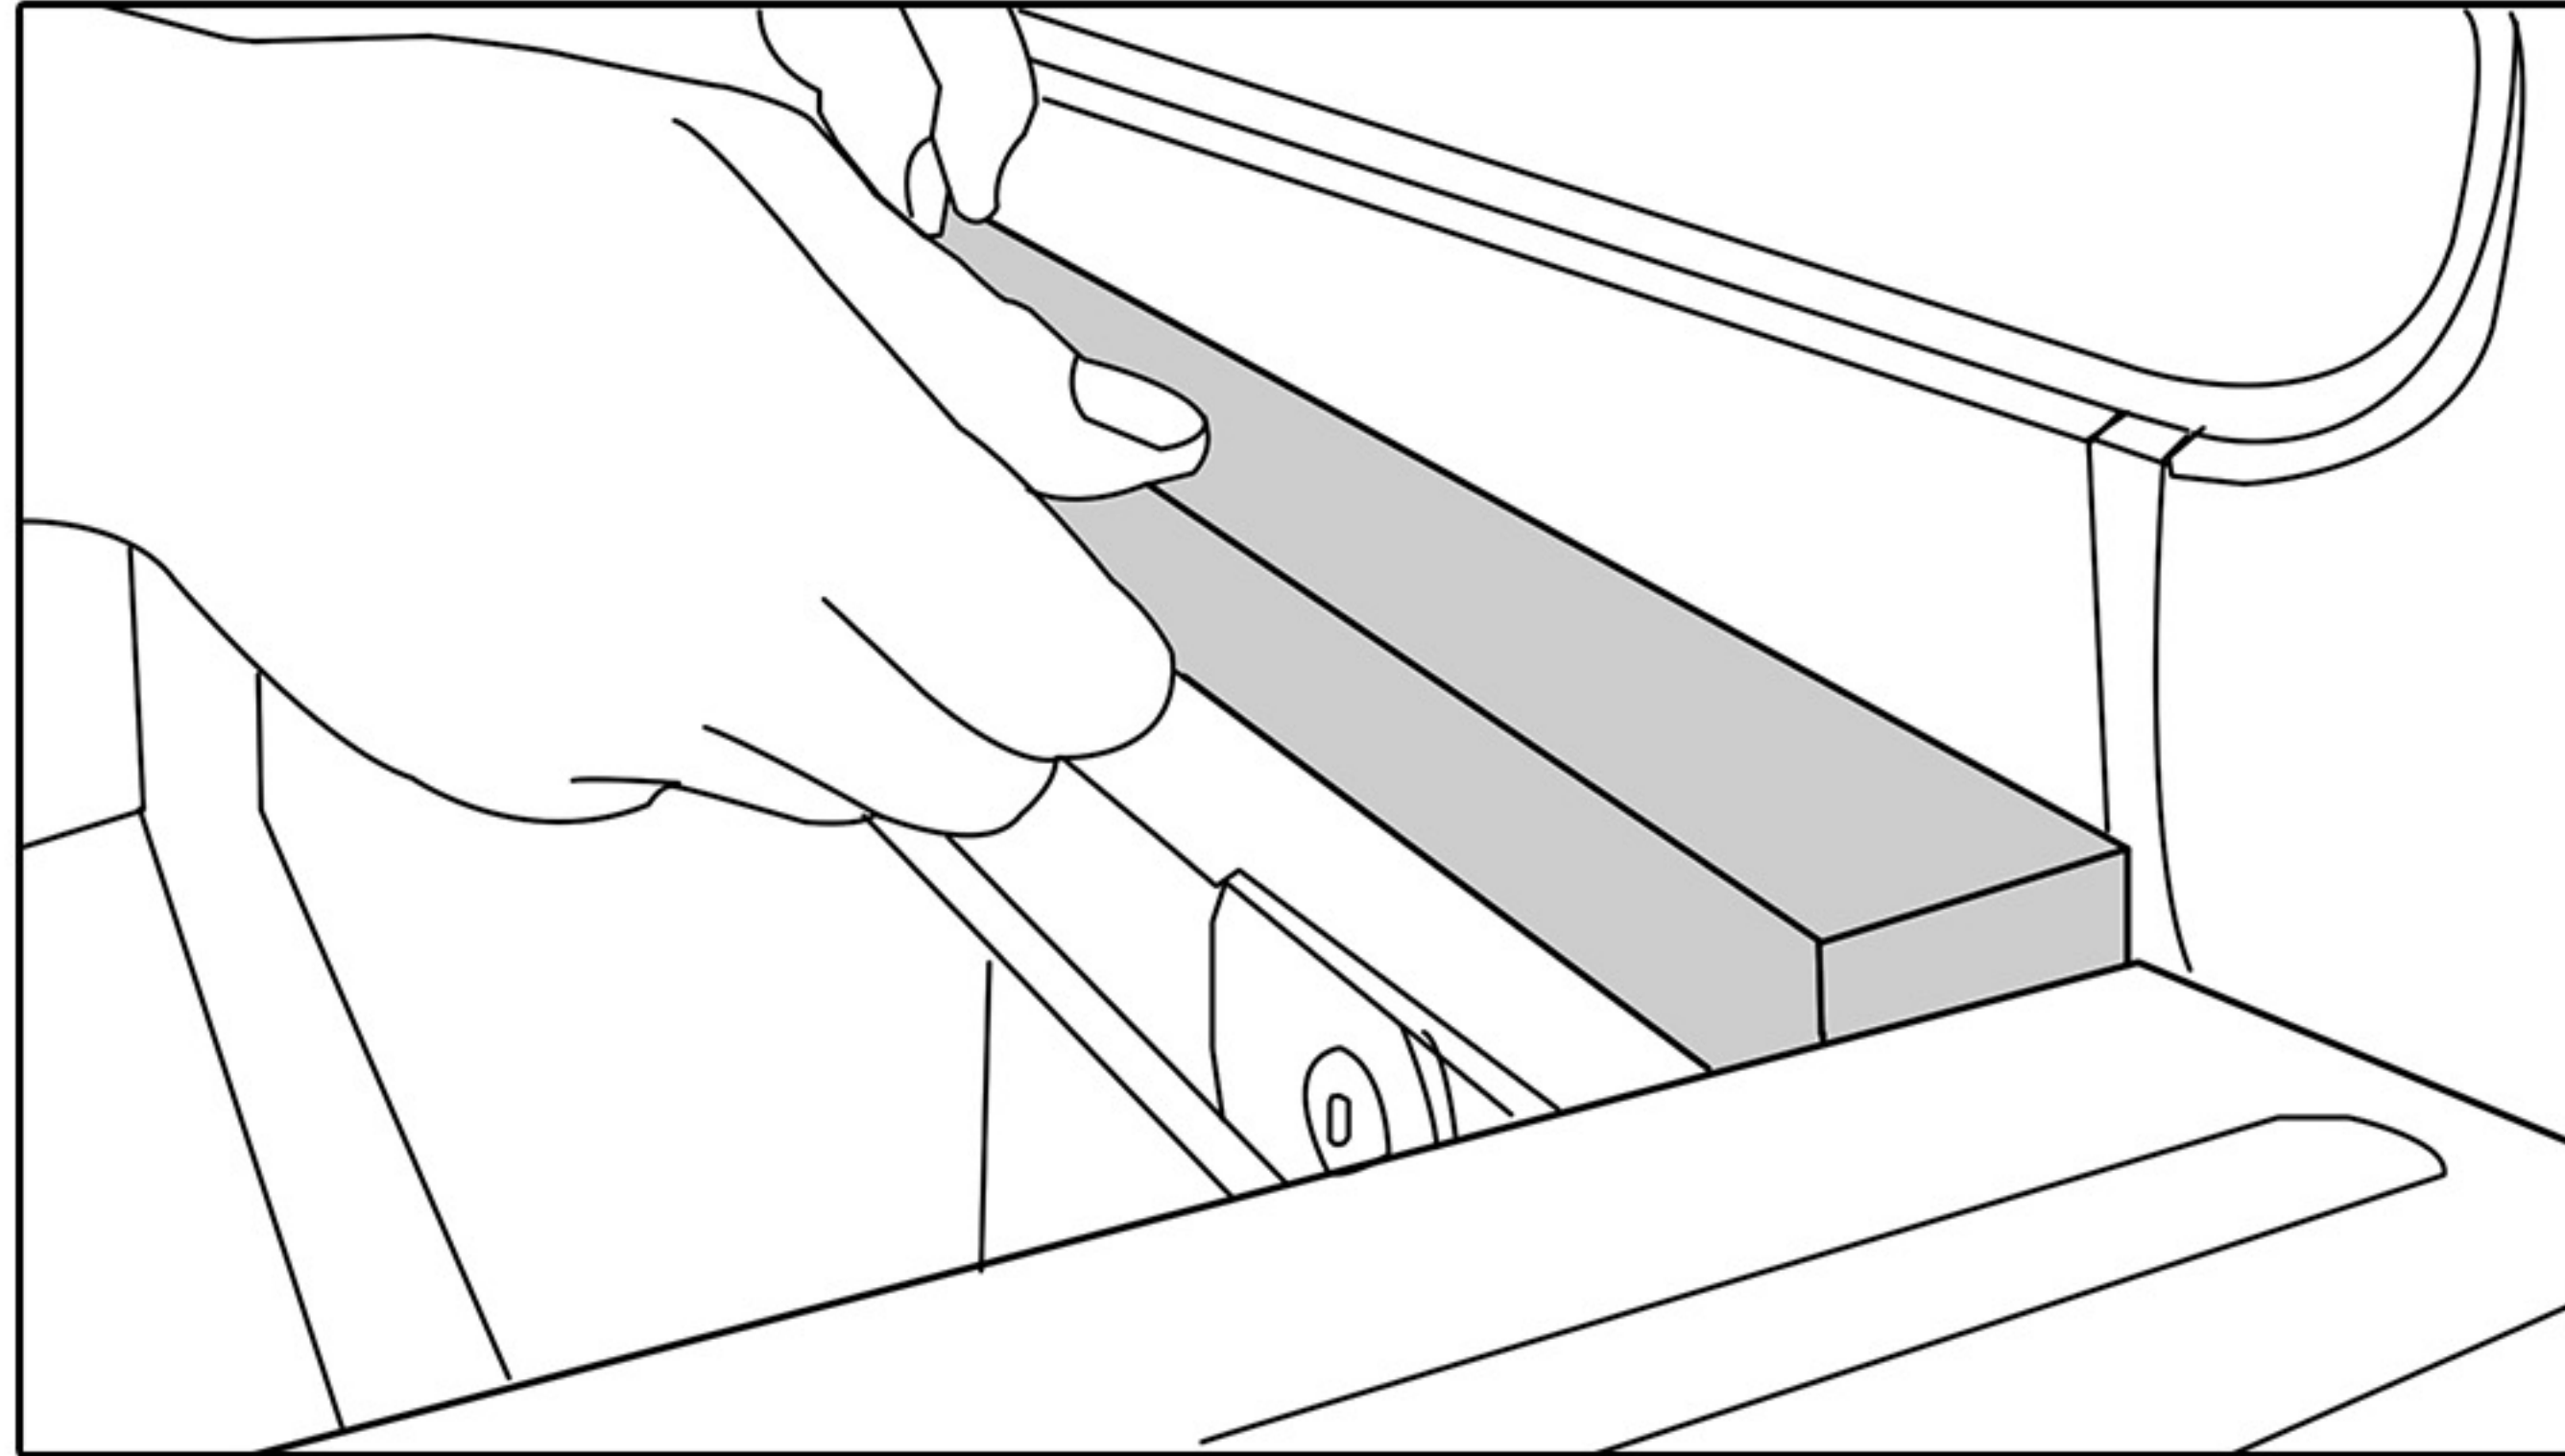

## 9. Install the canopy on truck bed



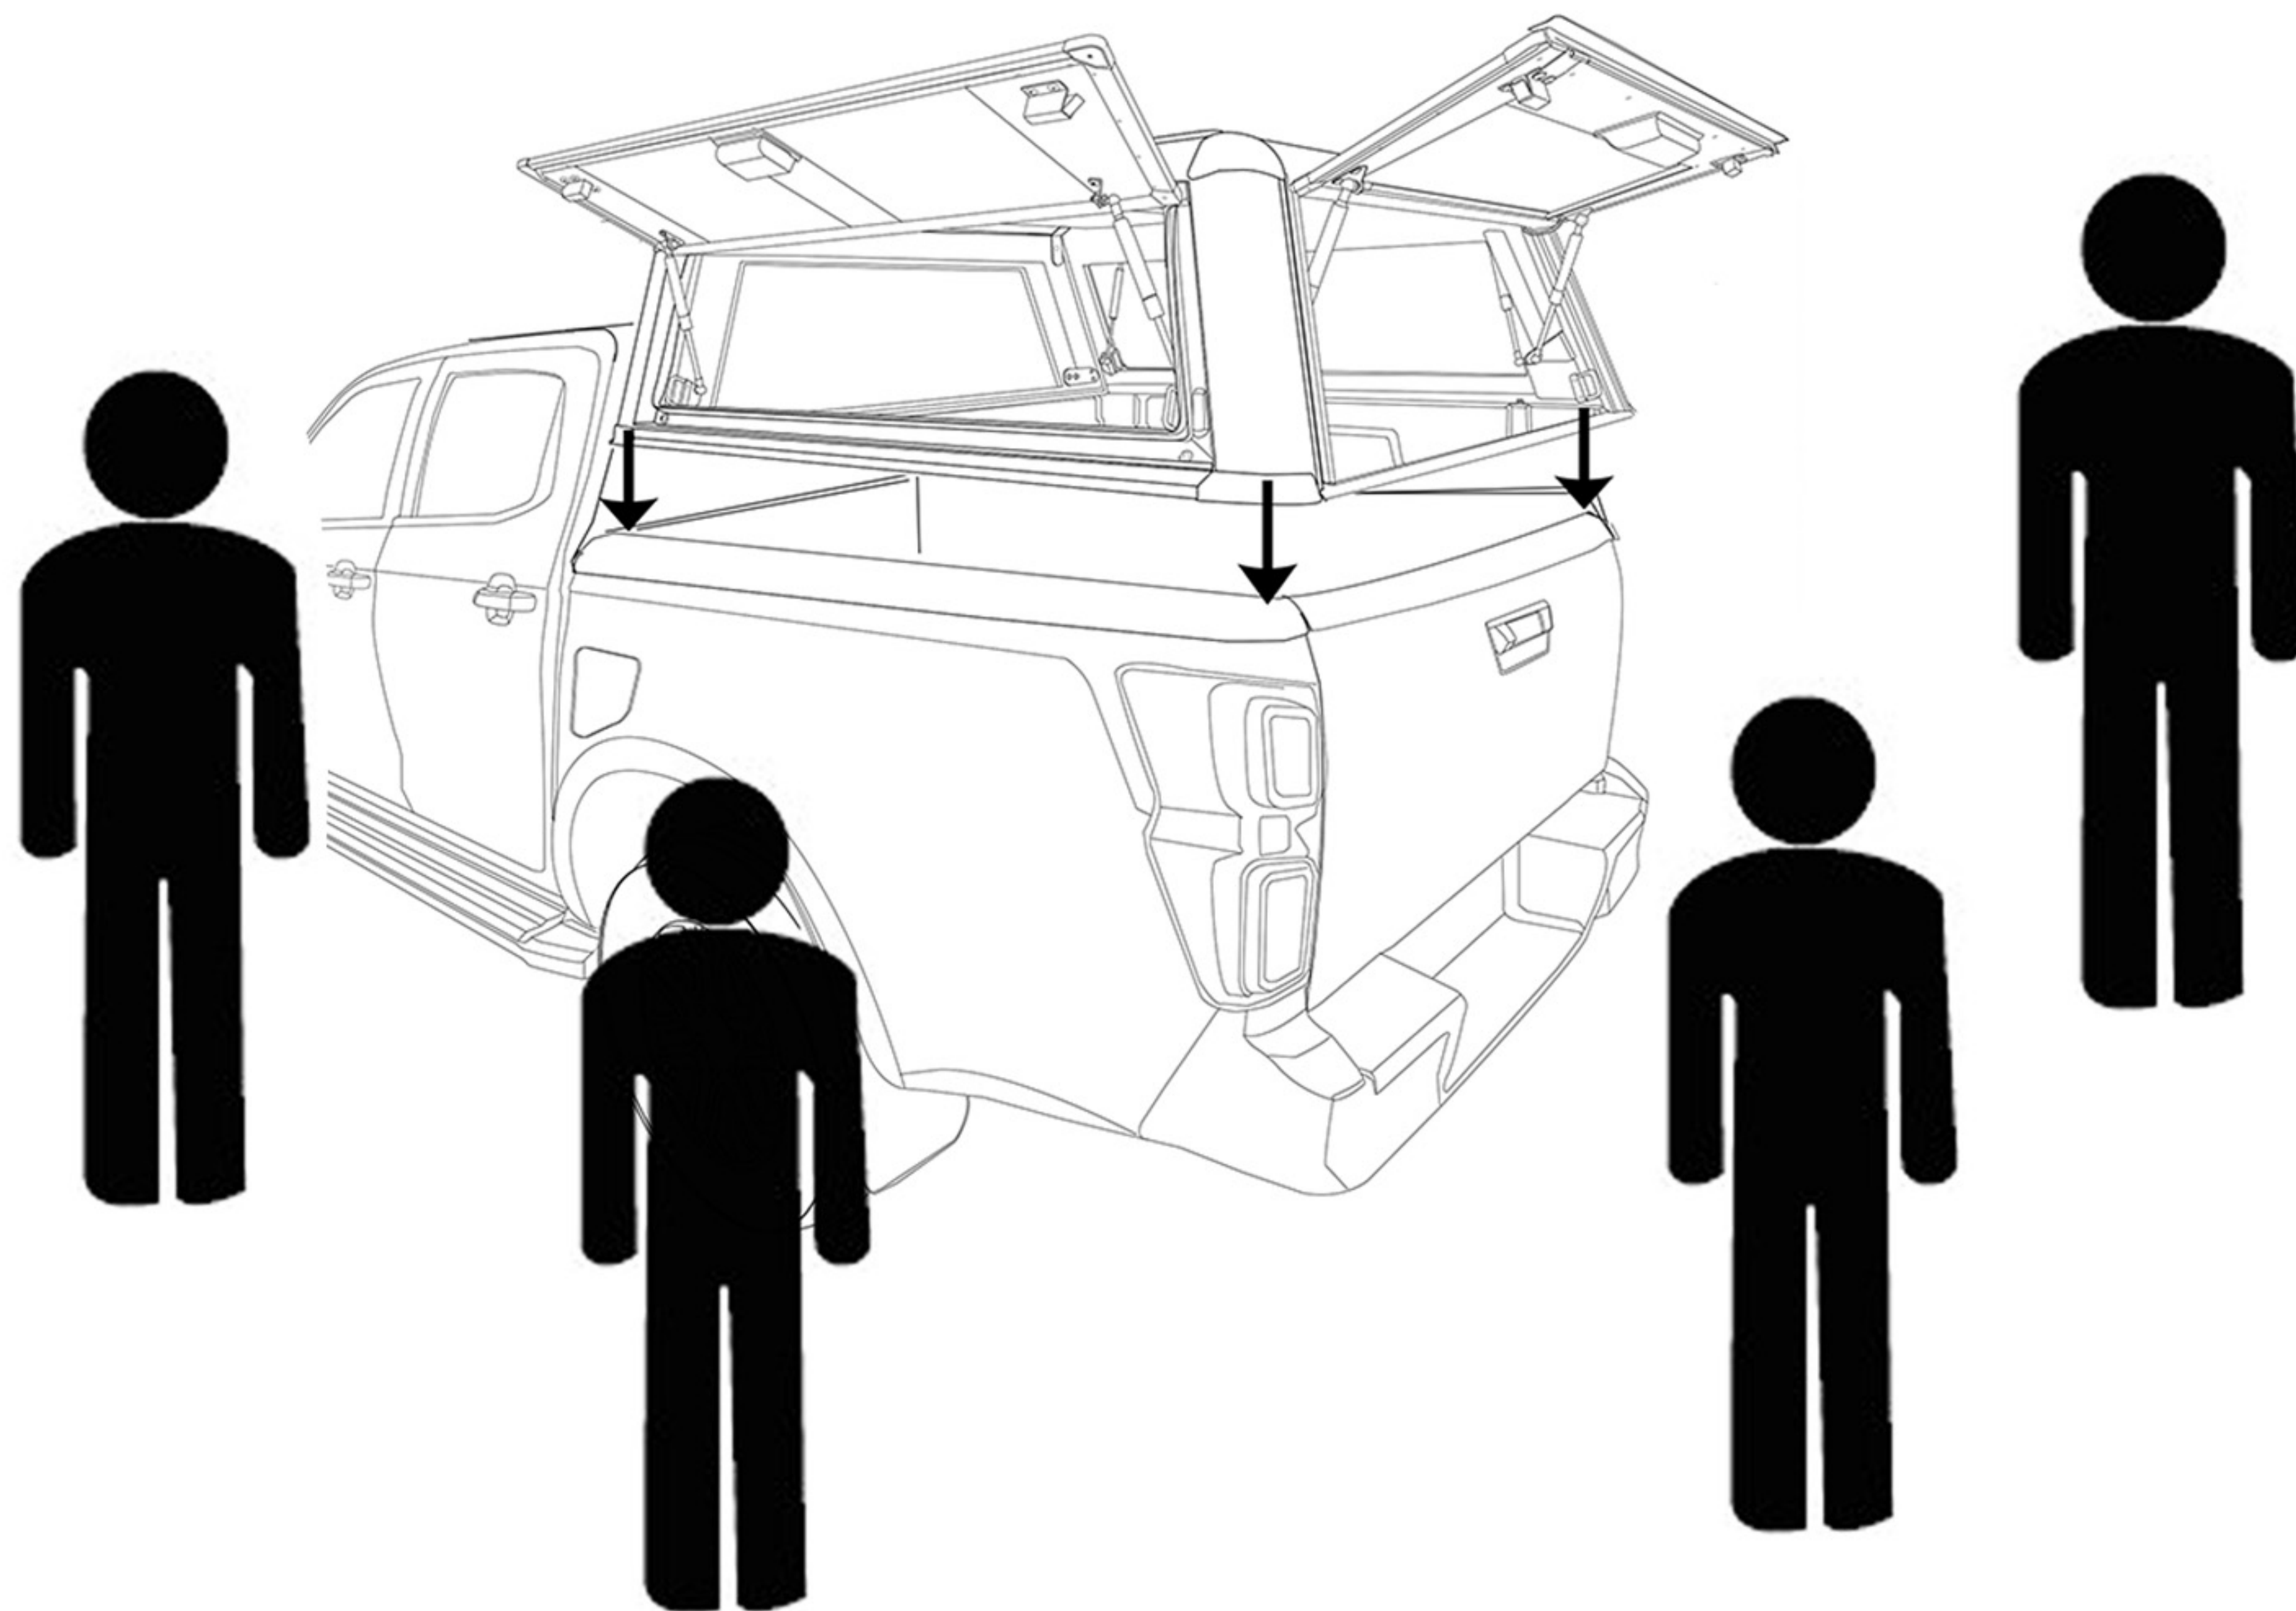


- A MINIMUM OF FOUR PEOPLE ARE RECOMMENDED TO PICK UP AND PLACE THE CANOPY ONTO THE TRUCK.
- TO KEEP FROM DAMAGING YOUR D-RUBBER DURING THE INSTALLATION PROCESS, IT IS IMPORTANT YOU LIFT THE CANOPY IN PLACE AND DO NOT DRAG IT ACROSS THE TRUCK BED RAILS.
- ONCE THE CANOPY IS CENTERED, PLACE CLAMPS IN POSITION.




## 10. Install bracket to truck bed




(bed with C channel)

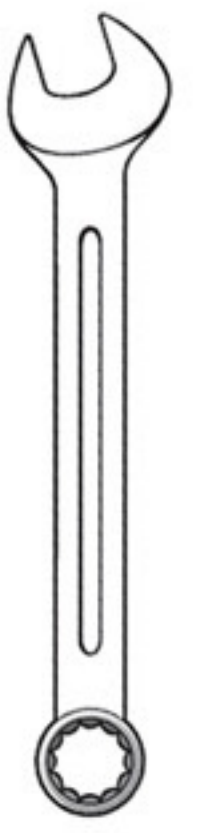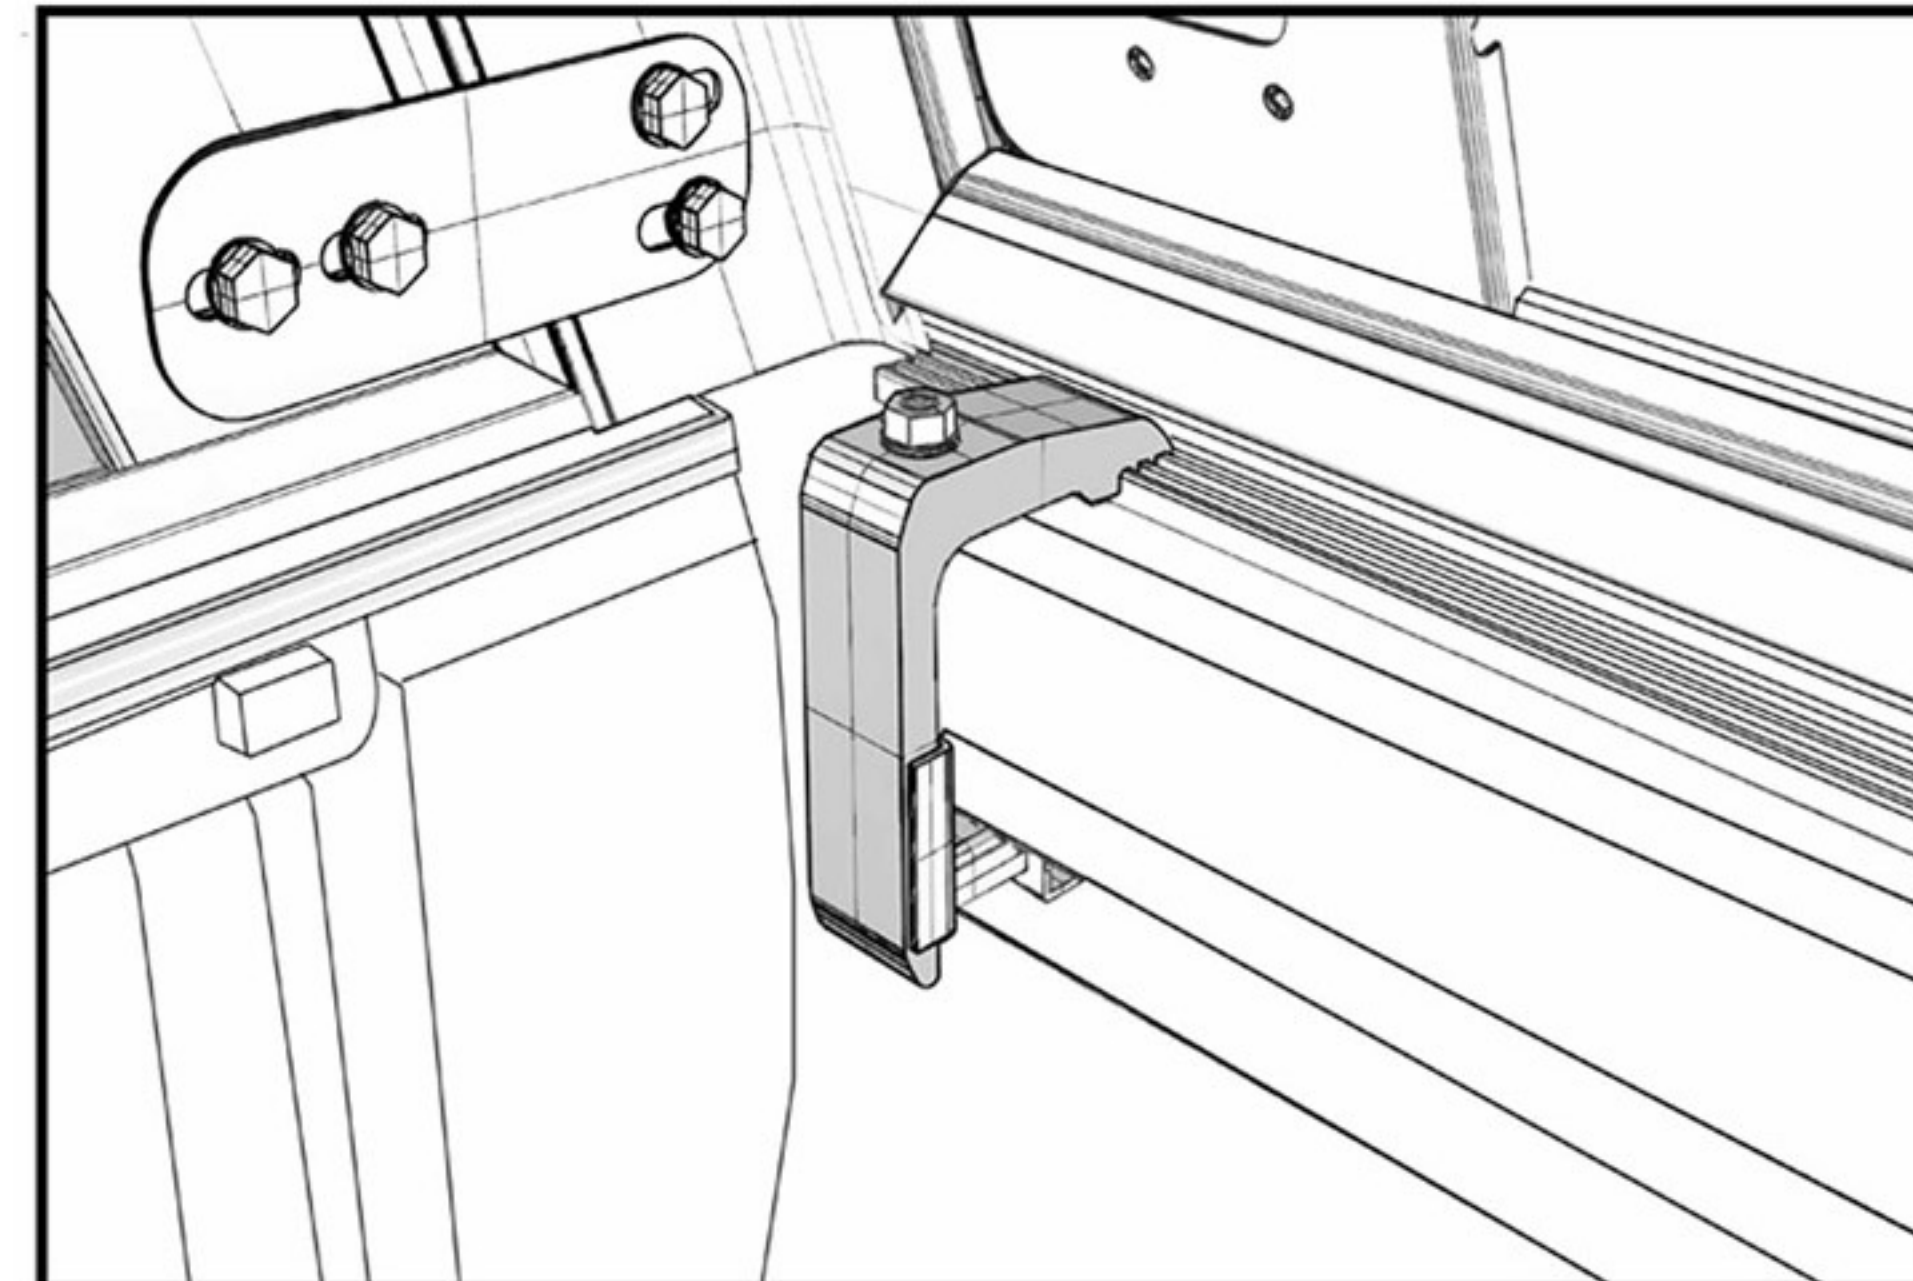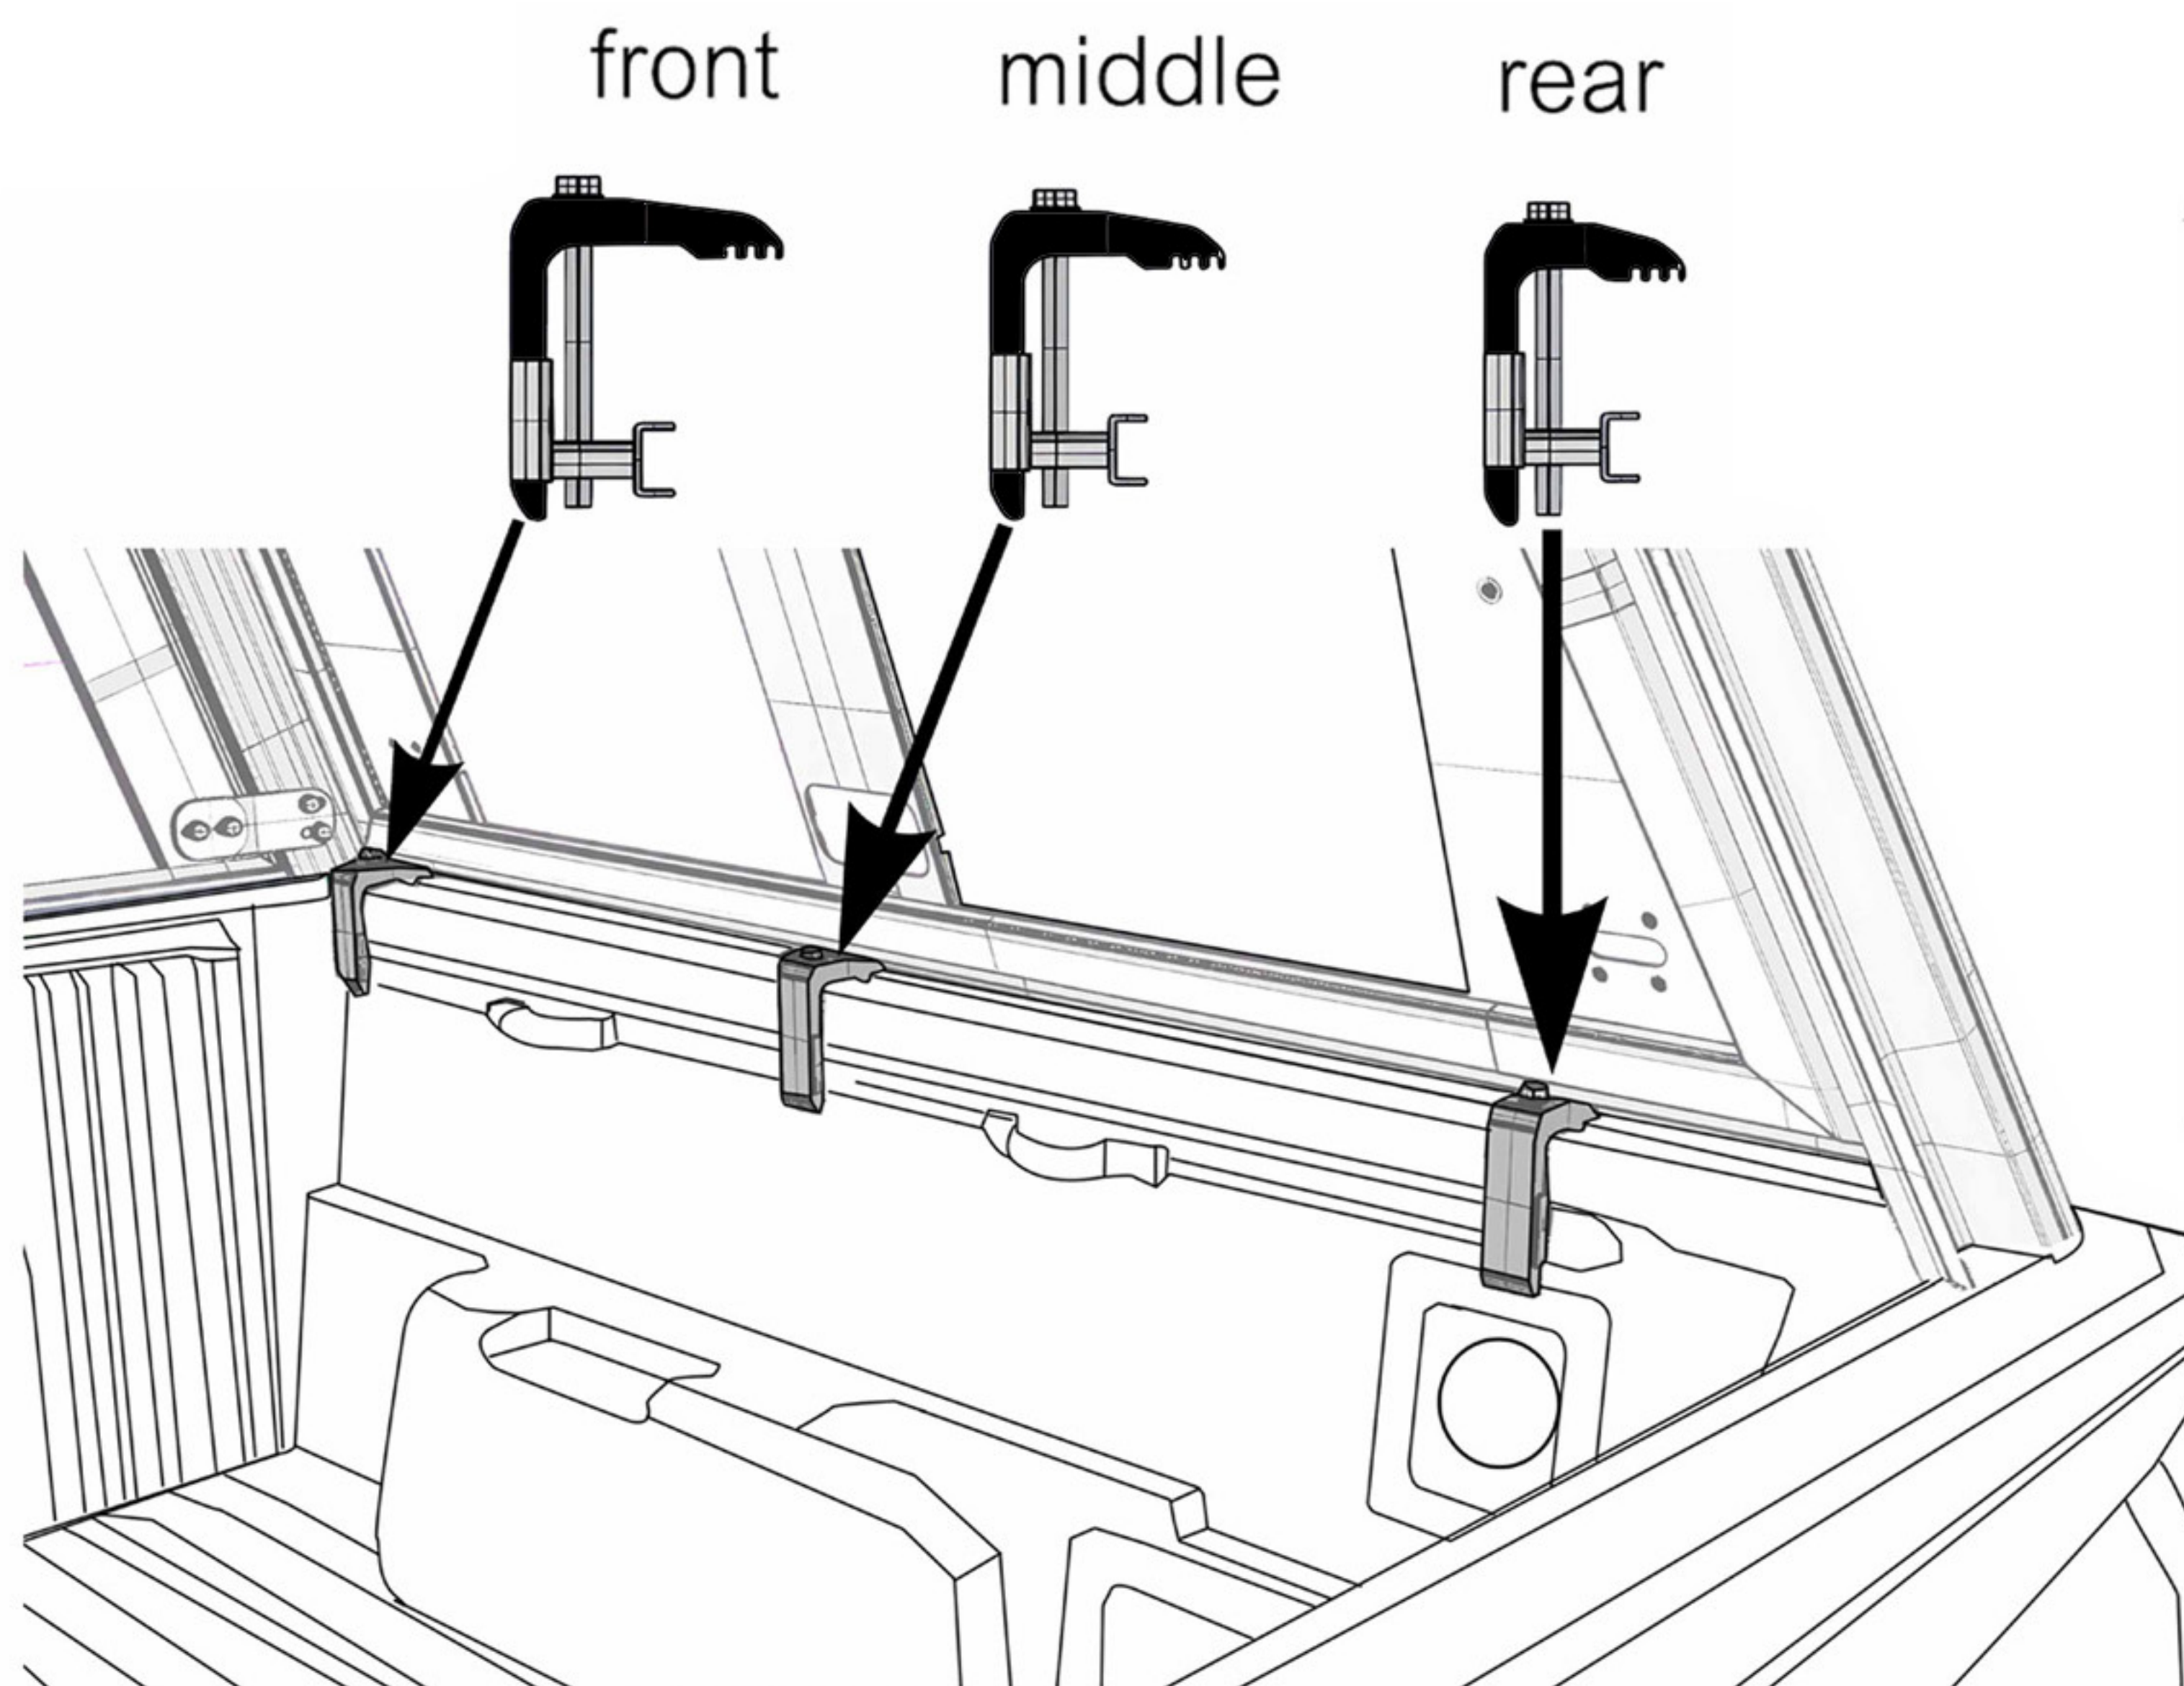

No.13

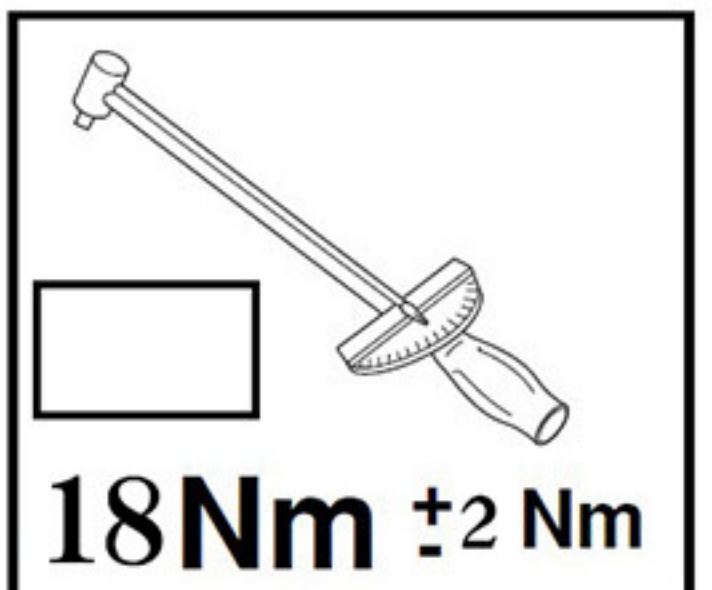

(bed w/out C channel)

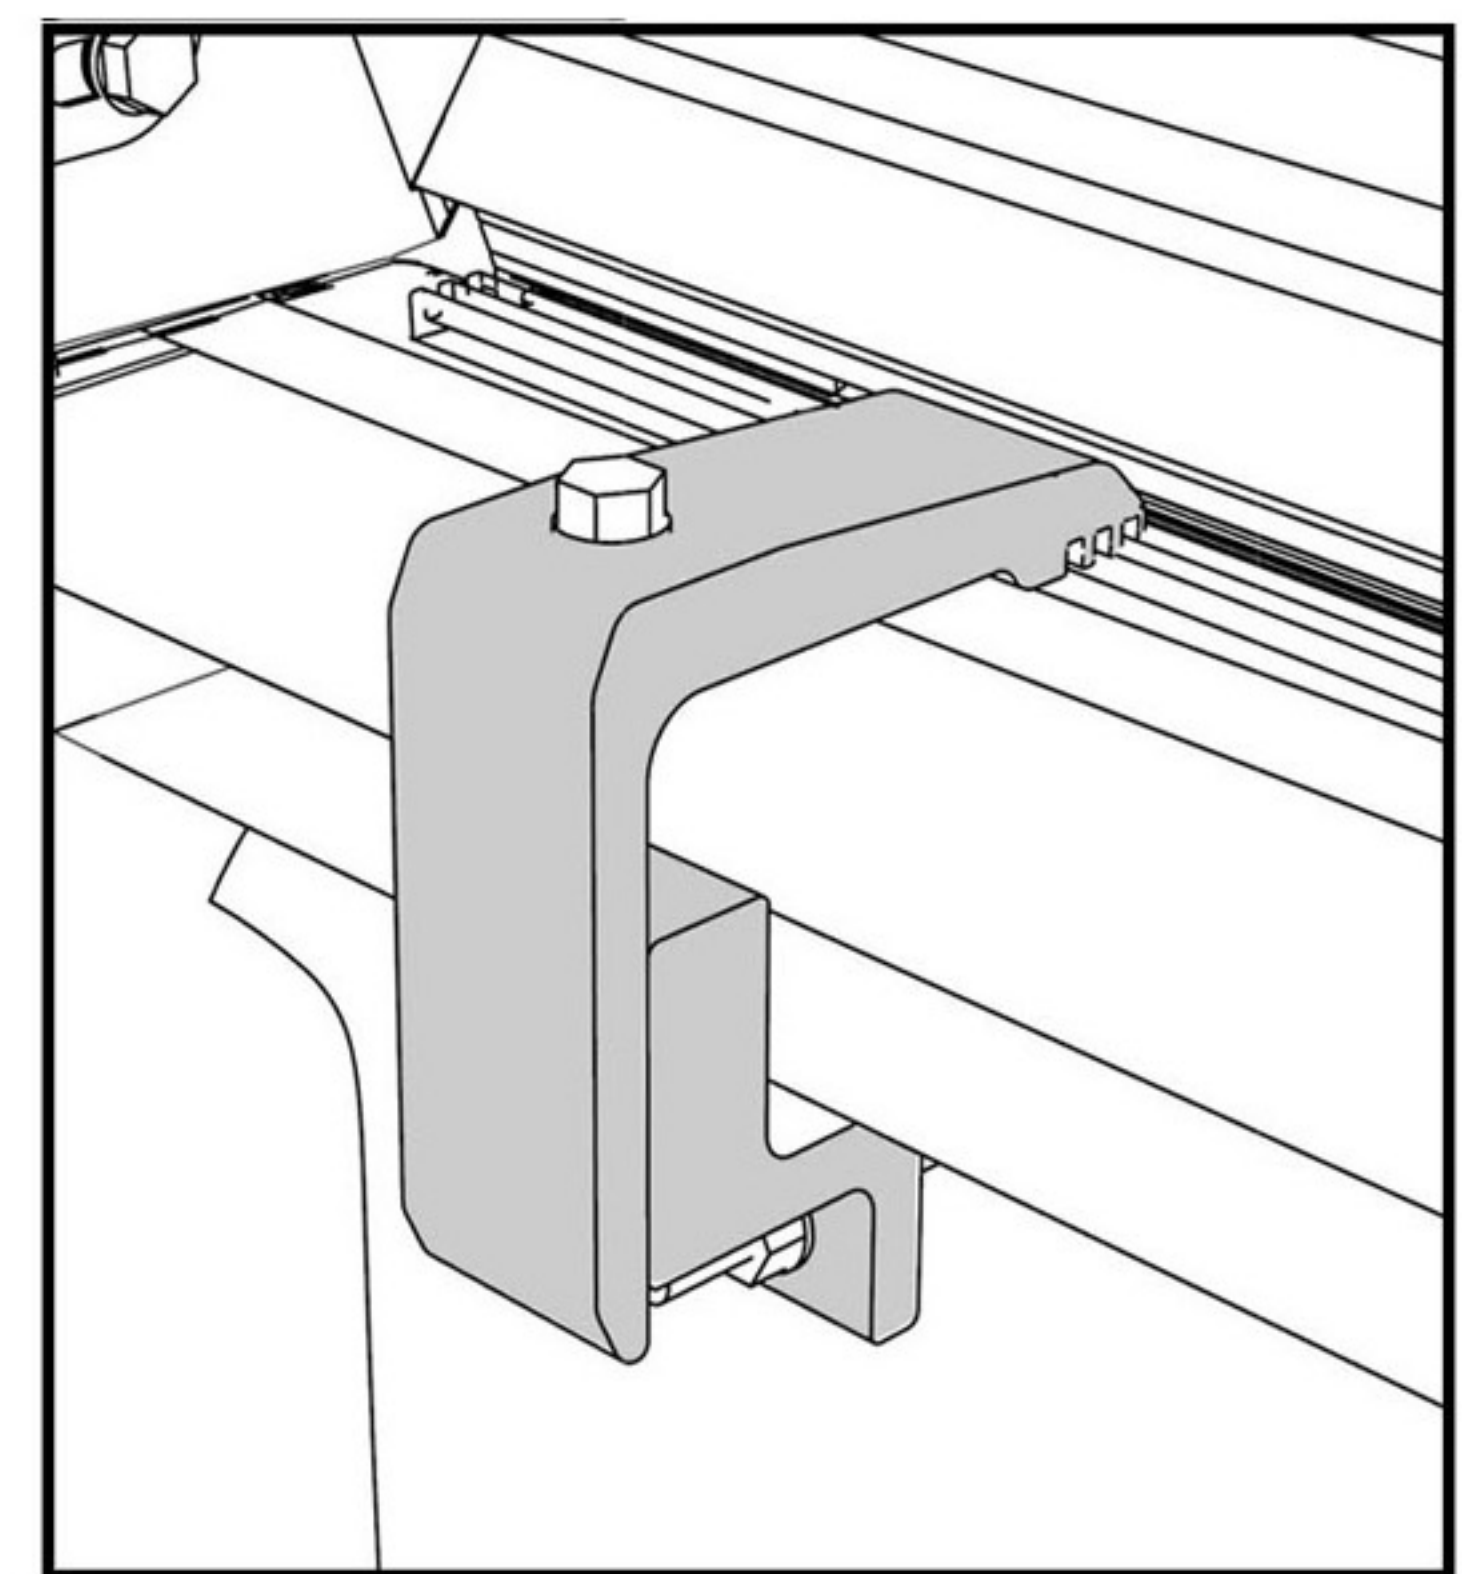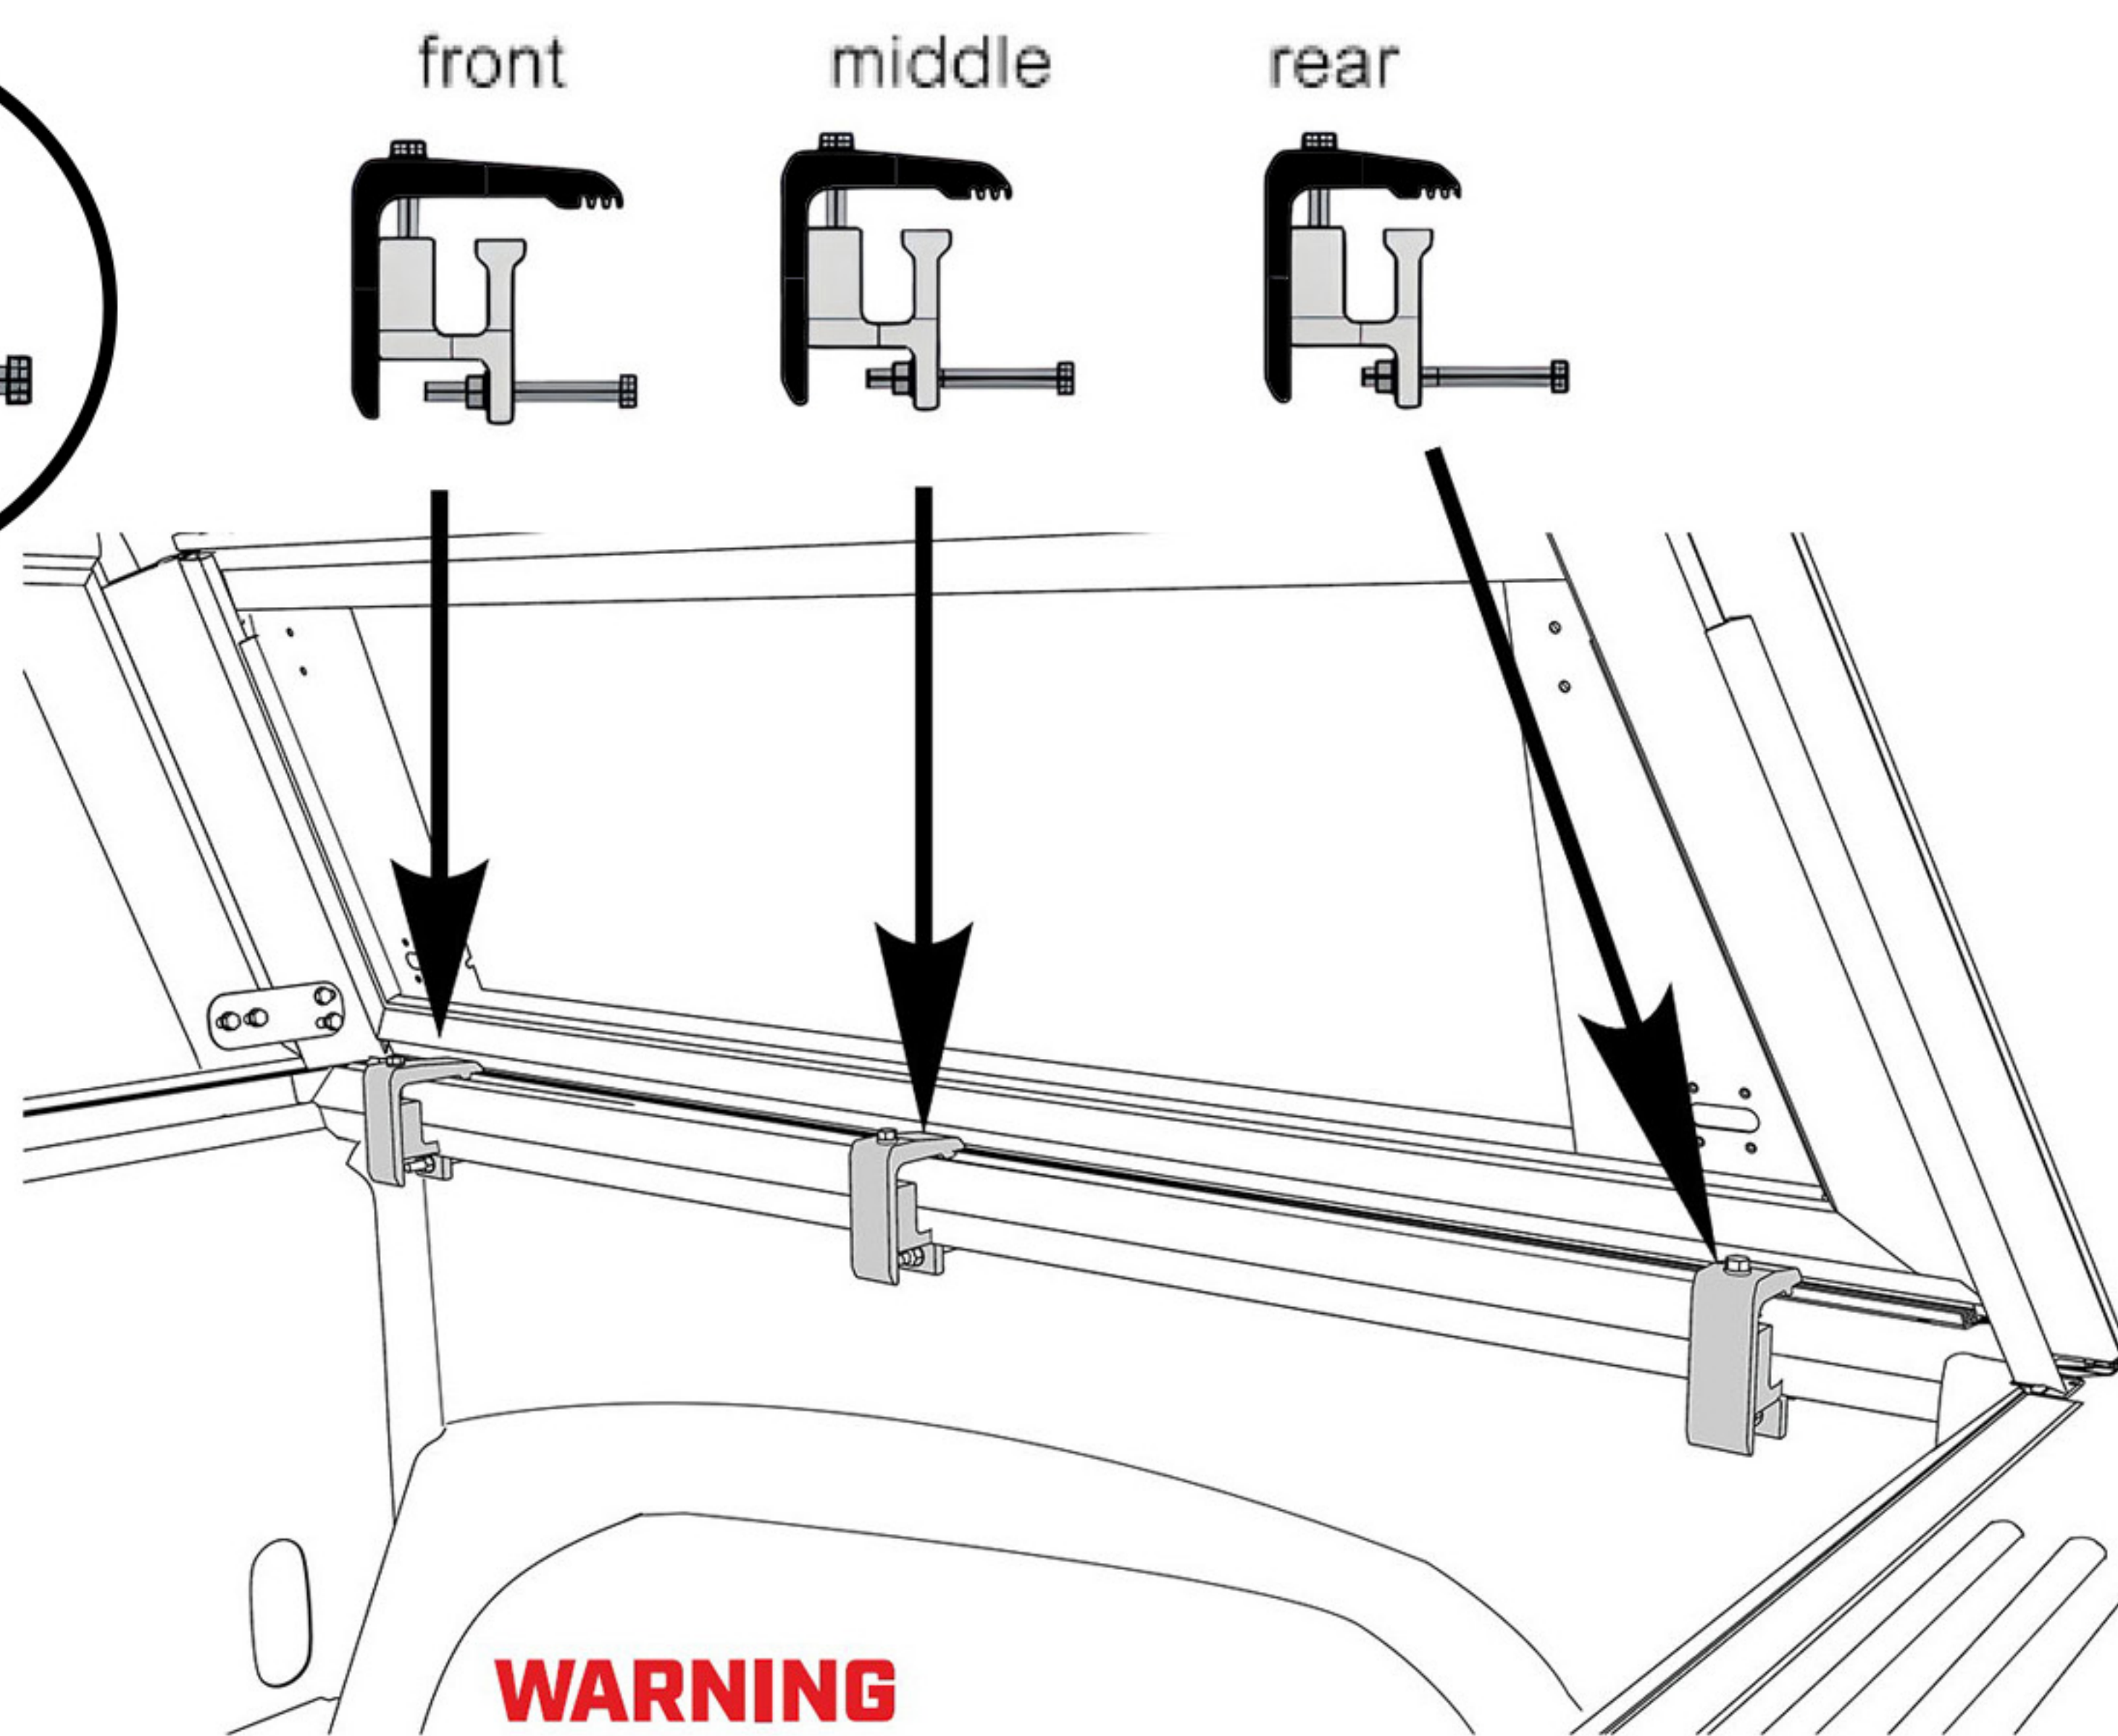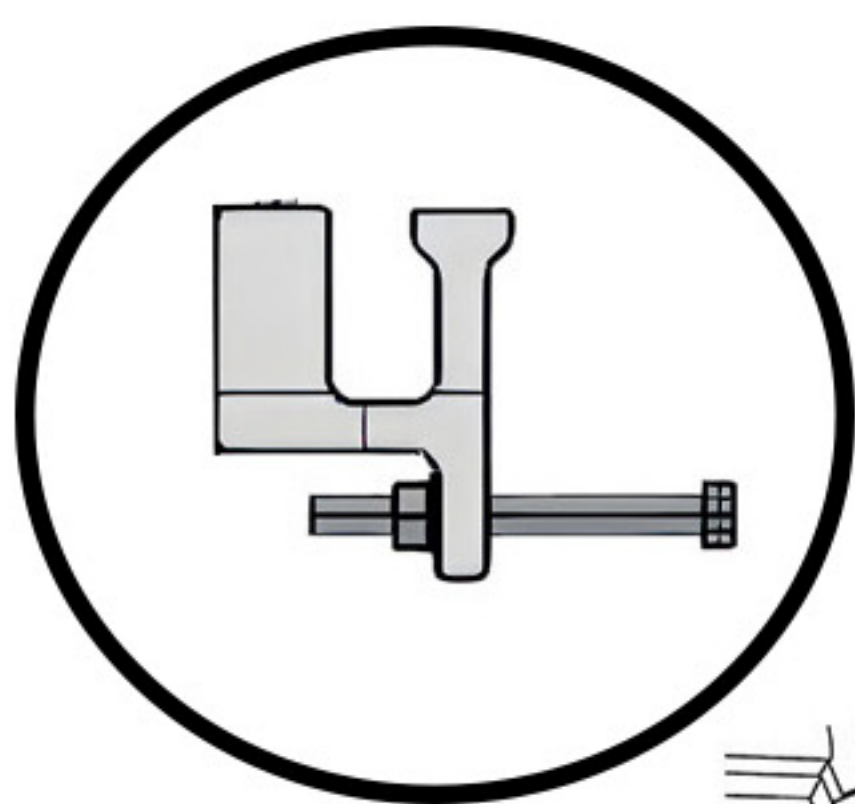


**WARNING**

## 11. Attach gas stud

### WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS

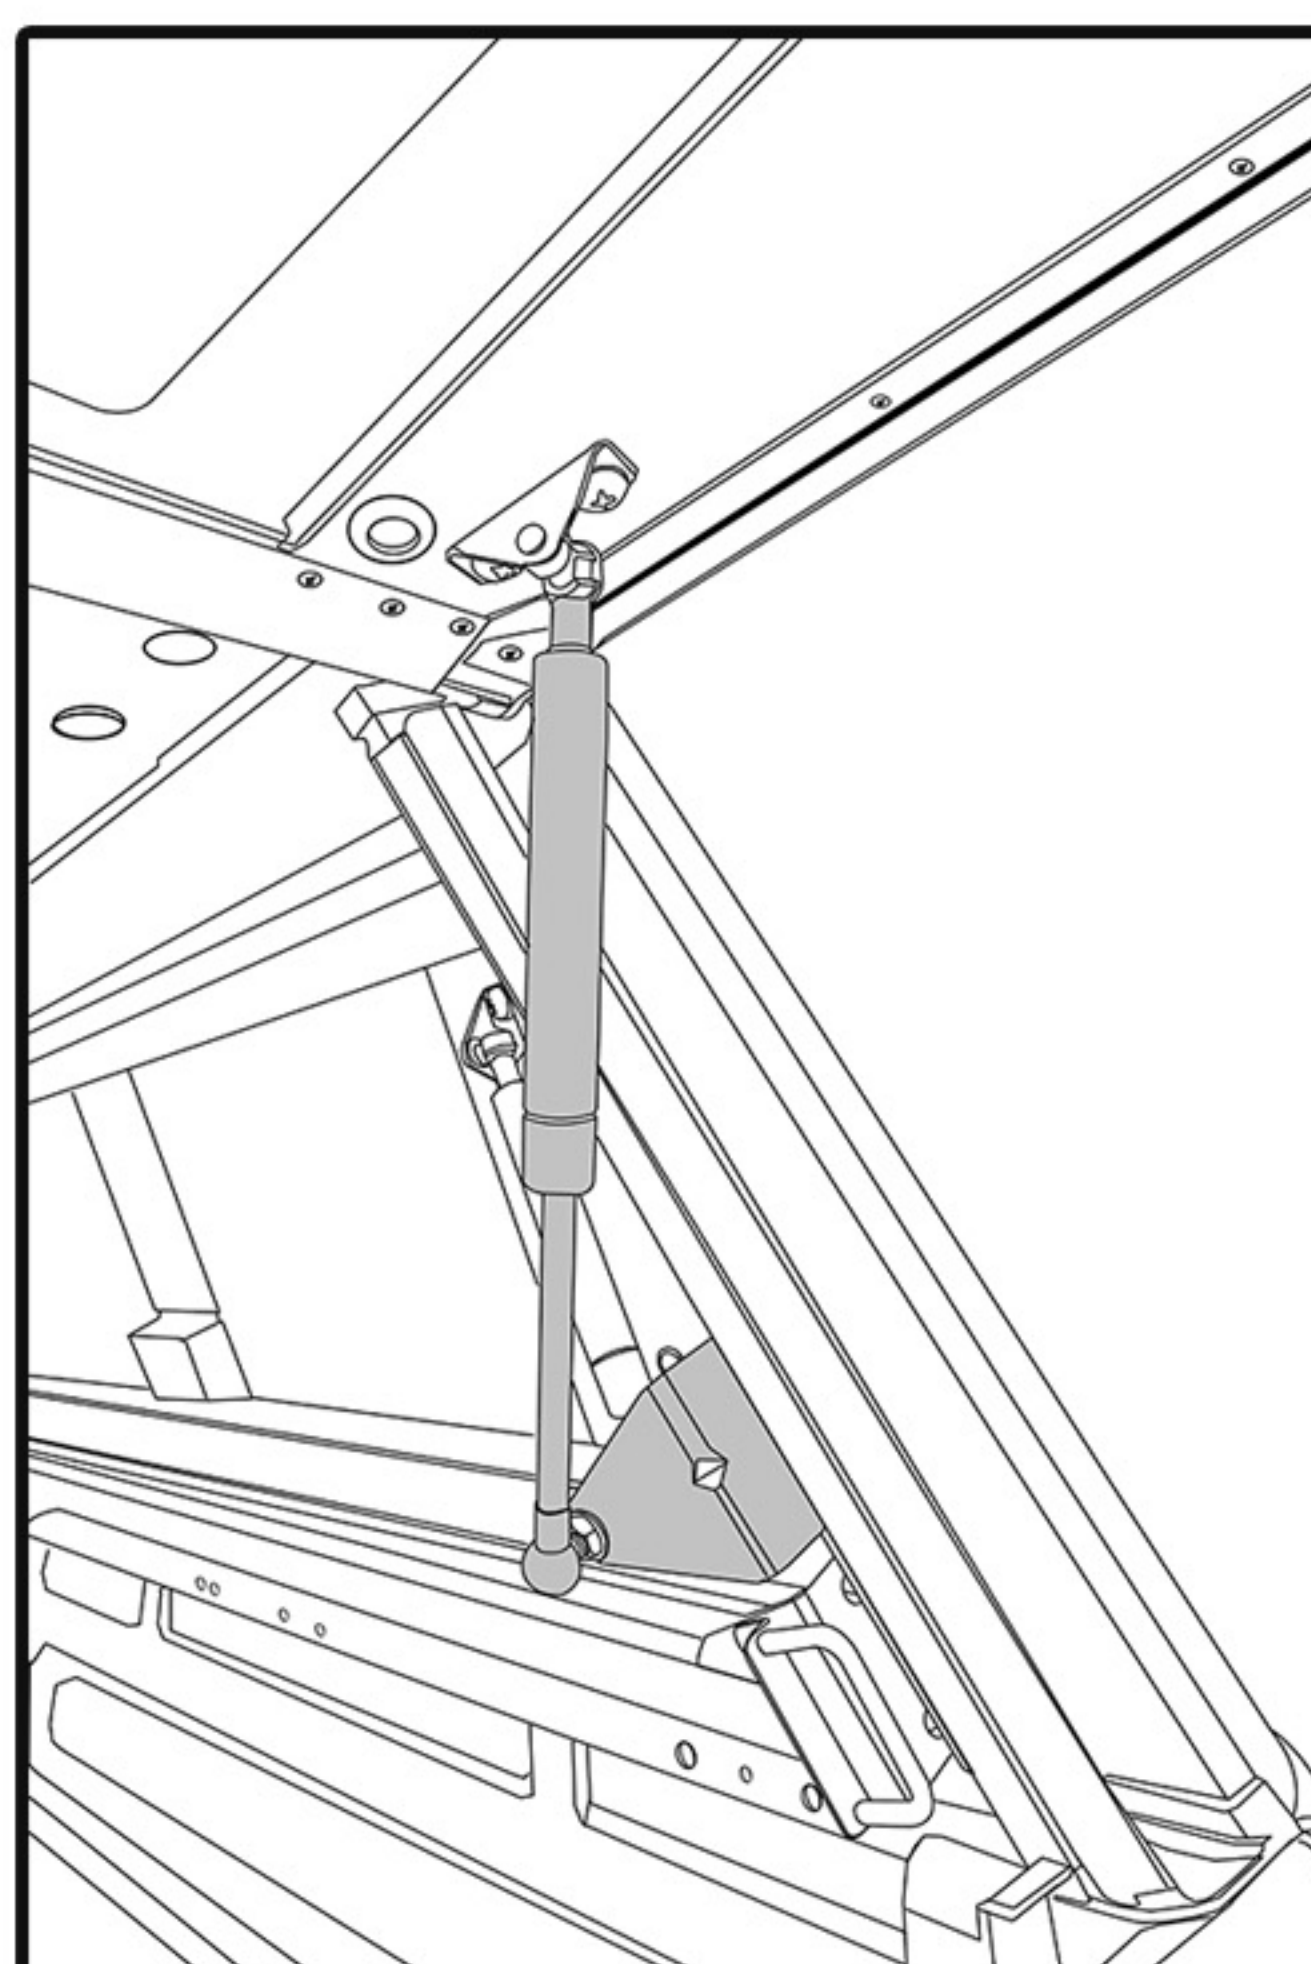







### LED INTERIOR LIGHT

Plug the provided Interior Light Harness at the connector coming from the rear driver side of the topper (Fig A). Tuck the harness into the topper using the rubber grommet (Fig B). The other end of the harness will need to go to the vehicle's battery. Route the harness underneath the vehicle, make sure to avoid any moving parts or exhaust components.

An auxiliary light and key set are include in the packaging.

The installation of your is complete, enjoy your new cap!

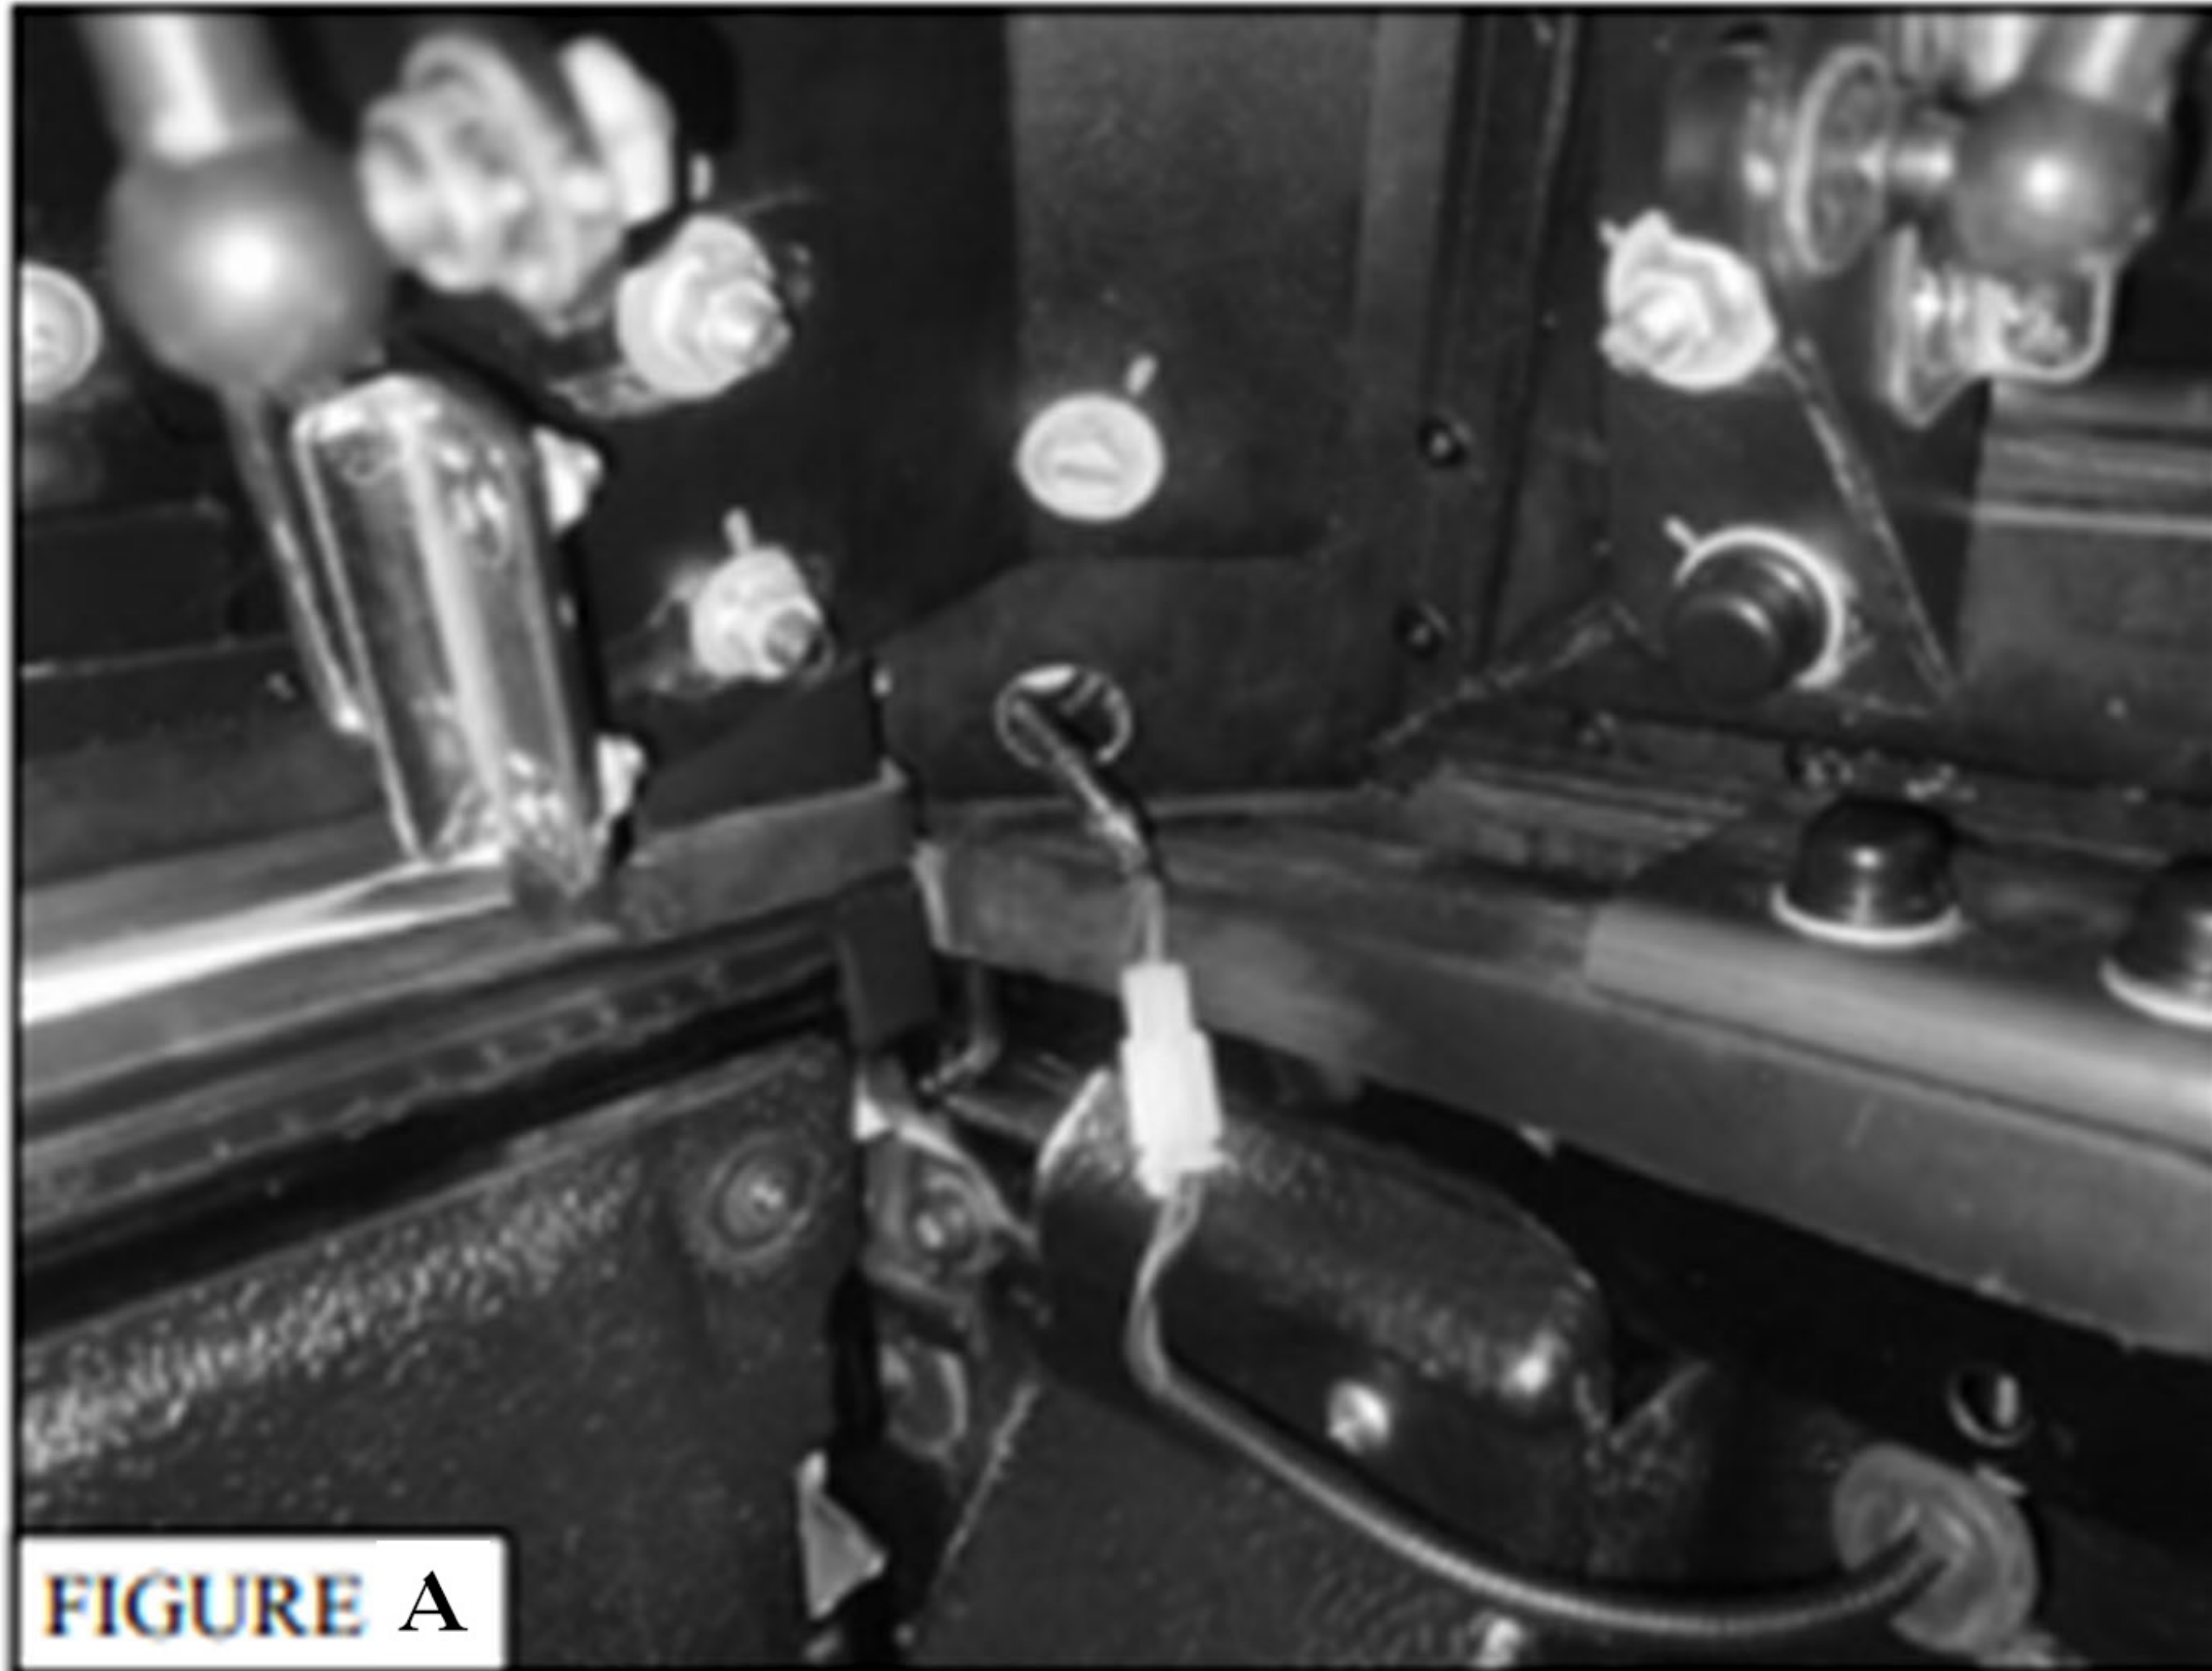


FIGURE A

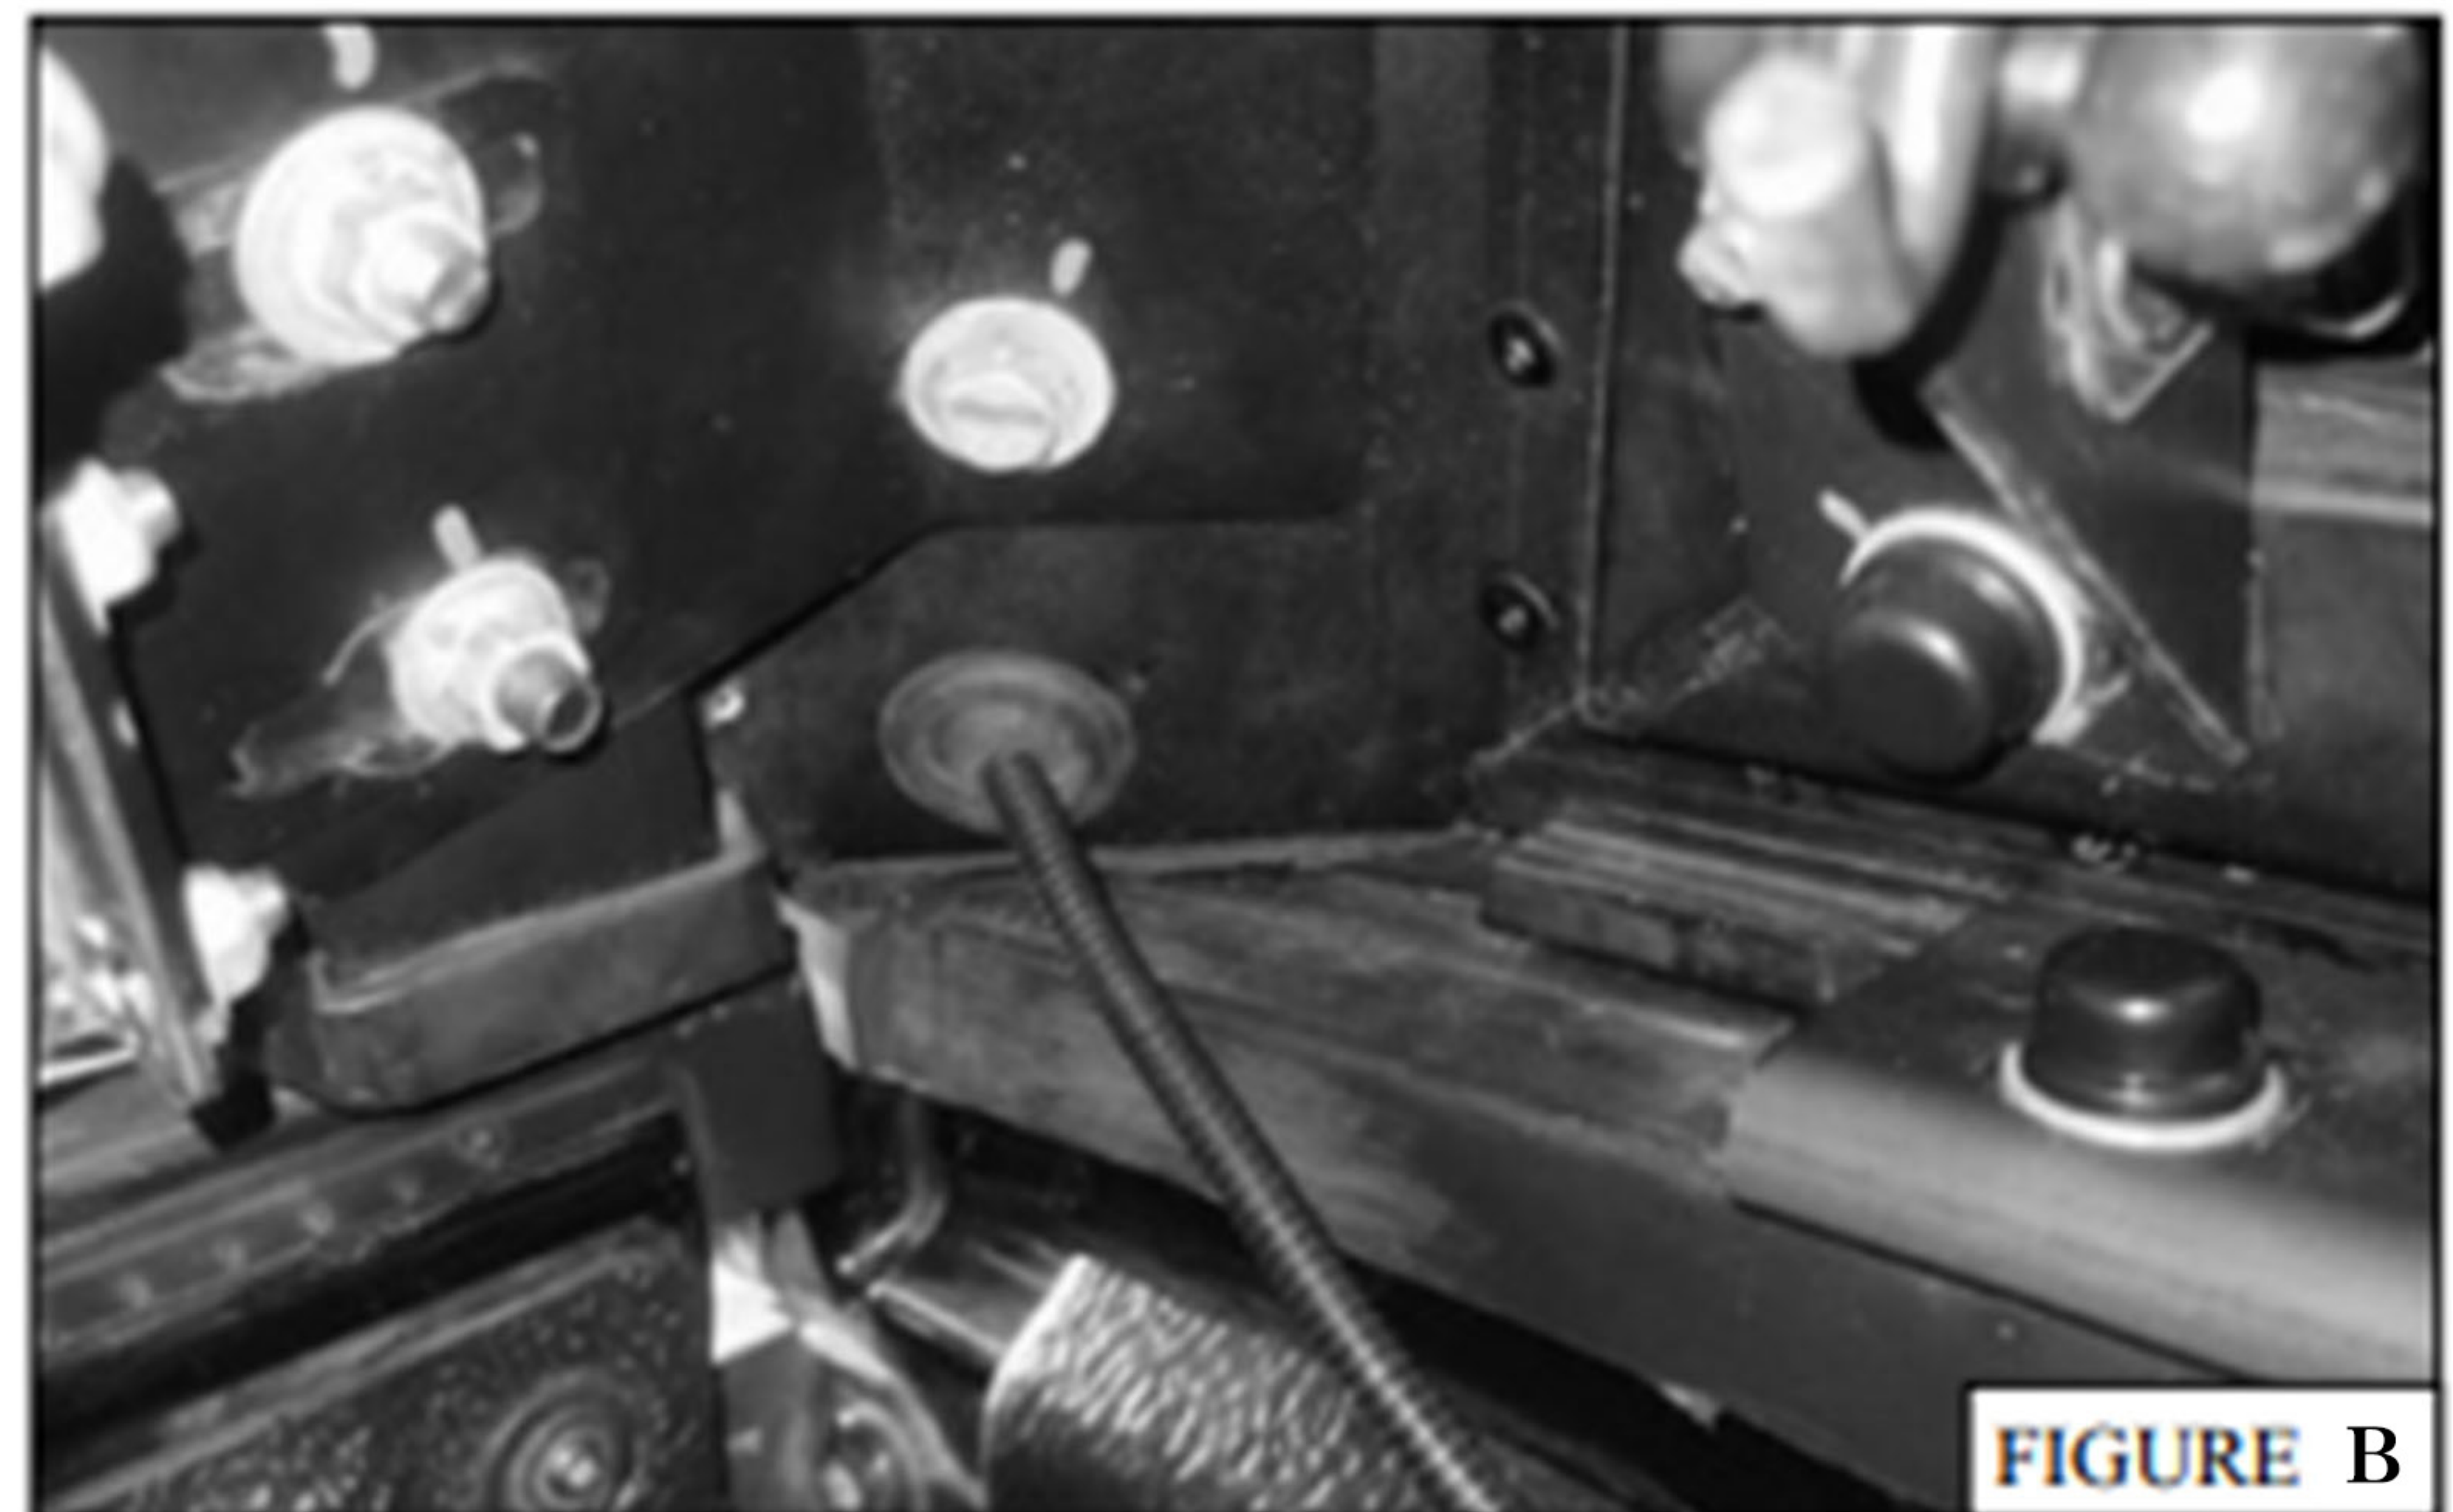


FIGURE B

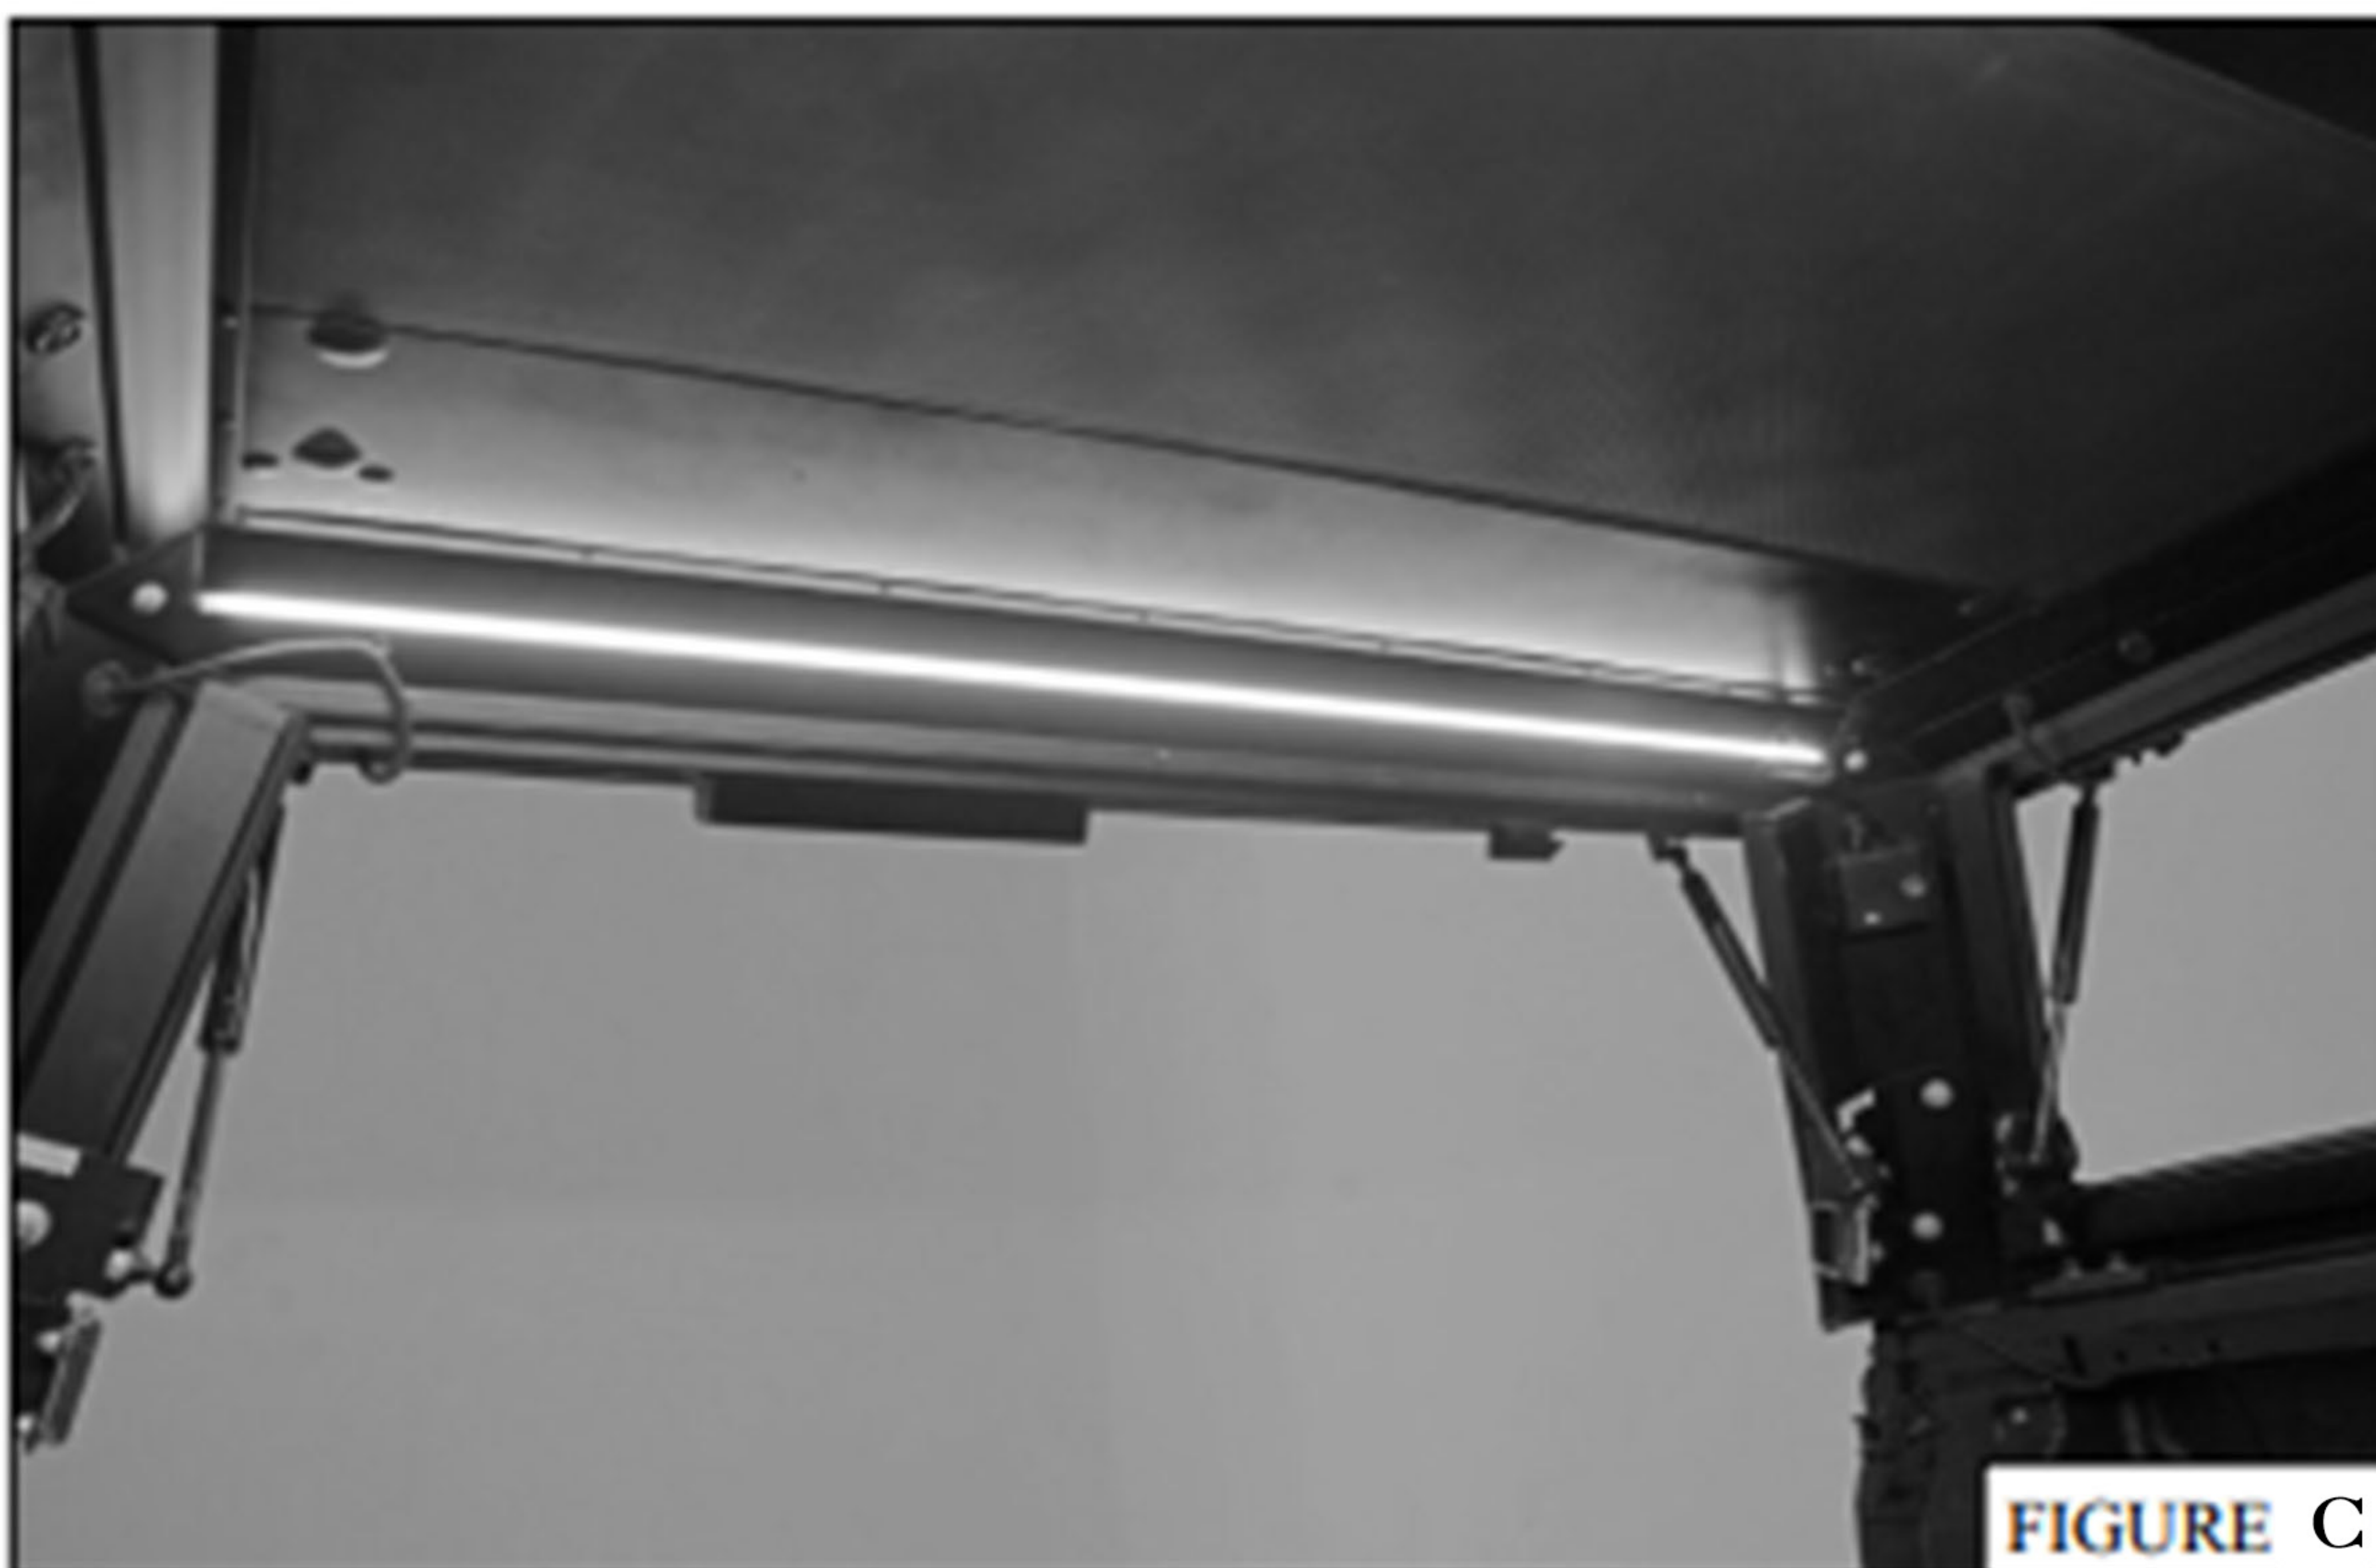


FIGURE C

interior lights wire

